

Instructions for Use

Professional Airbrush Gun SA Type 116

ARTICLE 34116



Read and follow the operating instructions and safety information before using for the first time.

Technical changes reserved!

Due to further developments illustrations, functioning steps and technical data can differ insignificantly.

Updating the documentation

If you have suggestions for improvement or have found any irregularities please contact us.

Airbrush type	116
Nozzle diameter	0,3 ml
Capacity of paint cup	7+10ml
<p><u>Applications/uses:</u></p> <p>Decorative arts, illustrations, photo retouching, hobbies and crafts.</p> <p><u>What can be sprayed:</u></p> <ol style="list-style-type: none"> 1. Thin the airbrush paint accordingly and fill it in the paint cup 2. Hold the airbrush in your hand easily. 3. By pressing the lever handle the airflow is started. Then pull back slowly the lever to accomplish the paint mist effect. 4. The spray forming / casting depends on the distance between the spray nozzle and the working surface. 5. In order to spray fine lines remove the needle cap and bring the airbrush close to the work surface. <p><u>Maintenance:</u></p> <ol style="list-style-type: none"> 6. Empty the paint cup and wash it with water or solvent (thinner). 7. Fill in the paint cup with water or solvent (thinner) and then keep the needle cap (1) shut with your finger and spray. The air flows backwards in the nozzle and removes the remaining paint from the airbrush. Best spray again openly in order to bring fresh solvent (thinner) in the paint way and then again by keeping the needle cap shut rinse back the solvent (thinner). Repeat this procedure several times if necessary. 	

