


## INSTALLATION INSTRUCTIONS

 
1. Prior to installing new faucet ,flush supply lines to remove any accumulated debris.Accumulated debris can damage new faucet.
2. Faucets should be installed by a qualified & experienced person to ensure proper installation.
3. Water supply pressure should not exceed 1.0MPa.  
For best faucet performance,hot&cold supply pressures should be approximately equal.
4. Faucet is for indoor use only. The hot water supply temperature should not exceed 90°C. To avoid damaging faucet,the ambient temperature at the site of installation should be greater than 3°C and less than 90°C.
5. Clean faucet with only water and a soft cloth. Do not use abrasive cleaning pads or harsh/abrasive chemicals,these will damage faucet finish.
6. If water flow decreases over time,remove aerator & rinse out accumulated debris.
7. Use faucet only as directed in instruction manual, do not abuse or misuse faucet.
8. Keep instruction manual and any special tools provided for maintenance & future reference.
9. Always turn water supply OFF before removing existing faucet or disassembling the valve.  
Open faucet handle to ensure complete water shut-off has been accomplished.
10. If faucet will not be used for a long period of time, shut off water supply to faucet.  
Open faucet handle to release pressure.

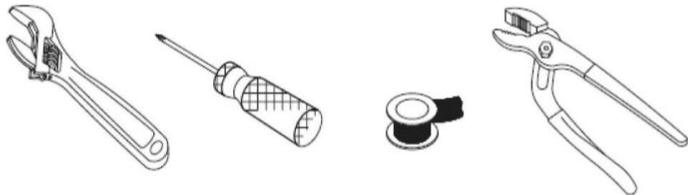

Tools Required



Rubber Bracket Gasket



metal Bracket



Threaded Rod(s)



### Installation methods for

#### Single Lever Mono Basin Mixers (one of below):

- 1 - twin bolt & horse shoe fixing kits,
- 2 - threaded fixing pipe with back nut sleeve,
- 3 - threaded fixing pipe with back nut and two screws kit.

