 

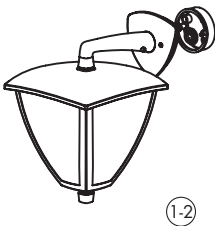
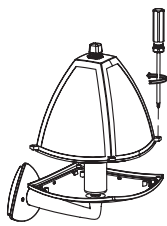
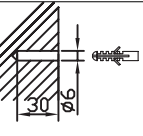
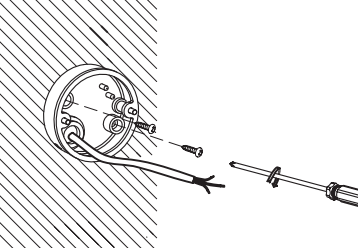
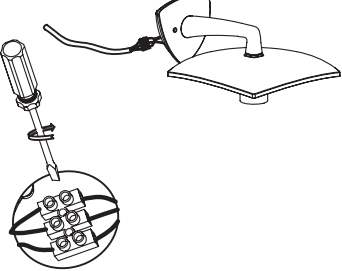
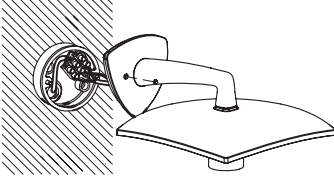
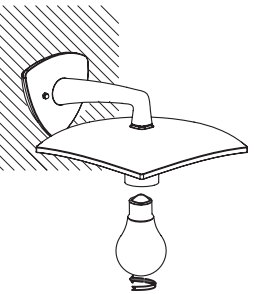
 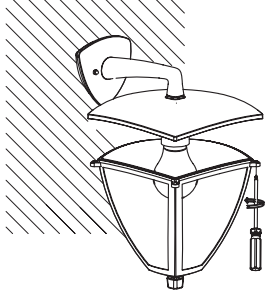



INSTRUCTION MANUAL

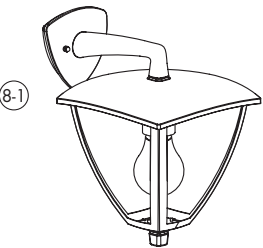

Platar WL Down Dark Grey
96780

<p>1.  (1-1)</p> 	<p>2. </p>	<p>3. </p> 									
<p>4. </p> <p>INCOMING SUPPLY TO FITTING</p> <table border="0"> <tr> <td>LIVE (Brown or Red)</td> <td></td> <td>LIVE</td> </tr> <tr> <td>EATRH (Green & Yellow)</td> <td></td> <td>EATRH</td> </tr> <tr> <td>NEUTRAL (Blue or Black)</td> <td></td> <td>NEUTRAL</td> </tr> </table>	LIVE (Brown or Red)		LIVE	EATRH (Green & Yellow)		EATRH	NEUTRAL (Blue or Black)		NEUTRAL	<p>5. </p>	<p>6. </p>
LIVE (Brown or Red)		LIVE									
EATRH (Green & Yellow)		EATRH									
NEUTRAL (Blue or Black)		NEUTRAL									
<p>7. </p>	<p>8.  (8-2)</p>  (8-1)	<p>Overall Size:</p> 