

- ★ To Raise. Turn The Release-Valve To The Right.
- ★ To Lower. Turn The Release-Valve Slowly To The Left.
- ★ All Pump-parts Are Easily Replaceable.
- ★ To Add Oil. Fully Collapse Jack And Add Oil To Increase Oil-Level Up To Oil-Plug
- ★ Use Only Hydraulic Jack Oil.

CAUTION

- ★ For Lifting Purpose Only Not for