




COSTWAY®

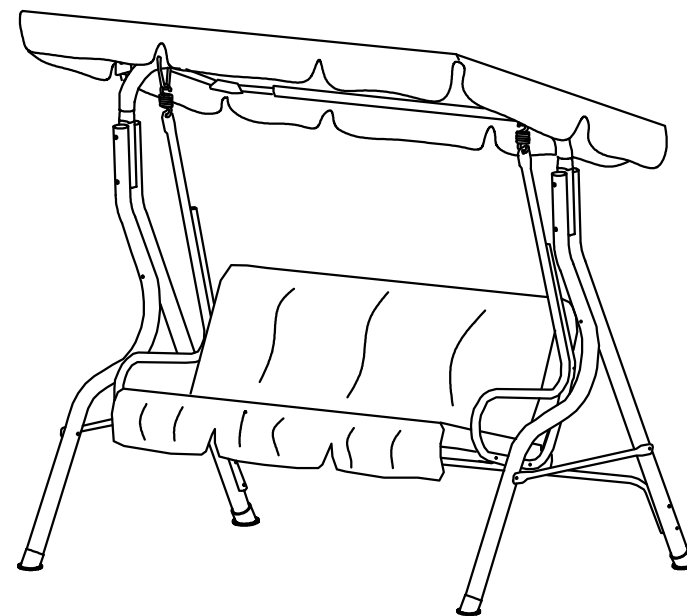

USER'S MANUAL
Canopy Swing Chair
OP3101

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway

Visit us: www.costway.com



Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.




Before You Start


- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Seperate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

 1PCS	 1PCS	 2PCS	 2PCS	 2PCS
 1PCS	 1PCS	 2PCS	 1PCS	 2PCS
 2PCS	 1PCS	 1PCS	 2PCS	 4PCS
 2PCS	 4PCS	 6PCS	 1PCS	 3PCS
 2PCS AD	 2PCS AE	 20PCS AF	 4PCS AG	 20PCS
 4PCS	 4PCS	 2PCS	 4PCS	 1PCS
 4PCS	 4PCS	 2PCS	 6PCS	


①

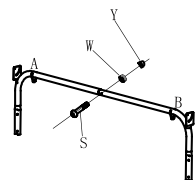



②

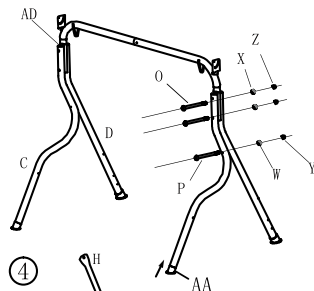


③

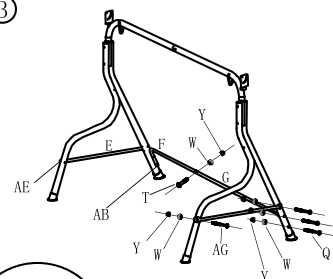



④

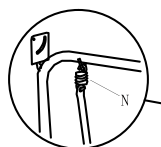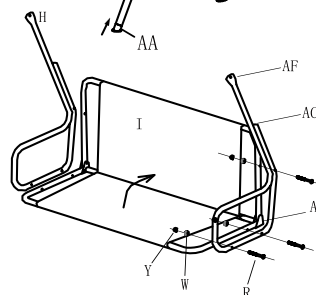


⑤

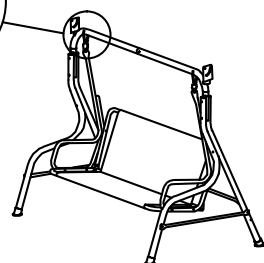

⑥

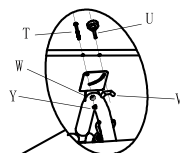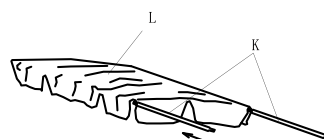

⑦

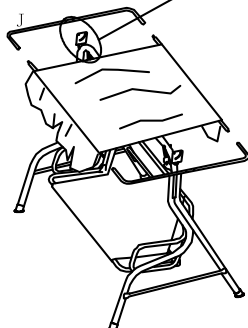

⑧

