 


COSTWAY[®]

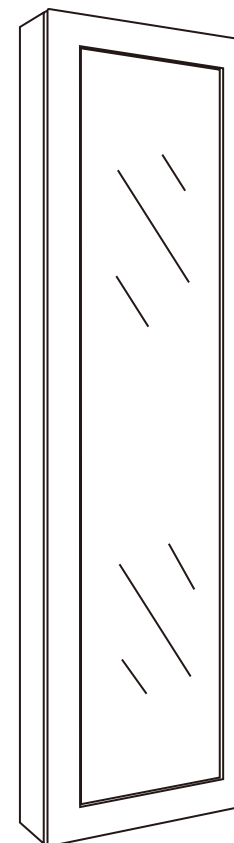

 
USER'S MANUAL
Jewelry Cabinet
HW65736

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.
Replacements for missing or damaged parts will be shipped ASAP!

FLOOR AREA
2MX2M

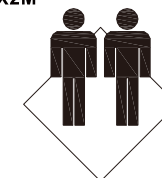

ASSEMBLED BY 2 ADULTS



Follow Costway
Visit us: www.costway.com



 
Contact Us!

Do NOT return this item.


Contact our friendly customer service department for help first.



Before You Start




- ⦿ Read each step carefully before starting. It is very important to ensure each step followed in correct order, otherwise assembly difficulties may occur.
- ⦿ Most of board parts are labeled or stamped on the raw edges. Have a check to make sure all parts are included.
- ⦿ Work in a spacious area, preferably on a carpet close to where the unit will be used.
- ⦿ Keep the handtools close at hand. Do not use power tools to assemble your furniture. They may scratch or damage the parts.

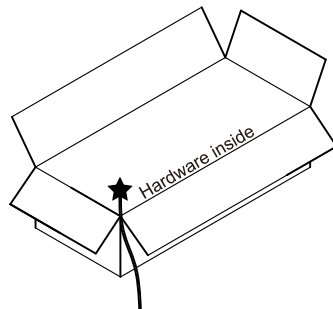 

Board Identification

 
Not actual size

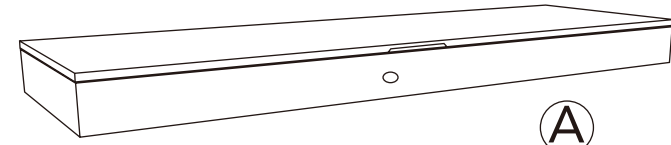

Cabinet x1


Hardware List

 Actual size

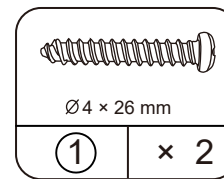


① × 2

 SELF TAPPING
SCREW

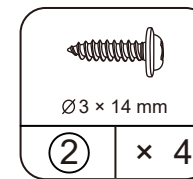


② × 4

 SCREW

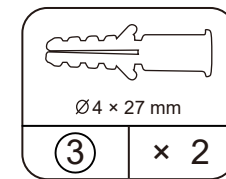


③ × 2

 EXPANSION SCREW

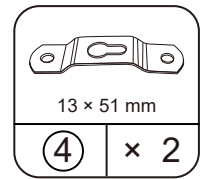


④ × 2

 HANGING HOOK

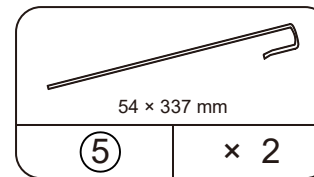


⑤ × 2

 HOOK

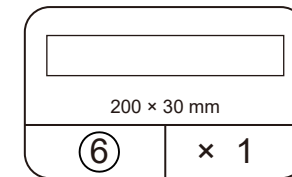

⑥ × 1

 DOUBLE SIDED TAPE

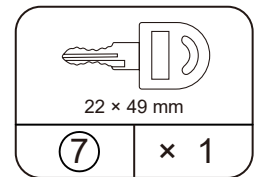


⑦ × 1


KEY

PRODUCT ASSEMBLY

 
Wall mount

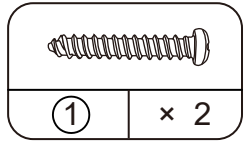


SELF TAPPING SCREW

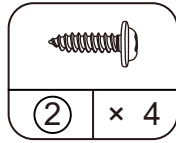 


SCREW

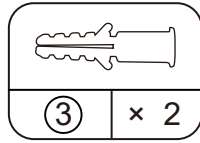 


EXPANSION PIPE

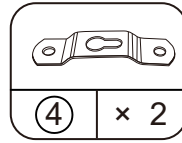 

HANGING PANEL

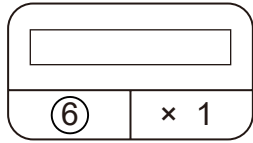 


DOUBLE SIDED TAPE

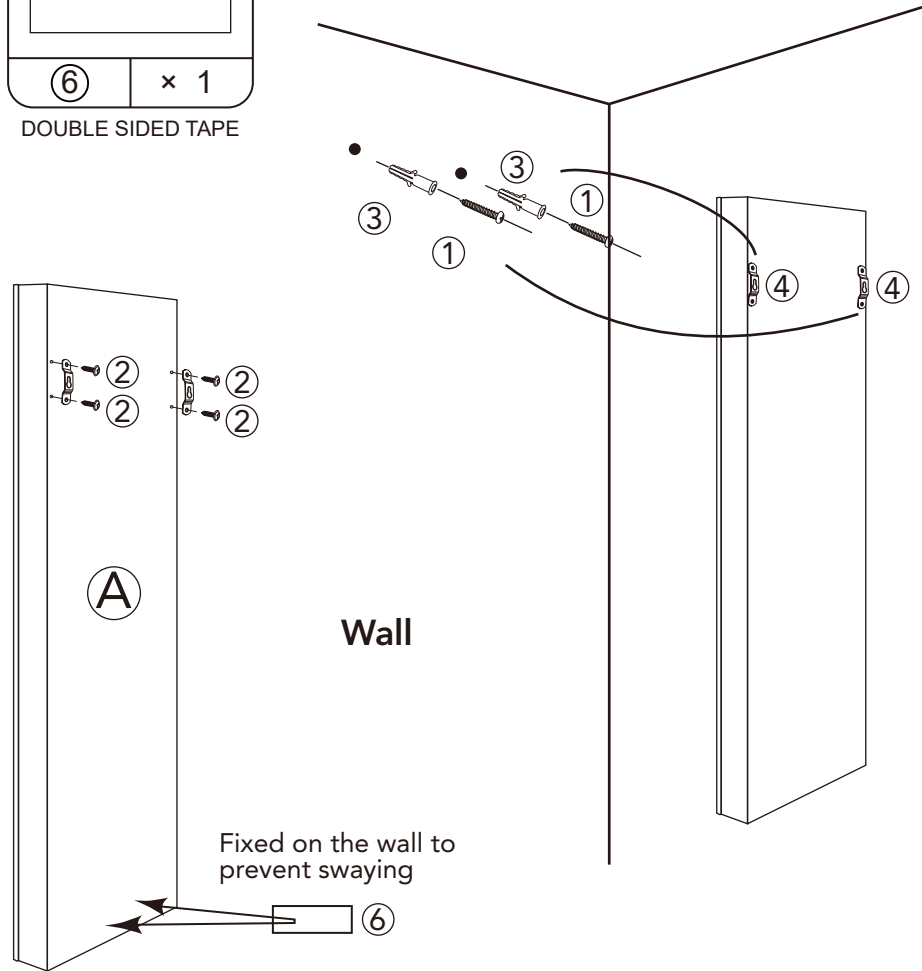 


PRODUCT ASSEMBLY

 
Hand over the door

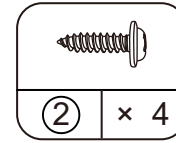

SCREW


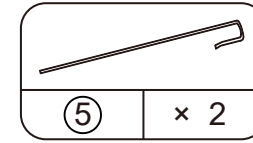 


HOOK

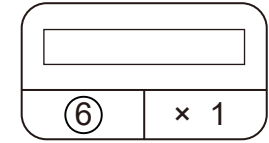 


DOUBLE SIDED TAPE

  Open the jewellery cabinet door

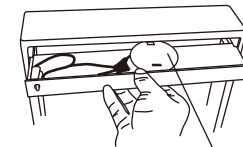
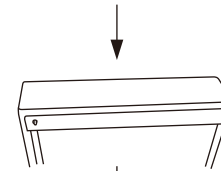


Put the battery here

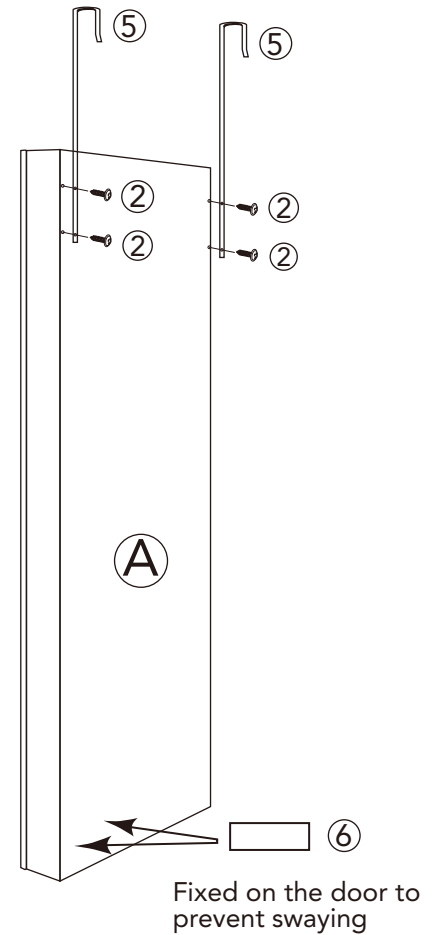 


Wall mount

  Hand over the door

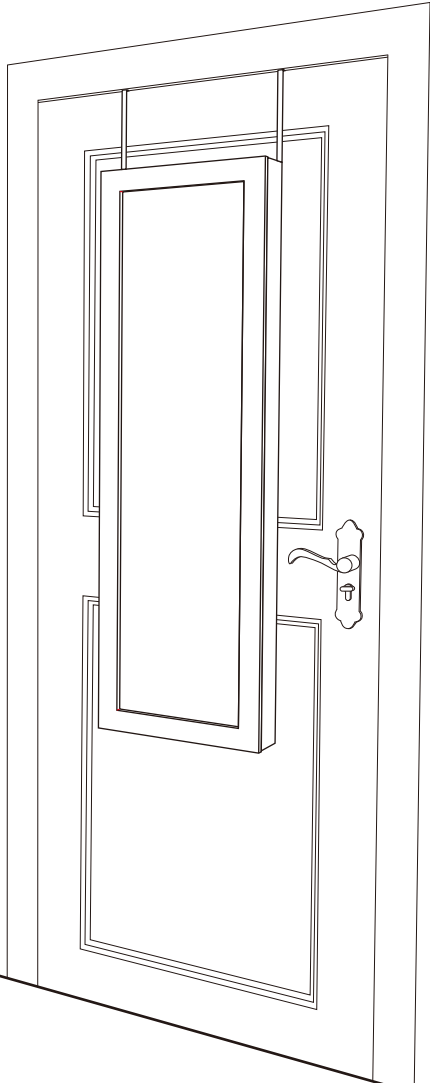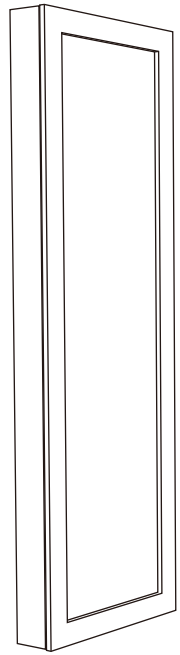

Maximum Loads

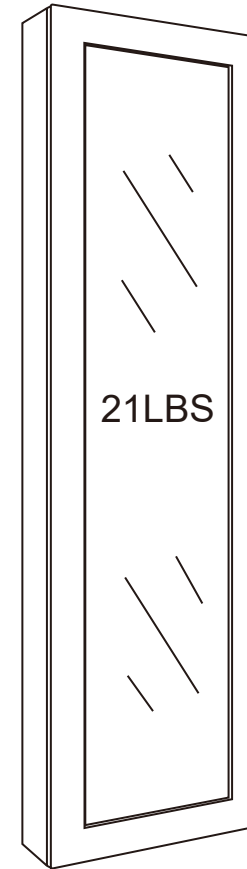 

⚠ WARNING

This item is only suitable within the specified maximum load-bearing. Heavier loads than the indicated load capacity may cause instability, resulting in possible injuries.

Care and Maintenance

Use a soft, clean cloth that will not scratch the surface when dusting.

Use of furniture polish is not necessary.

Should you choose to use polish, test first in an inconspicuous area.

Using solvents of any kind on your furniture may damage the finish.

Never use water to clean your furniture as it may cause damage to the finish.

Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.

Check bolts/screws periodically and tighten them if necessary.

Further advice about wood furniture care

It is best to keep your furniture in a climate-controlled environment.

Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood.

It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase.

Following these important and helpful tips will enhance your furniture as it ages.