So befestigen Sie die Füße

Das Gerät wird mit abmontierten Füßen geliefert, um Schäden während dem Transort zu vermeiden.
Bringen Sie die Füße nach dem Auspacken wie folgt an:

Schritt 1	Schritt 2
Nehmen Sie die Füße aus der Verpackung und richten Sie sie an den Löchern an der Unterseite des Gerätes aus. Wiederholen Sie diesen Schritt für die anderen 3 Füße.	Schrauben Sie die Füße mit den mitgelieferten Schrauben und einem Schraubenzieher fest. Wiederholen Sie diesen Schritt für die anderen 3 Füße.
Schritt 3	Schritt 4
Das Bild zeigt, wie der Fuß korrekt installiert aussieht.	So sieht der Kamin aus, nachdem alle 4 Füße installiert wurden.

5HLQLJXQJ XQG 3ÀHJH

WARNUNG: VOR ALLEN WARTUNGS- ODER REINIGUNGSARBEITEN ZIEHEN SIE DEN NETZ -TEILSTECKER AUS DER STECKDOSE RAUS ODER TRENNEN SIE DEN KAMIN VOM NETZ.

Reinigen Sie mit einem weichen Staubtuch, verwenden Sie dabei keine aggressiven Reinigungsmittel.
Die Scheibe soll vorsichtig mit einem weichen Lappen gereinigt werden. Verwenden Sie KEINEN handelsüblichen Glasreiniger.

Sicherheitshinweise

Diese Bedienungsanleitung dient dazu, Sie mit der Funktionsweise dieses Produktes vertraut zu machen. Bewahren Sie diese Anleitung daher stets gut auf, damit Sie jederzeit darauf zugreifen können.
Sie erhalten bei Kauf dieses Produktes zwei Jahre Gewährleistung auf Defekt bei sachgemäßem Gebrauch.
Bitte verwenden Sie das Produkt nur in seiner bestimmungsgemäßen Art und Weise. Eine anderweitige Verwendung führt eventuell zu Beschädigungen am Produkt oder in der Umgebung des Produktes.
Ein Umbauen oder Verändern des Produktes beeinträchtigt die Produktsicherheit. Achtung Verletzungsgefahr!
Öffnen Sie das Produkt niemals eigenmächtig und führen Sie Reparaturen nie selber aus!
Behandeln Sie das Produkt sorgfältig. Es kann durch Stöße, Schläge oder den Fall aus bereits geringer Höhe beschädigt werden.
Halten Sie das Produkt fern von Feuchtigkeit und extremer Hitze.
Reparaturen am Gerät sollten nur von einer autorisierten Fachwerkstatt durchgeführt werden.
Öffnen Sie in keinem Fall das Gerät.
Falscher Zusammenbau führt möglicherweise zu Fehlfunktionen oder dem Totalausfall.
Das Gerät sollte vor jeglichen Feuchtigkeit und direkter Sonneneinstrahlung geschützt werden.
Das Gerät bitte nicht mit Reinigungsmitteln reinigen.
Verwenden Sie zur Reinigung nur ein trockenes (Mikrofaser) Tuch.
Schließen Sie das Gerät nur an die dafür vorgesehene Netzspannung.
Schließen Sie das Gerät in keinem Fall an andere Spannungen als vorgesehen an.

Hinweise zur Entsorgung

%H¿QGHW VLFK GLH OLQNH $EEILOGXQJ GXUFKJHVWULFKHQH
Produkt, gilt die Europäsche Richtlinie 2012/19/EU. Diese Produkte dürfen nicht mit dem normalen Hausmüll entsorgt werden. Informieren Sie sich über die örtlichen Regelungen zur getrennten Sammlung elektrischer und elektronischer Geräschaften. Richten Sie sich nach den örtlichen Regelungen und entsorgen Sie Altgeräte nicht über den Hausmüll. Durch die regelkonforme Entsorgung der Altgeräte werden Umwelt und die Gesundheit ihrer Mitmenschen vor möglichen negativen Konsequenzen geschützt. Materialrecycling hilft, den Verbrauch von Rohstoffen zu verringern.

Das Produkt enthät Batterien, die der Europäschen Richtlinie 2006/66/EG unterliegen und nicht mit dem normalen Hausmüll entsorgt werden dürfen. Bitte informieren Sie sich über die örtlichen Bestimmungen zu gesonderten Entsorgung von Batterien. Durch regelkonforme Entsorgung schützen Sie die Umwelt und die Gesundheit ihrer Mitmenschen vor negativen Konsequenzen.

Konformitäserklärung

Hersteller: Chal-Tec GmbH, Wallstraße 16, 10179 Berlin, Deutschland.

Dieses Produkt entspricht den folgenden Europäschen Richtlinien:
2014/30/EU (EMV)
2014/35/EU (LVD)
2011/65/EU (RoHS)
2009/125/EG (ErP)

Caution

'RQRW XVH WKH DSSOLDQFH XQWLO LW LV VHFXUHO\ ¿[HG DV GHVFU
Check that the voltage indicates on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
, WKVHX SSFORULGG D P DJHLGWX VEWHU HSODEVEGX DOLH¿HGU GWRYRDGD]DUG
7KH ¿UHSODFH KHDWHU PXVW QRW EH SRVLWLRQHG GLUHFWO\ XQGH
.HHS IXUQLWXUH FXUWDLQV DQG RWKHU ÀDPPDEOH PDWHULDO DW O
Do not leave the appliance unattended during use.
Do not leave the appliance unattended whilst connected to the mains supply.
Keep out of reach of children and do not allow them to operate this appliance.
This appliance is intended for household use only and should not be used for industrial purposes.
Do not operate this appliance after a malfunction or after being dropped or damaged in any way.
5HSDLUHVOWRWULFDO DSSOLDQFHV VKRXOG RQO\ EH SHUIRUPHG E\ D
Improper repairs may place user at serious risk.
Do not run the mains cable under carpets, rugs, etc.
Do not allow the mains cable to hang over sharp edges or come in contact with hot surfaces.

WARNING: In order to avoid overheating, do not cover the heater.

Do not use this heater with a programmer, timer, separate remote control system or any other GHYLFHWKDWVZLWFKHVLWFKHVWKHDWRRQDXWRPDWLFDOOLVHQLVWKHUHLVDULVNLILWLVXVHGRU SRVLWLRQHG
positioned incorrectly.
Never immerse the product in water or any other liquid for any reasons.
Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
Do not use the appliance outdoors.
Do not use if you have wet hands.
Never use the appliance on or near hot surfaces.
Do not operate with a damaged cord.
Before cleaning the appliance, make sure it is unplugged from the power and that it is completely cooled.
Do not clean the appliance with abrasive chemicals.
Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user or damage to the appliance.
This appliance is not intended for use by persons (including children) with reduced Physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.
Do not lift the appliance by the front panel.
The heater must not be located immediately below a socket outlet.
Keep top of heater at least 1000mm away from ceiling or other objects for optimum heat ventilation.

WARNING: This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

Children of less than 3 years should be kept away unless continuously supervised.
Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION : Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

NOTE: Regarding the instructions for replacing bulb, refer to page 9.

Product Data Sheet

0 R G H O L G H Q W L ¿ H U	10012128, 10031526					
Item	Symbol	Value	Unit		Item	Unit
Heat output					Type of heat input, for electric storage local space heaters only	
Nominal heat output	Pnom	1,7	kW		manual heat charge control, with integrated thermostat	N/A
Minimum heat output (indicative)	Pmin	0,85	kW		manual heat charge control with room and/or outdoor temperature feedback	N/A
Maximum continuous heat output	Pmax,c	1,7	kW		electronic heat charge control with room and/or outdoor temperature feedback	N/A
Auxiliary electricity consumption					fan assisted heat output	N/A
At nominal heat output	elmax	0,0	kW		Type of heat output/room temperature control	
At minimum heat output	elmin	0,0	kW		single stage heat output and no room temperature control	no
In standby mode	elSB	0,0	kW		Two or more manual stages, no room temperature control	no
					with mechanic thermostat room temperature control	yes
					with electronic room temperature control	no
					electronic room temperature control plus day timer	no
					electronic room temperature control plus week timer	no
					Other control options	
					room temperature control, with presence detection	no
					room temperature control, with open window detection	no
					with distance control option	no
					with adaptive start control	no
					with working time limitation	no
					with black bulb sensor	no
Contact details	Chal-Tec GmbH, Wallstraße 16, 10179, Berlin, Germany					

Description

Your electrical stove ensures you a permanent comfortable heat and provides the complete pleasure of wood stove without any inconvenience.

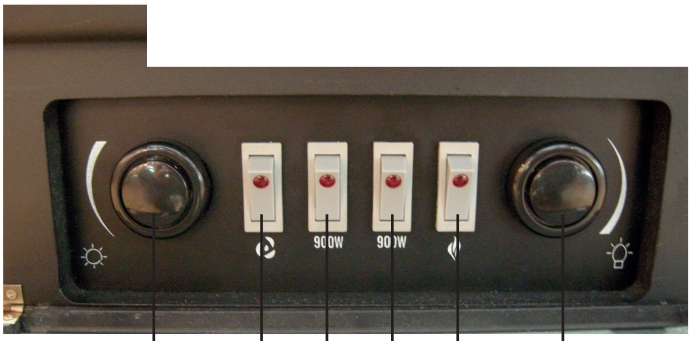

1

3 4a 4b 4c 4d 2

1) Control Panel Cover
2) Fire Adjustable Switch
3) Thermostat
4) Switches
   a. Fan (without heating)
   b. Heat 900W
   c. Heat 900W
   d. Fire

Operating Instructions

Insert Plug Into Socket

Functions

Remove the control panel cover(1)
Select the desired function:
- Fire (4d)
- Fan (4a) (without heating)
- Half power 900w (4a + 4b)
- Full power 1800w (4a + 4b + 4c)
- Heat and Fire (4a + 4b + 4c + 4d)

Fan function is necessary to activate heat functions. Without fan the heating can not run.
$ G M X V W O L J K W R I ¿ U H E \ U R W D W L Q J W K H ¿ U H D G M X V W D E O H V Z L W F K
To adjust the permanent temperature:
- Turn the thermostat (3) clockwise to the biggest point.
- When the room temperature goes up to be comfortable then turn the switch (3) in an anticlockwise to break point and keep the button position.
- The function can keep necessary room temperature and also save energy.

Light exchange (see following picture)

Loosen the three screws at the front of log .
Lift up the log decoration. Two bulbs are located under fuel bed.
Replace the bulbs with a 25W type
To reassemble, follow previous instructions in reverse order.

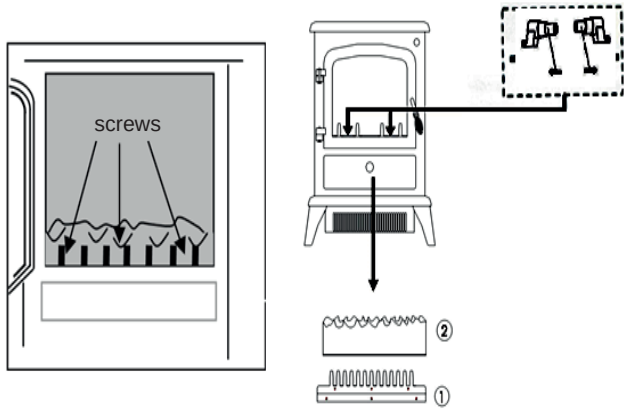

Maintenance

Before cleaning or maintenance operation, switch off and unplug the appliance. Ensure it is perfectly cooled.
To remove the dust, wipe the appliance with a cloth
Never use abrasives or detergents

Fitting the Feet

This stove is supplied with the feed removed in order to prevent damage during transportation. To ¿WWLQJ WKH IHFW SOHDVH IROORZ WKHVH LQVWUXFWLRQV

Step 1	Step 2
	
Remove leg from the bag and locate and line up hole in the leg with holes in the underside of the stove body. Repeat the above for the other three legs.	With use of a screwdriver, secure leg with the three screws provided (The Screw is with the manual). Repeat the above for the other three legs.
Step 3	Step 4
	
Tbis is how the leg looks when attached correctly.	This is how the stove will look when all four legs are in place.