# 4mm SECTION FOLDING BATH SCREEN GUIDE



# **General Information**

Please inspect this product upon delivery. Any missing parts or manufacturing defects must be reported immediately to the supplier. Damage or defects reported later will not be accepted. TAKE CARE WHEN HANDLING GLASS PARTS-AVOID HEAVY CONTACT BETWEEN THE GLASS EDGES AND ANY HARD SURFACE. Glass breakage claims will not be accepted after the product has been unpacked.

## **TOOLS REQUIRED**


DESCRIPTION	PART IMAGE
Tape measure	
Spirit level	
Pencil	
Ø6mm Drill bit	
Ø3mm Drill bit	

DESCRIPTION	PART IMAGE
Drill	
Flat-head Screwdriver	
Cross head Screwdriver	PZ1
Mallet	
Silicone Sealant	




This product is heavy and may require two people to install.

## **ASSEMBLY INSTRUCTIONS - DRAWING**

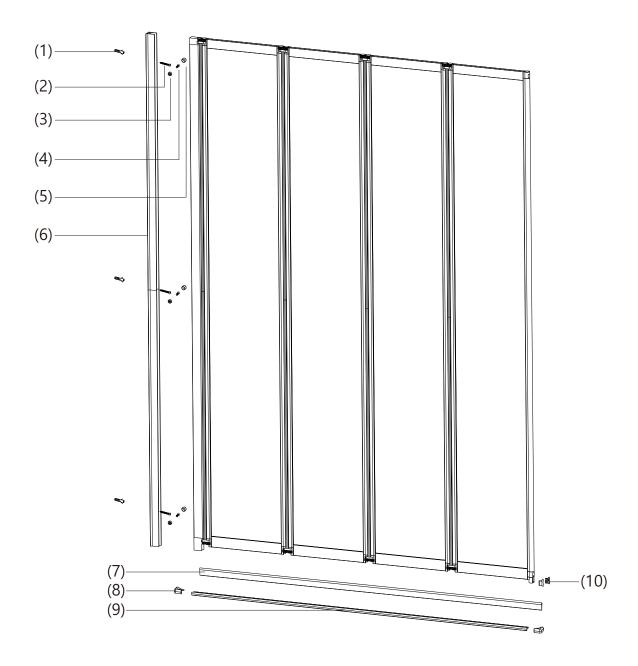


- (1) 3x Wall Plugs
- (2) 3x Screws 4x30
- (3) 3x Screws Clips
- (4) 3x Screws 4x12
- (5) 3x Screw Cover Caps
- (6) 1x Wall Profile
- (7) 1x Bottom Seal
- (8) 2x Drip Strip End Caps L/R
- (9) 1x Drip Strip
- (10) 2x Bottom Caps L/R


Step 1 DRILLING WALL PROFILE TO THE WALL

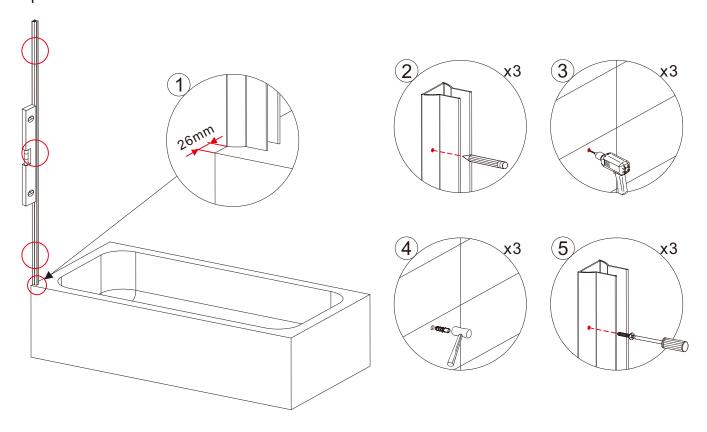


Step 2

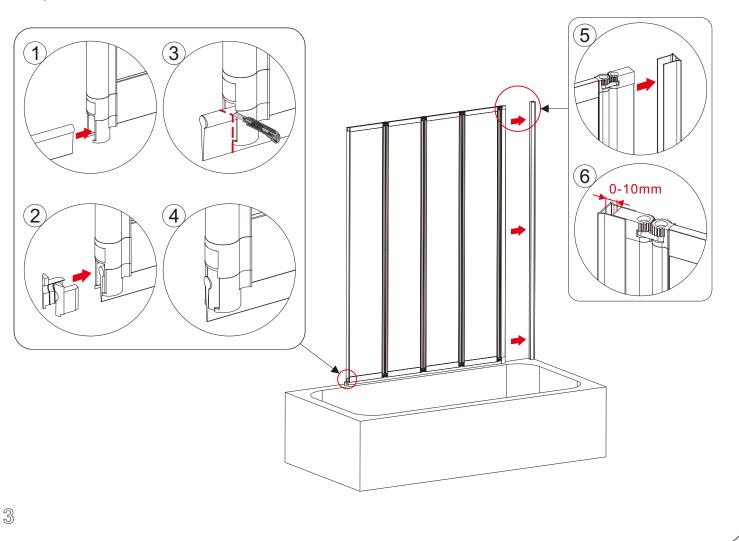


Step 3

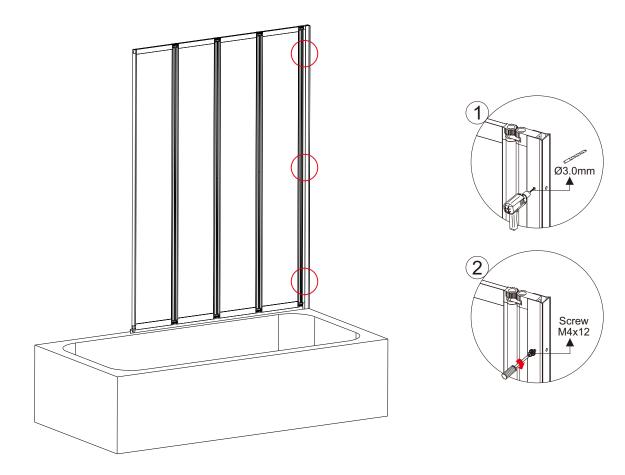

Step 4

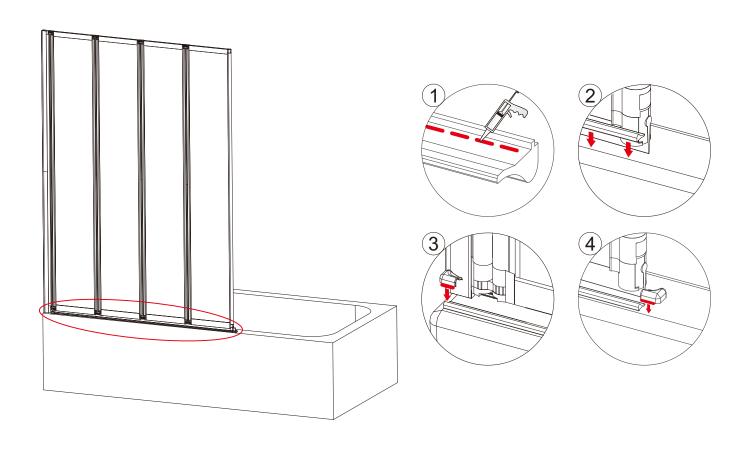

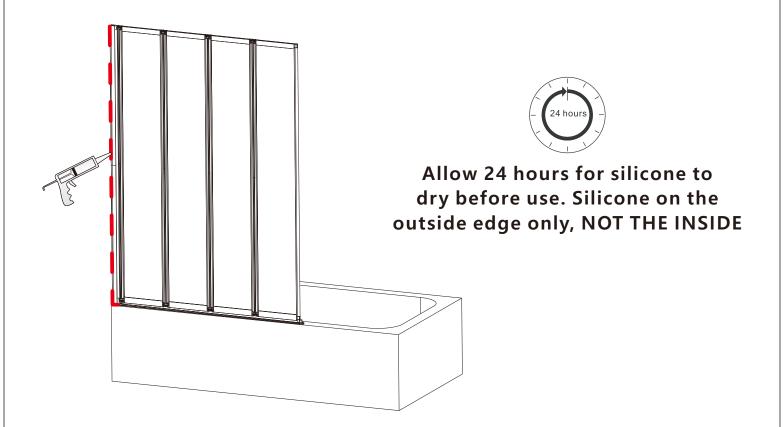

#### **Aftercare instructions**

Regularly clean your shower product with warm soapy water to prevent lime scale build up. DO NOT use abrasive cleaning fluids or materials, or strong chemical cleaners as this will damage the product surface.

## **Check out our full range of Shower Enclosures**

**Quadrant Shower Enclosures** 

**Corner Entry Shower Enclosures** 

Walk in Shower Enclosures

**Sliding Shower Doors** 

**Bifold Shower Doors** 

**Pivot Shower Doors** 

**Hinged Shower Doors** 

**Shower Screens** 

### **From Top Brands**

**Coram Shower Enclosures** 

Mira Shower Enclosures

**Hydrolux Shower Enclosures** 

**Diamond Shower Enclosures** 

## With quality shower trays to match your enclosure

**Square Shower Trays** 

**Rectangular Shower Trays** 

**Quadrant Shower Trays** 

**Coram Shower Trays** 

Mira Flight Shower Trays

