


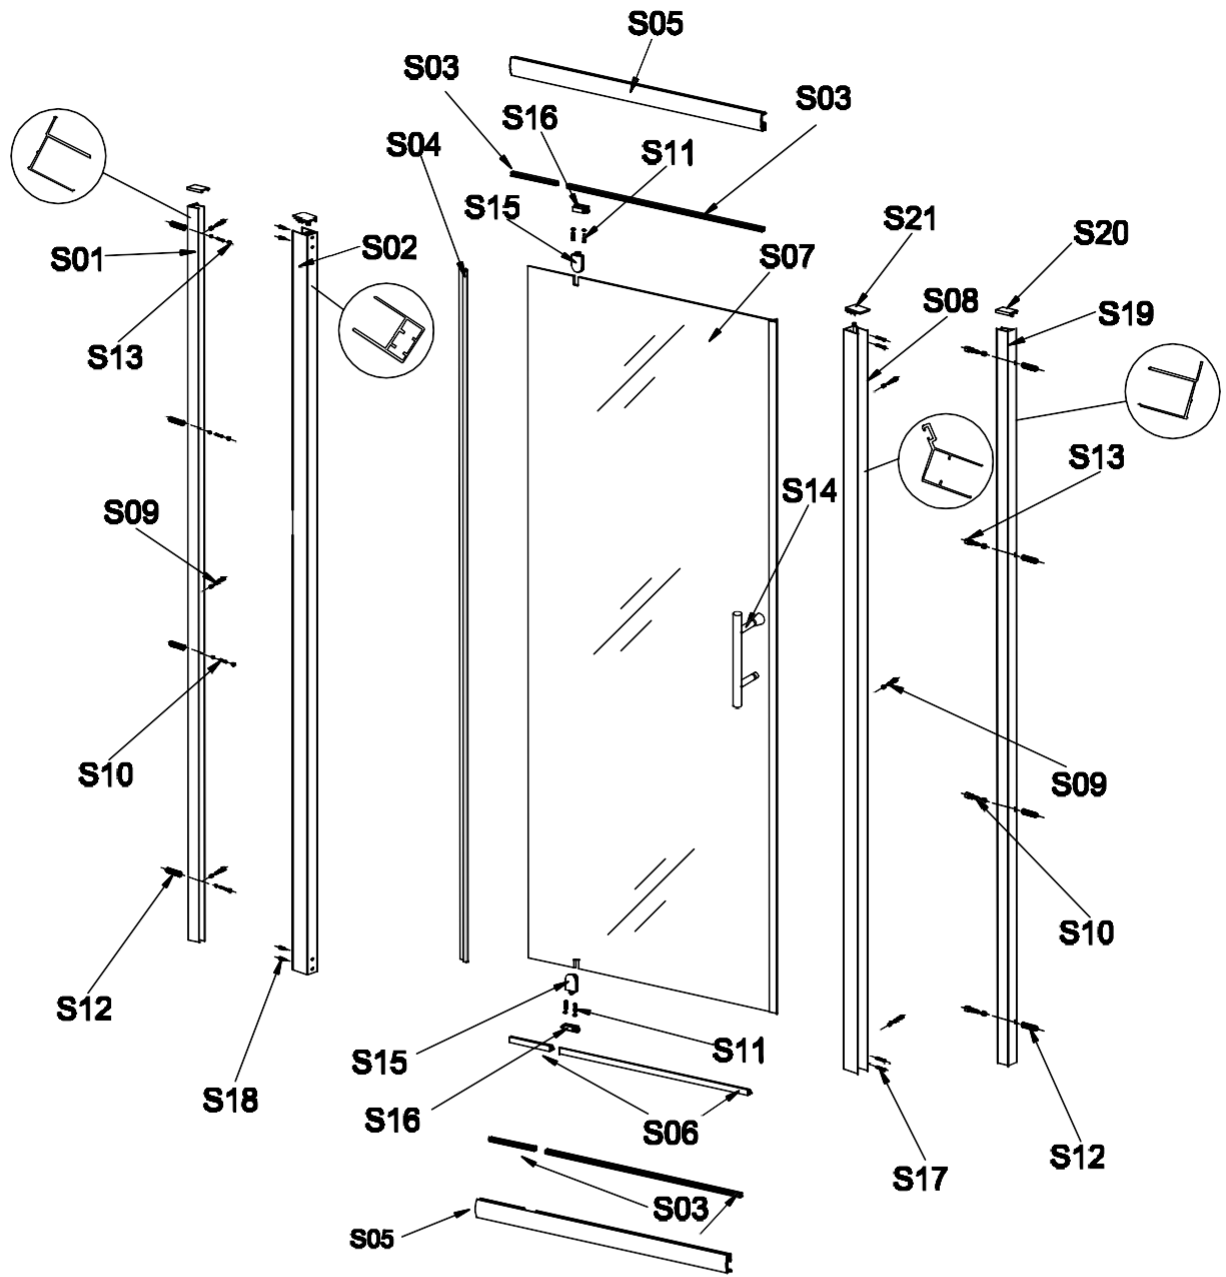
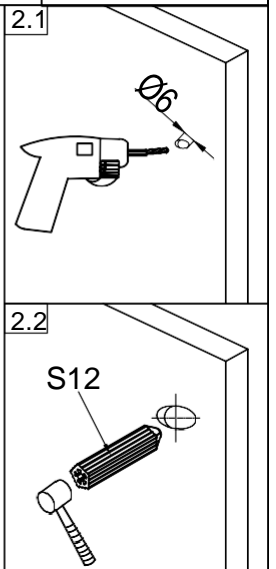
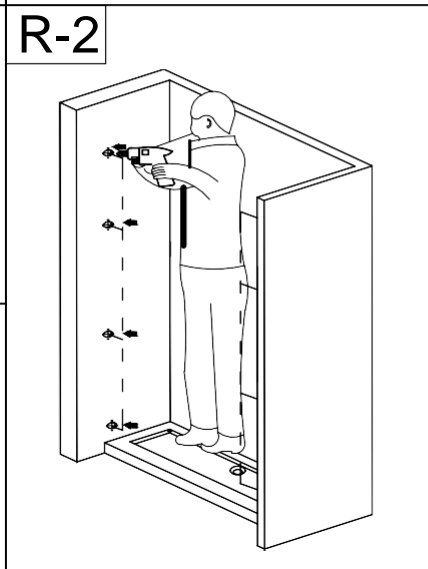
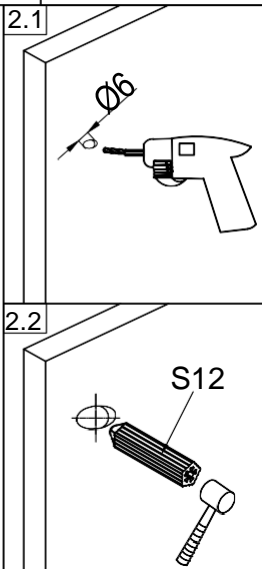
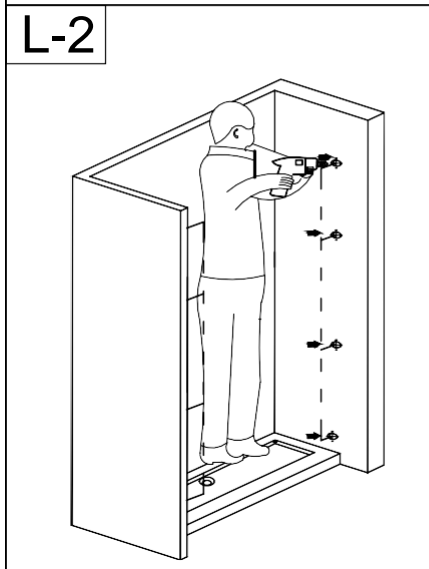
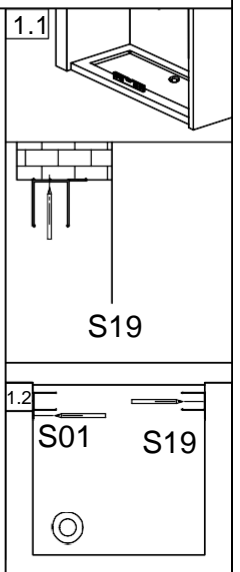
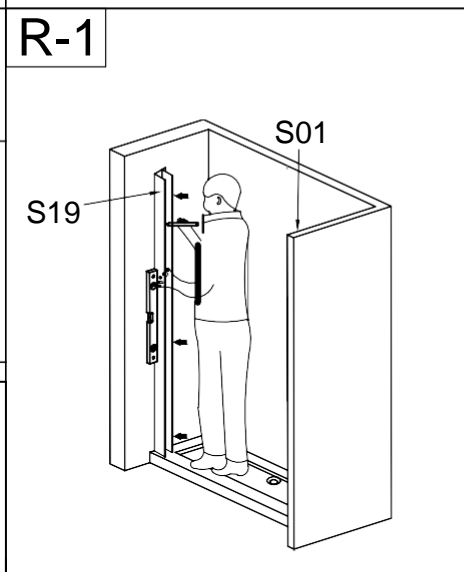
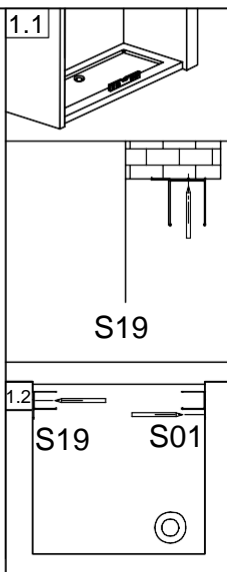
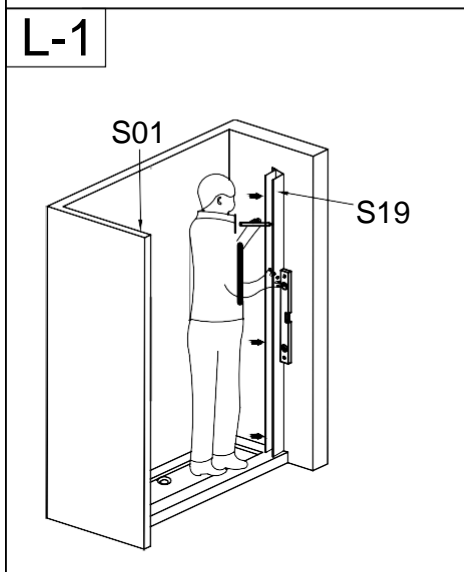
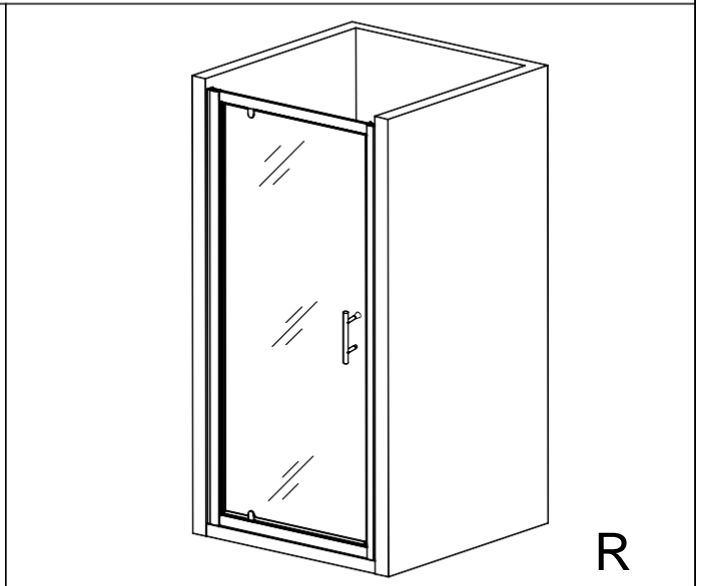
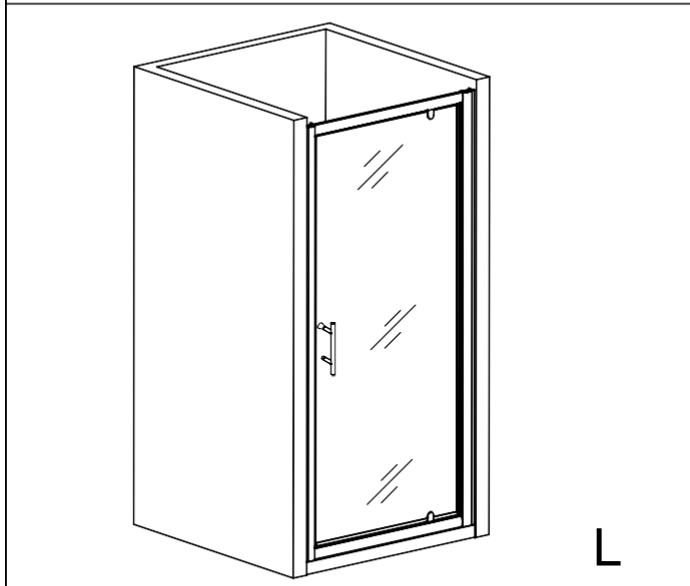
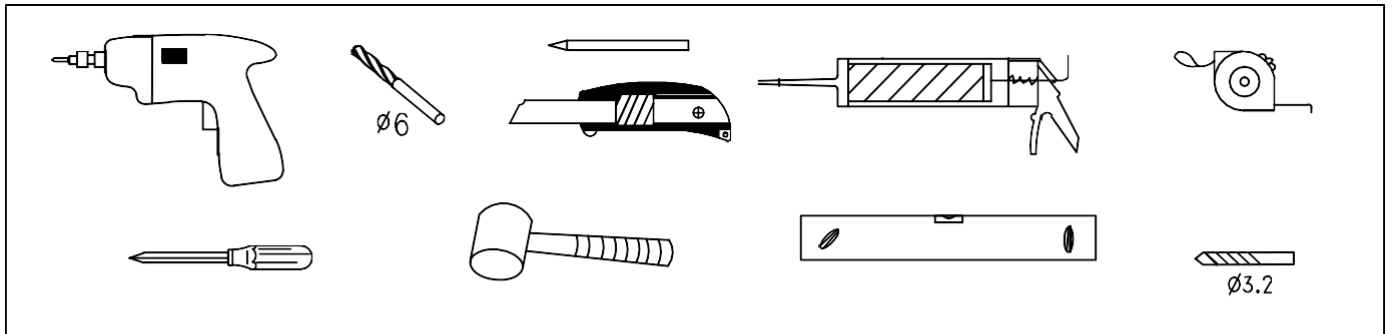








FPD Series

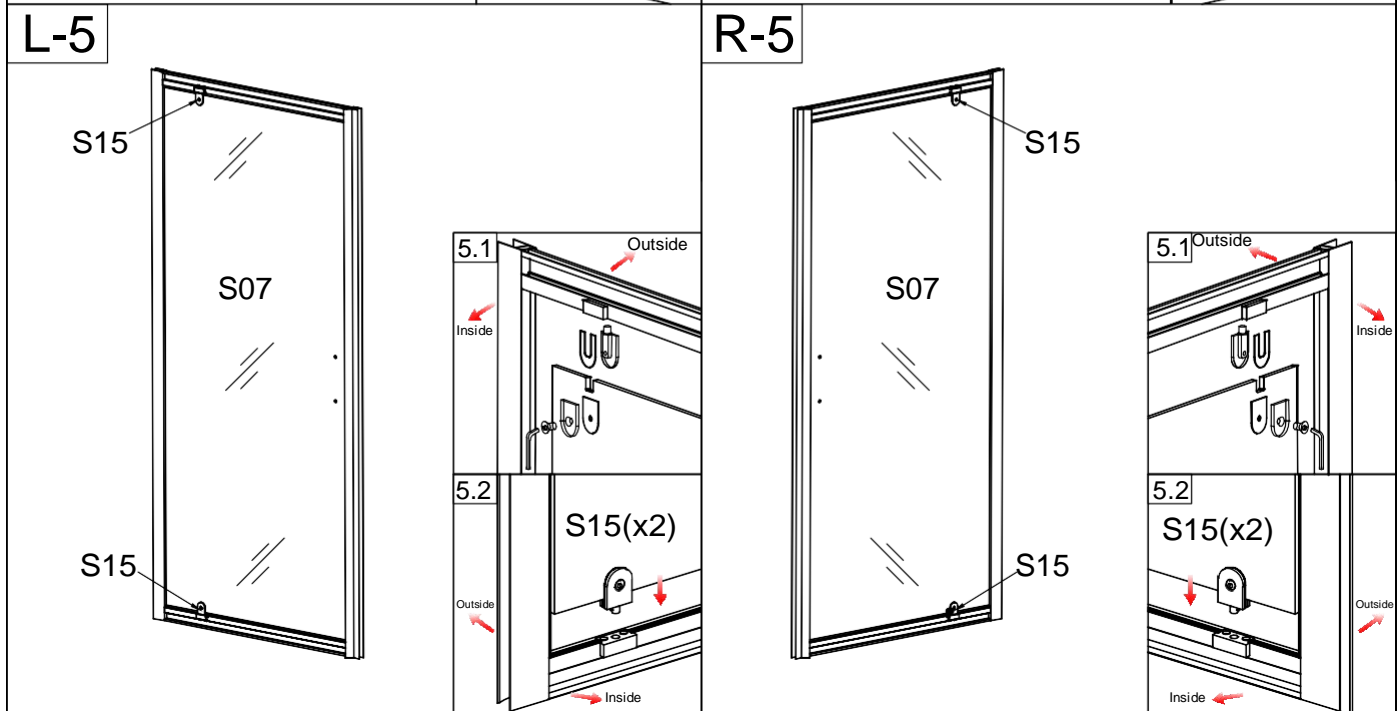




| | | | | | | |
|--|--|--|--|------------------------------|-----------------------------|--|
| <p>S01 the hole on here</p> <p>x1</p> | <p>S02</p> <p>x1</p> | <p>S03</p> <p>x3</p> | <p>S04</p> <p>x1</p> | <p>S05</p> <p>x2</p> | <p>S16</p> <p>x2</p> | <p>S15</p> <p>x2</p> |
| <p>S11</p> <p>16 M4 x4</p> | <p>S08</p> <p>x1</p> | <p>S14</p> <p>x1</p> | <p>S09</p> <p>10 ST4 x6</p> | <p>S13</p> <p>x14</p> | <p>S12</p> <p>x8</p> | <p>S18</p> <p>30 ST4 x4</p> |
| <p>S06</p> <p>x1</p> | <p>S10</p> <p>30 ST4 x8</p> | <p>S17</p> <p>20 ST4 x4</p> | <p>S19 the hole in here</p> <p>x1</p> | <p>S20</p> <p>x2</p> | <p>S21</p> <p>x2</p> | |

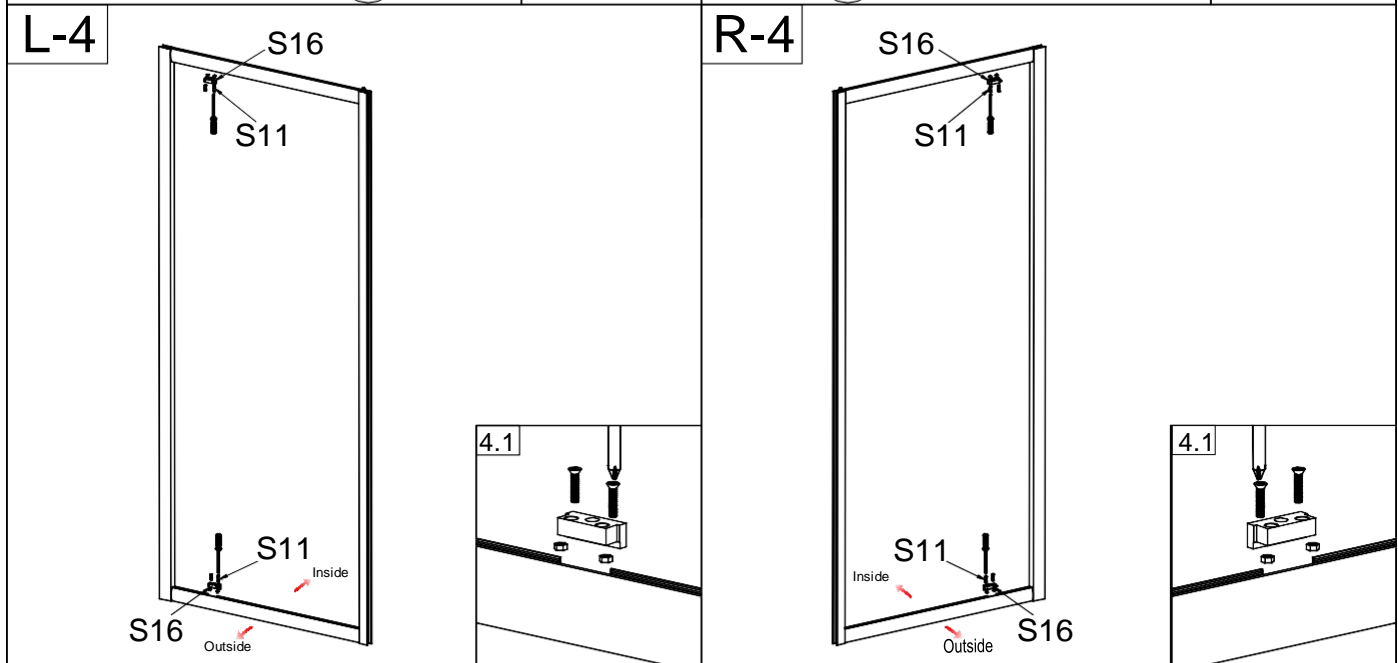



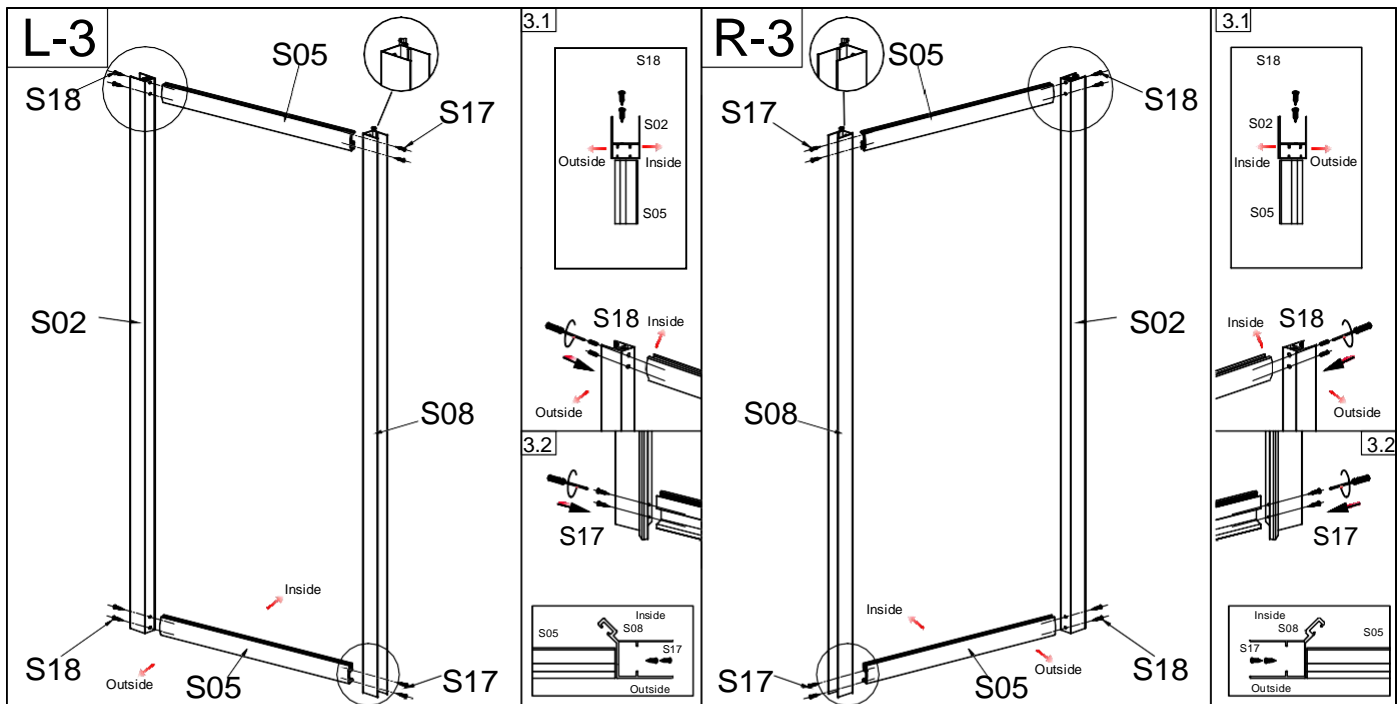


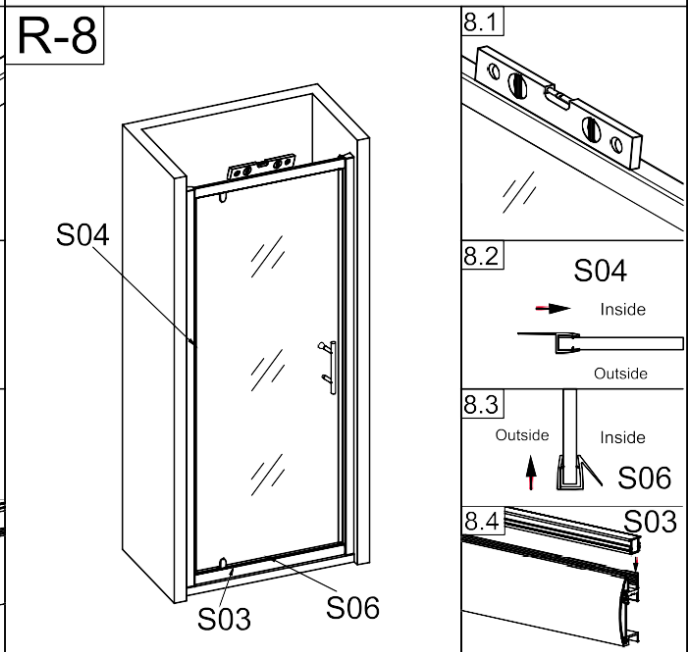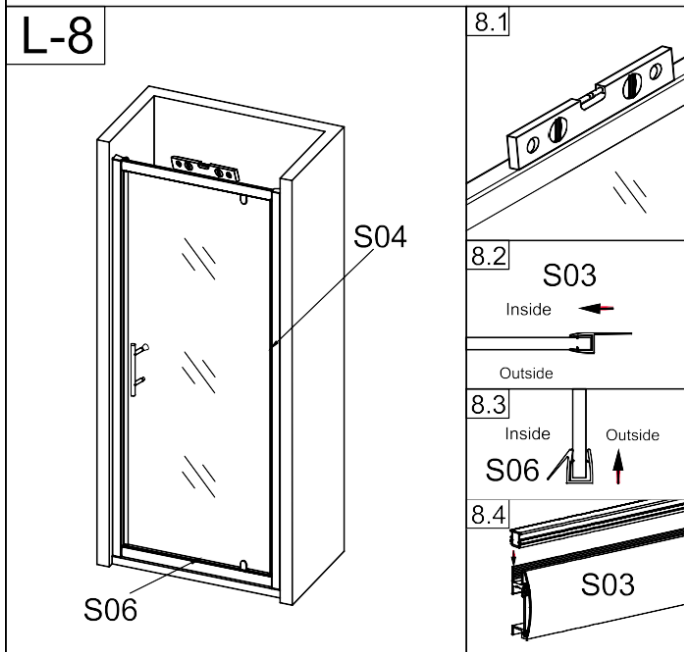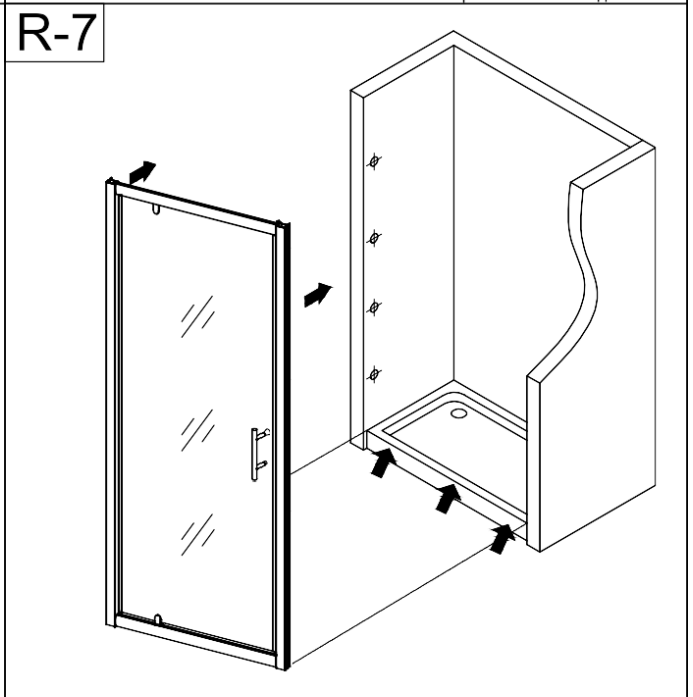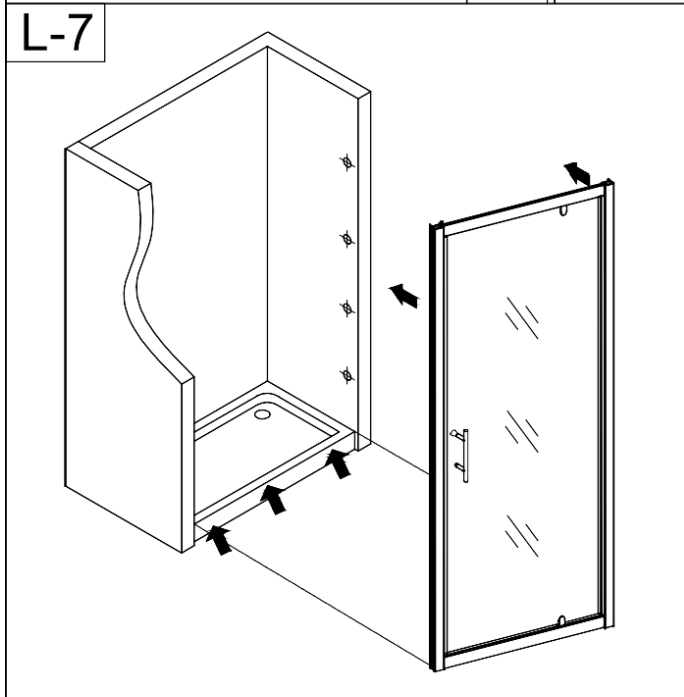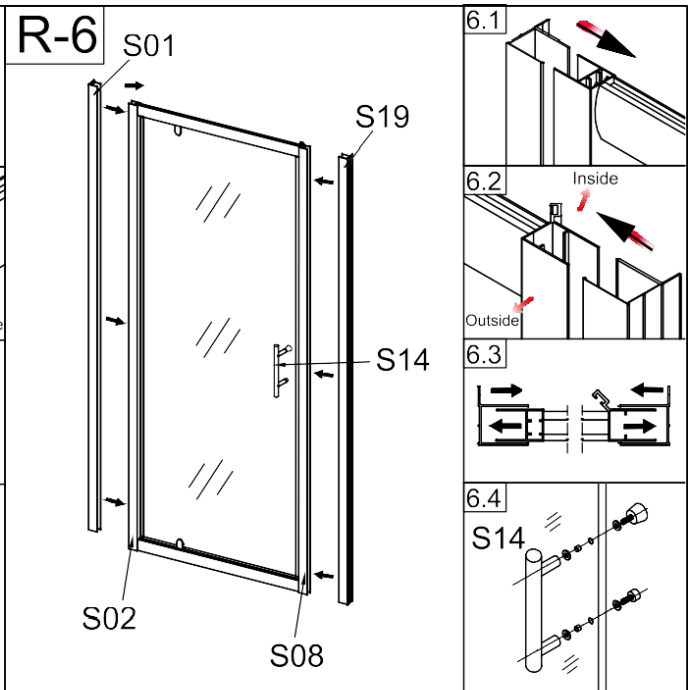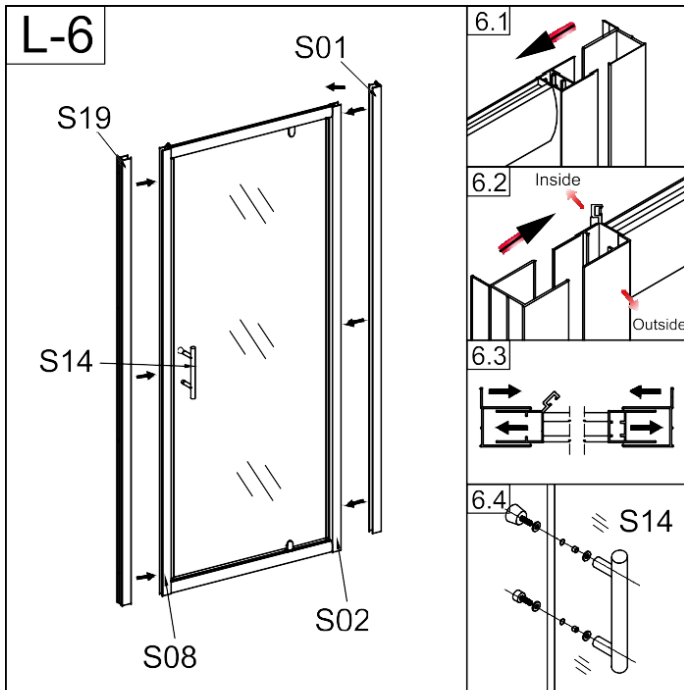





L-9

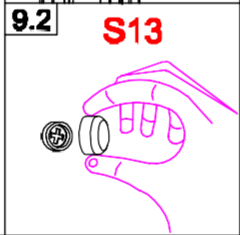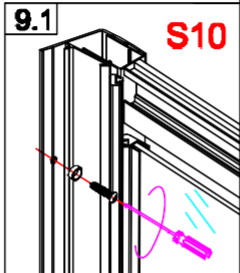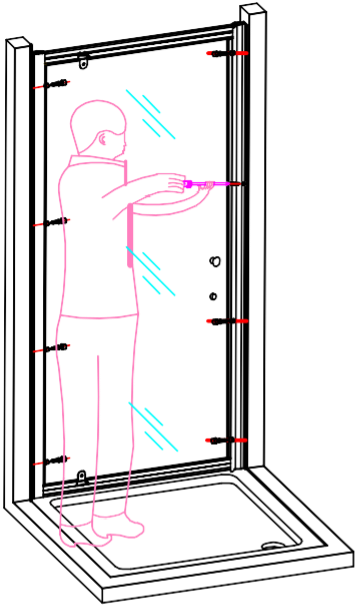





R-9

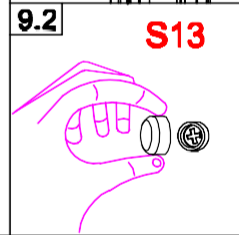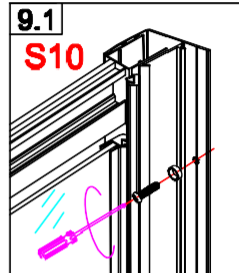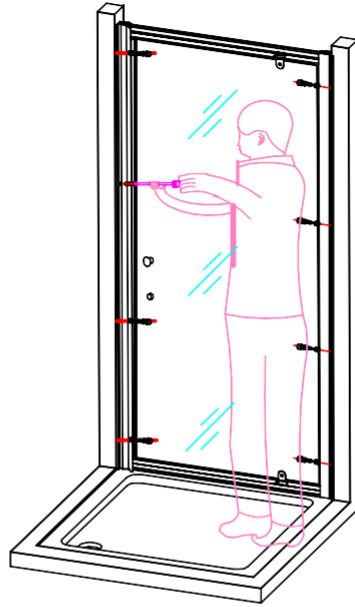




L-10

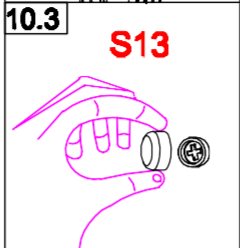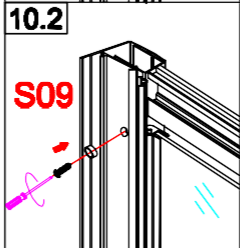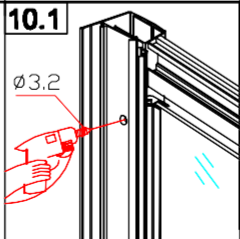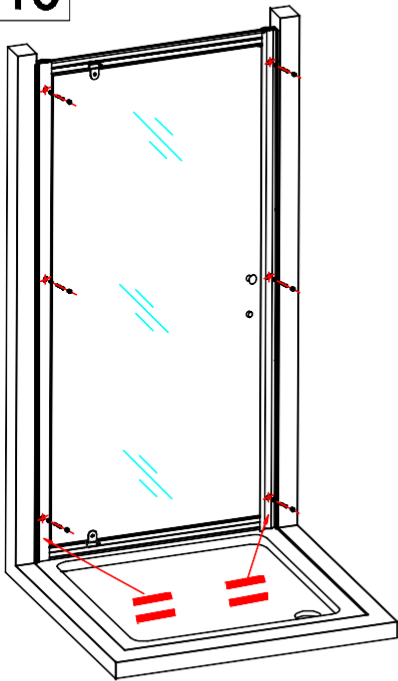





R-10

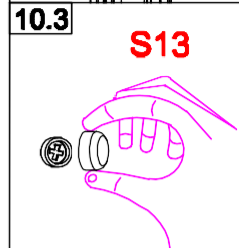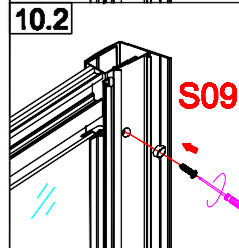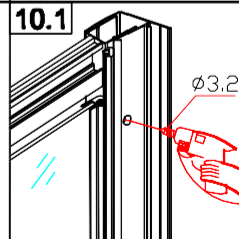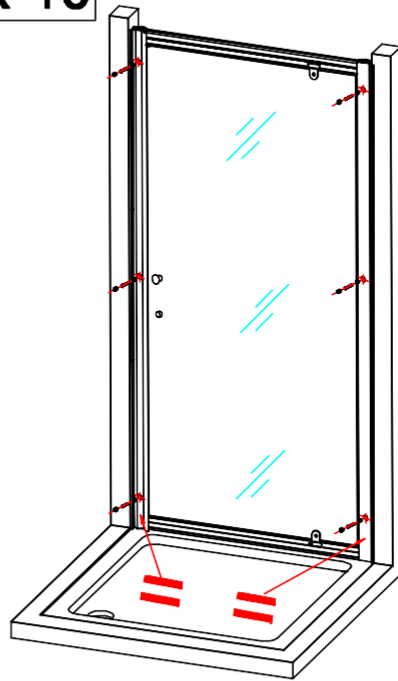

L-11

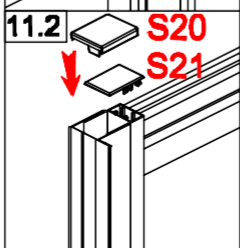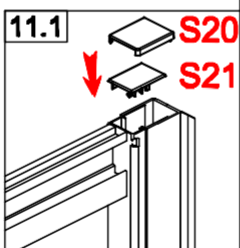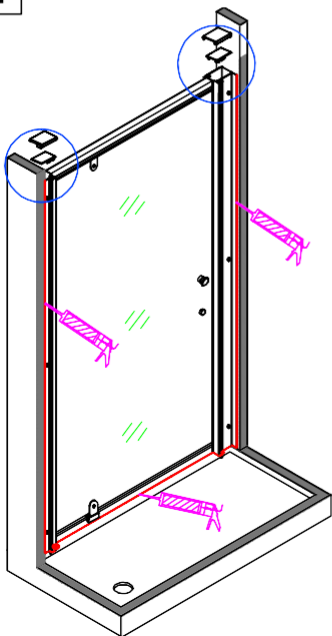

R-11

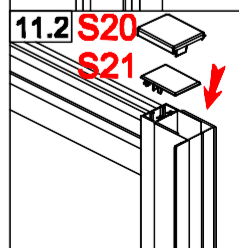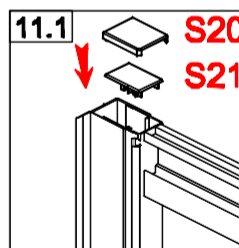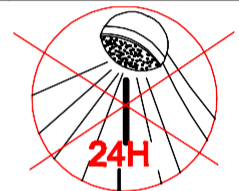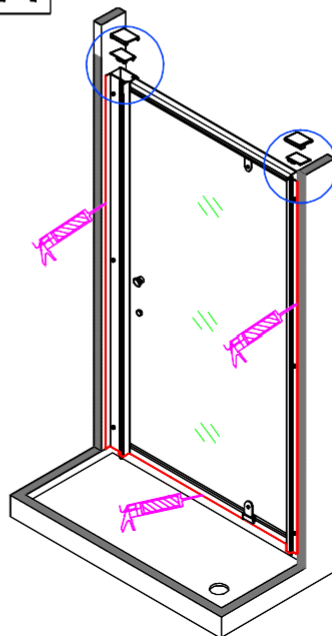

Installation facile!