

AUFBAUANLEITUNG

INSTRUCTIONS MANUAL


LA INSTRUCCIÓN

INTRODUZIONE

TALIMATLAR

INSTRUÇÕES

تاميلعت

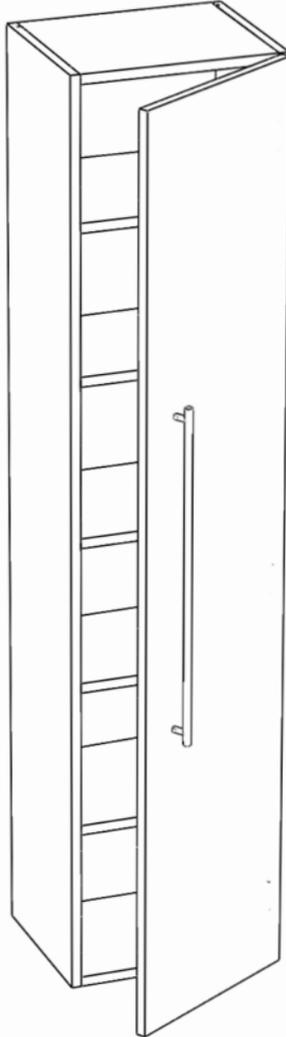

12x
WA 020




12x
WA 021



12x
WA 022



2x
WA 023




4x
WA 029




6x
WA 030



3x
WA 031



2x
WA 032




2x
WA 033




16x
WA 034




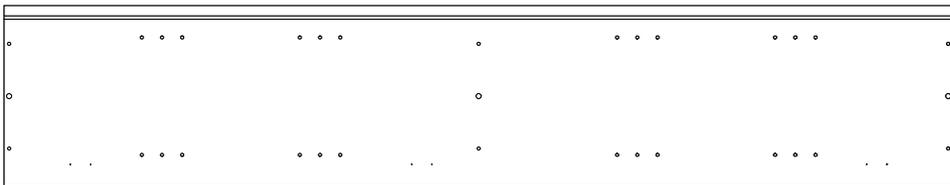


2x
HS 400

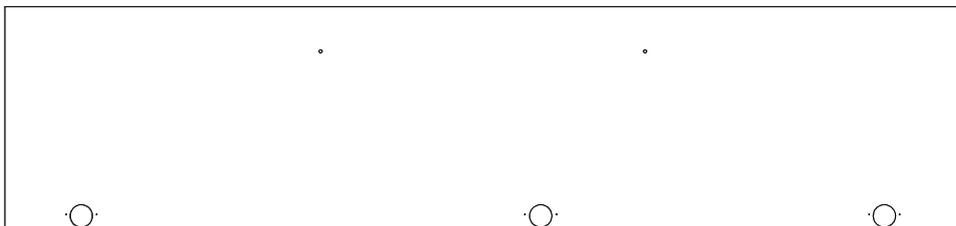


1x
HS 401

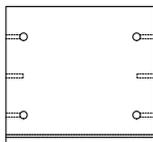

1x
HS 402

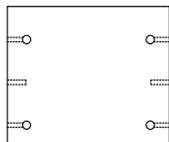

1x
HS 403

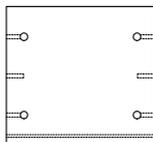


1x
HS 404



4x
HS 405




1x
HS 406

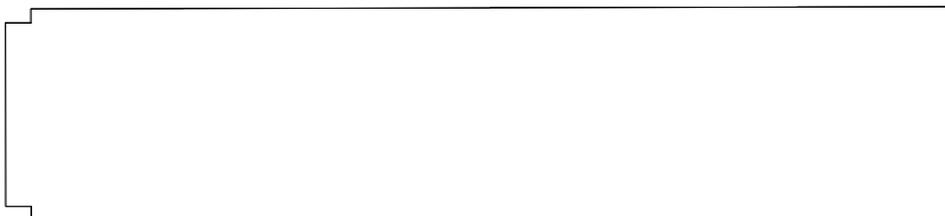



1x
HS 407

12x


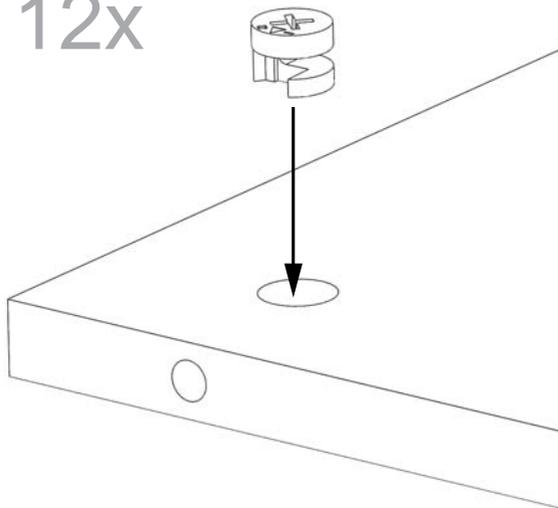





!

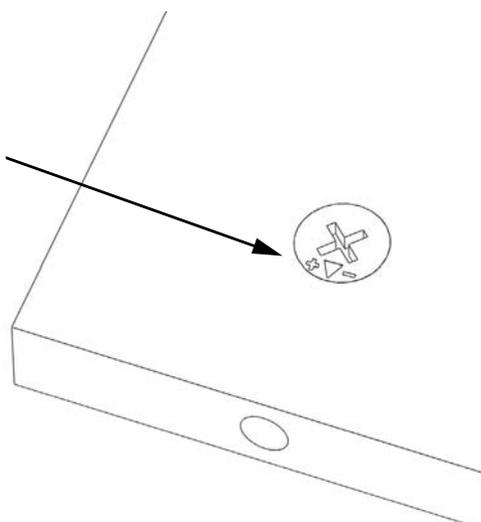



12x

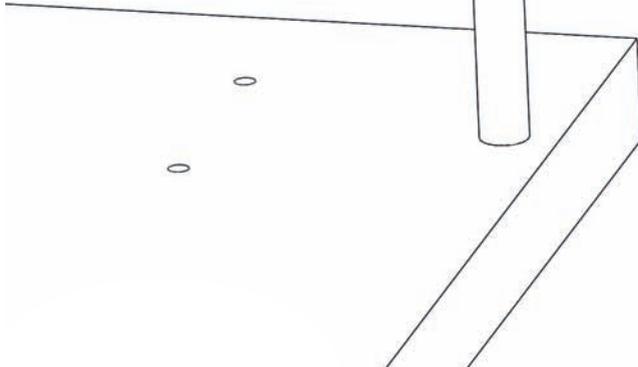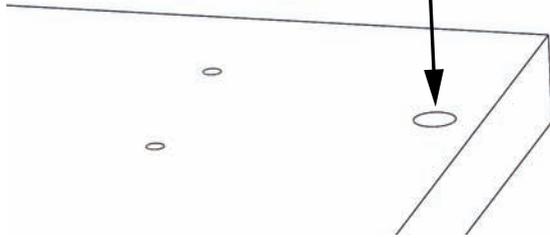

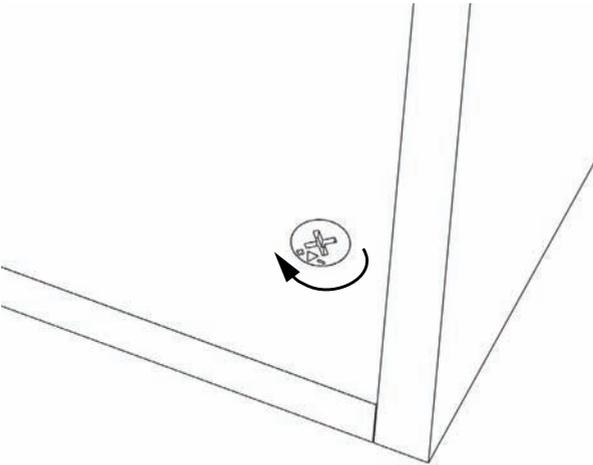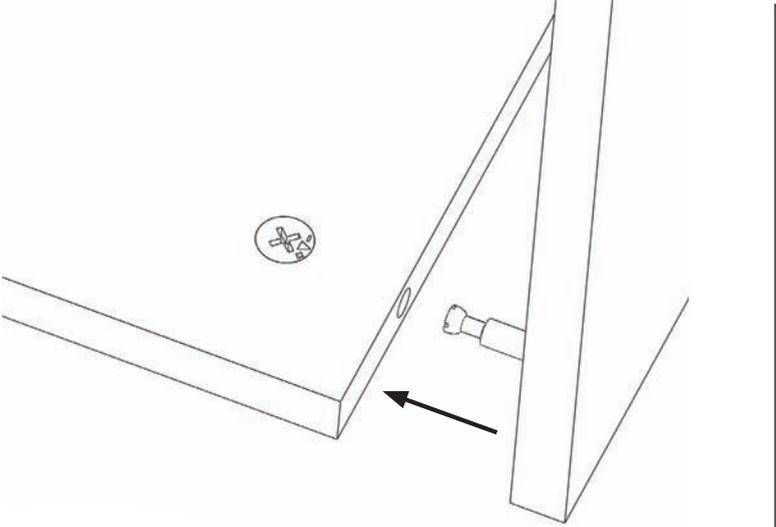

ZUSAMMENBAU

ASSEMBLY

ASSEMBLAGE

ASAMBLEA


MONTAJ

MONTAGEM


تجميع




3x
WA 030

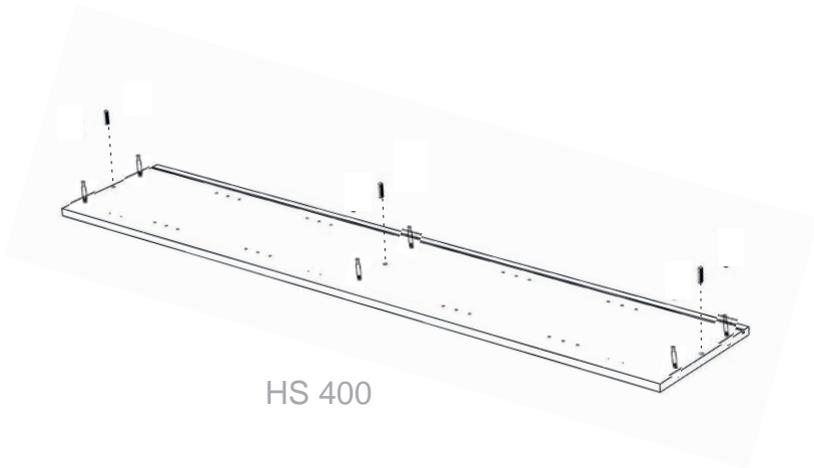


HS 402



HS 403




HS 404

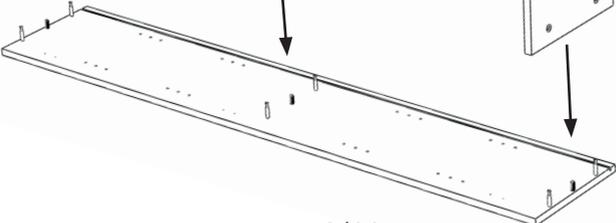

2/16




HS 407

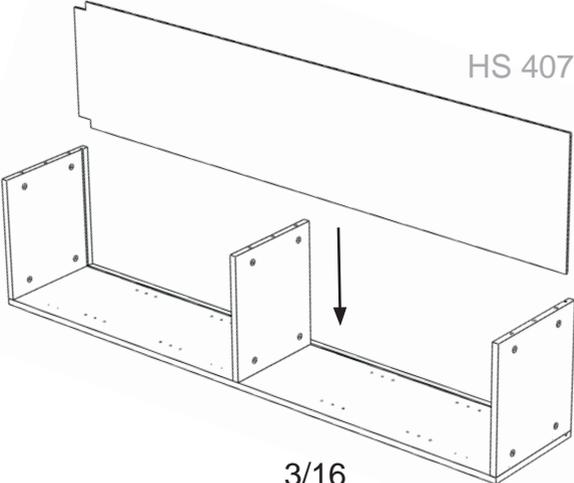


3/16




3x
WA 030

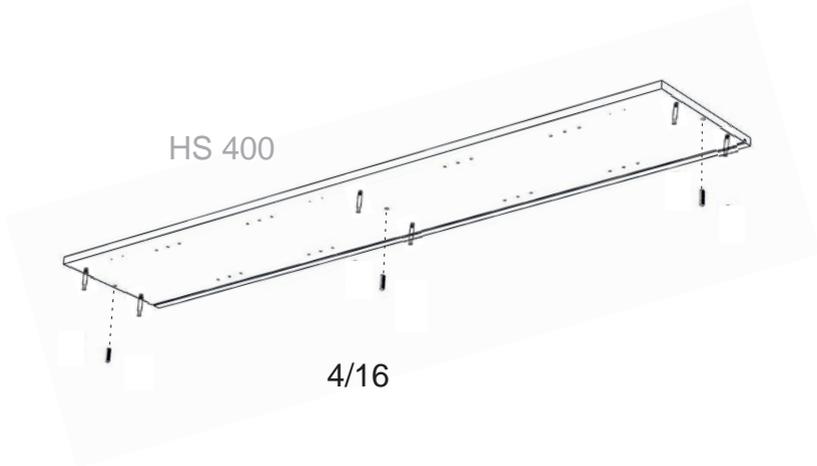




4/16

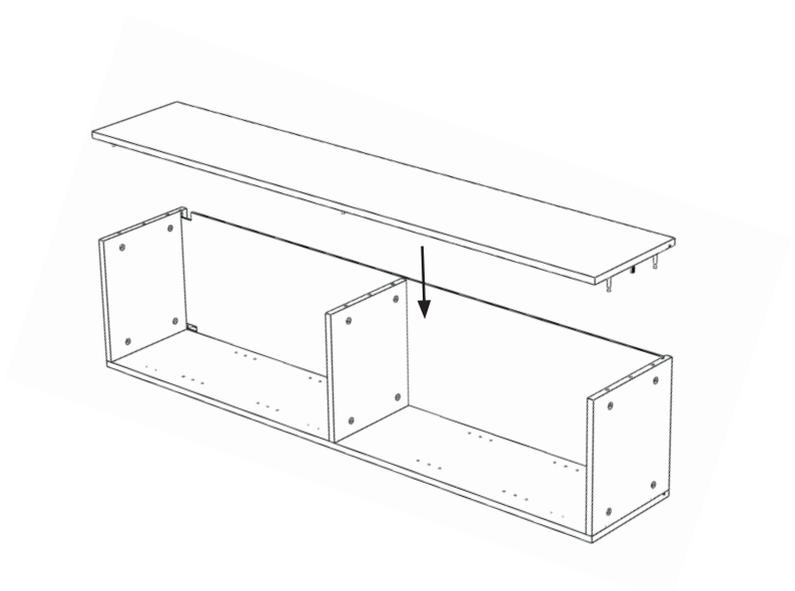

5/16

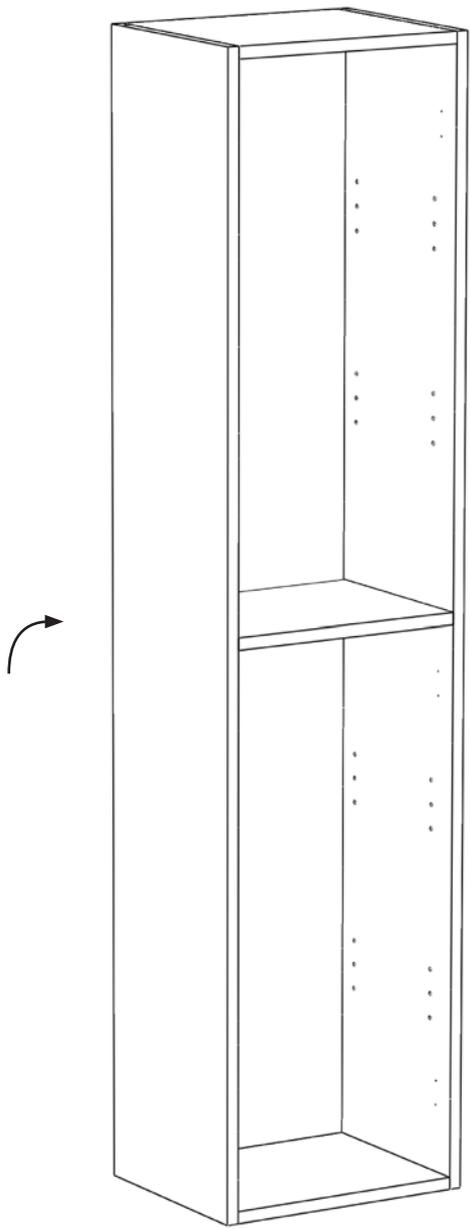

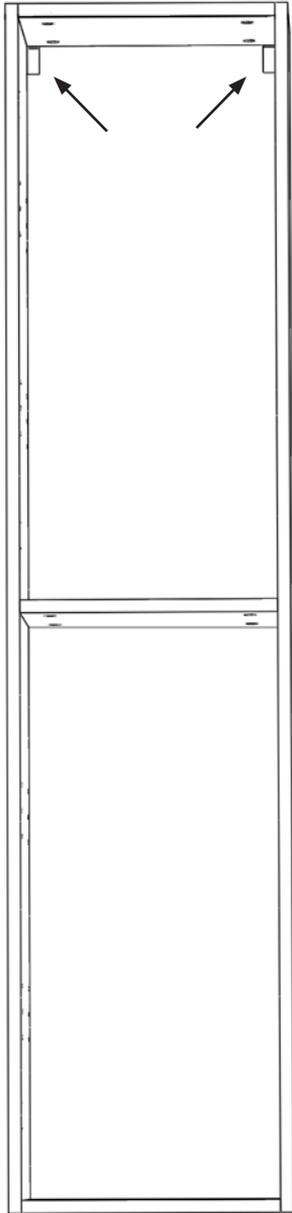


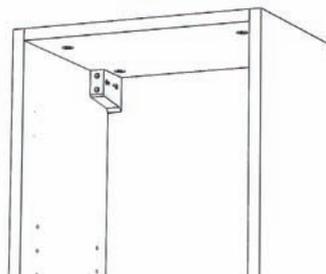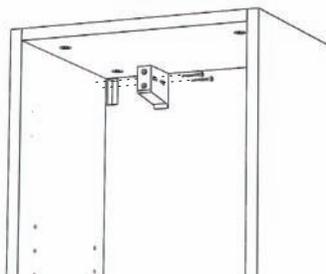



6/16



4x
WA 029





2x
WA 032

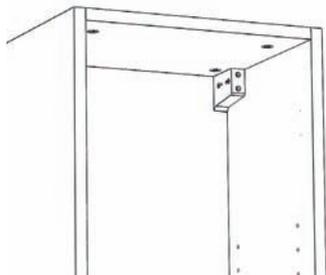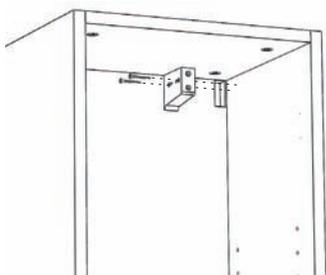


7/16


WANDMONTAGE
WALL MOUNT
MONTAGE AU MUR
DE MONTAJE EN PARED
DUVARA MONTAJ
PAREDE MONTAGEM

لجج رادج





2x
WA 033

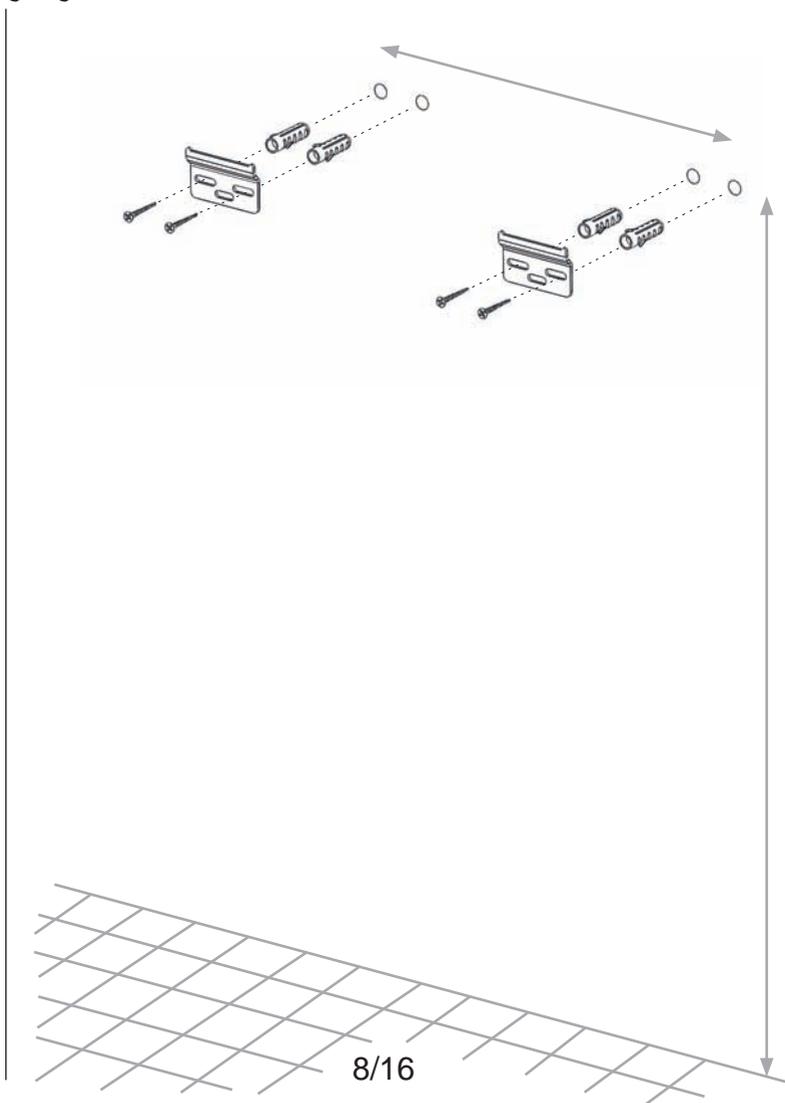

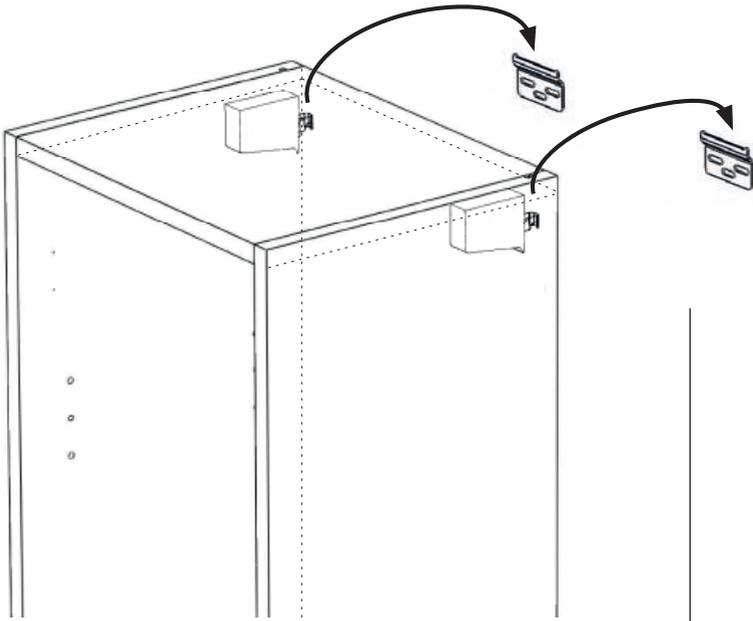


9/16

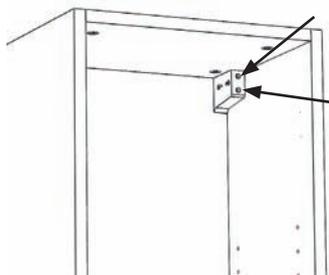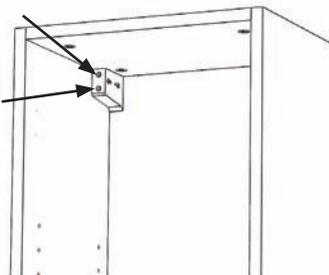


10/16












8x
WA 034

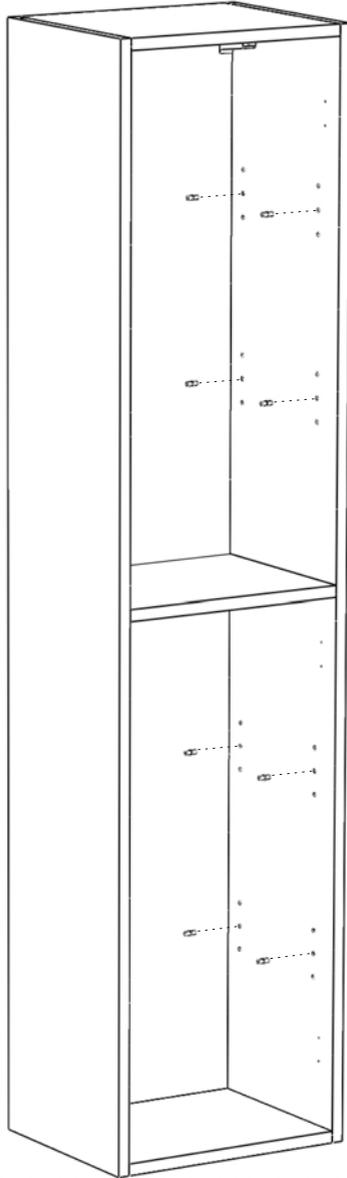

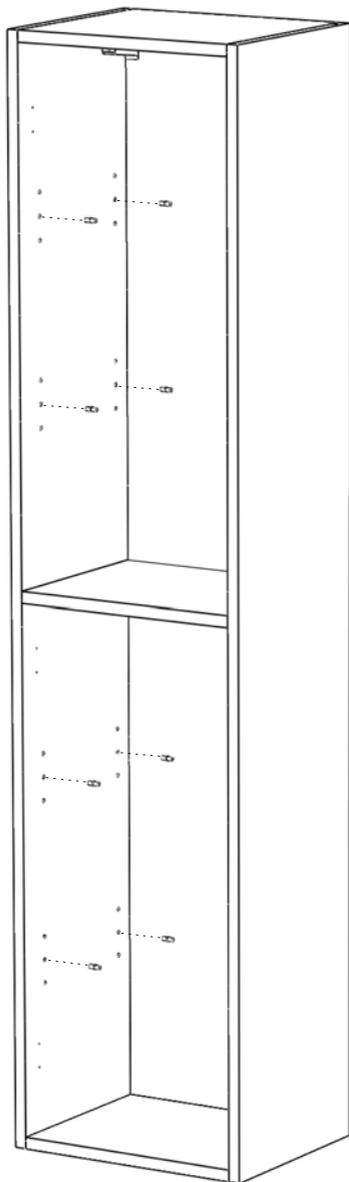


8x
WA 034

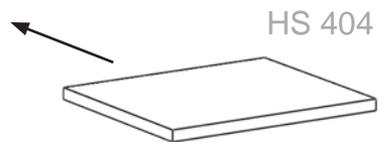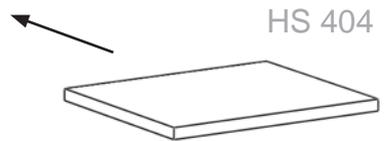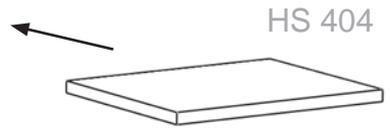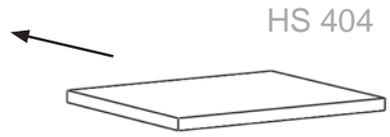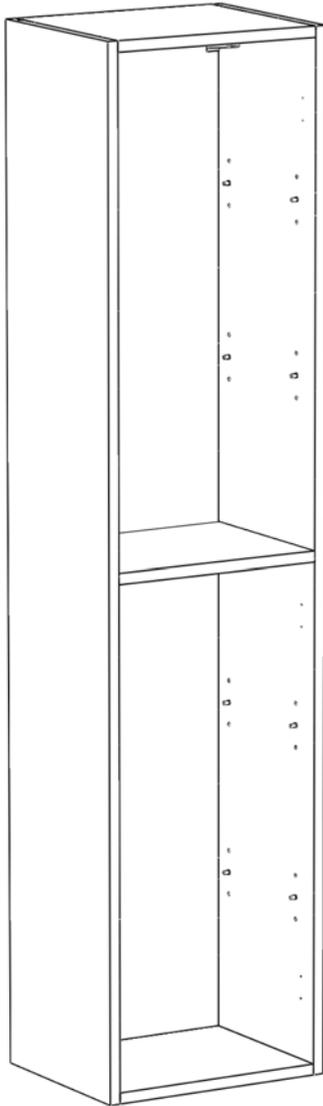

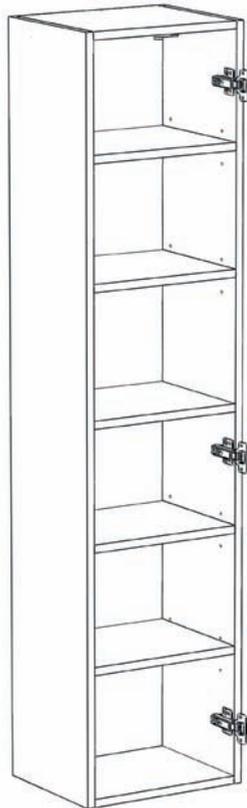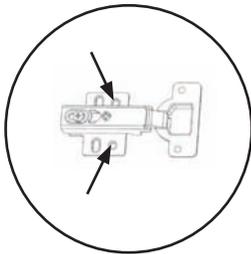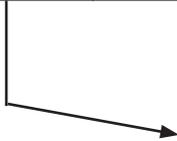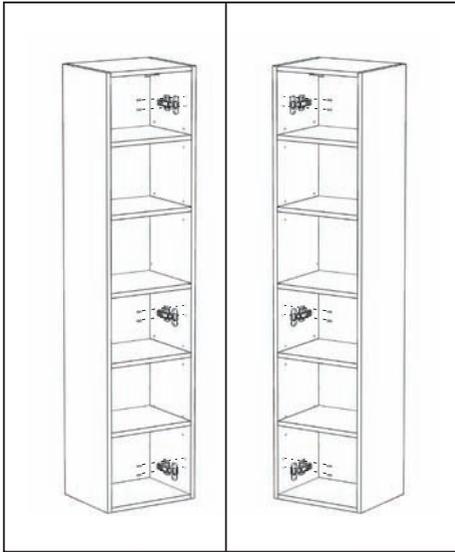


6x
WA 022




3x
WA 031




6x
WA 022

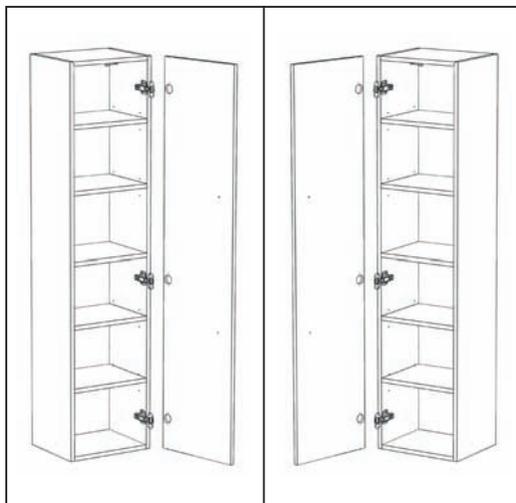

HS 401

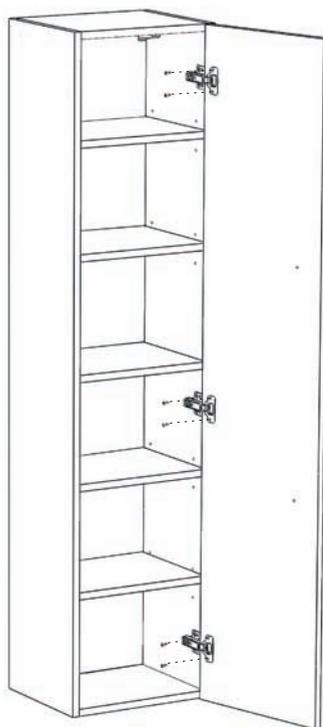


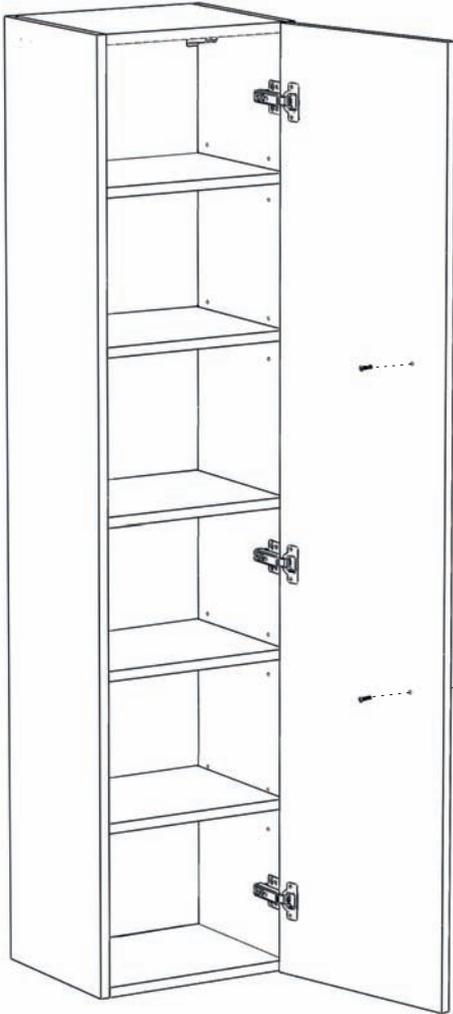

HS 406



2x
WA 023

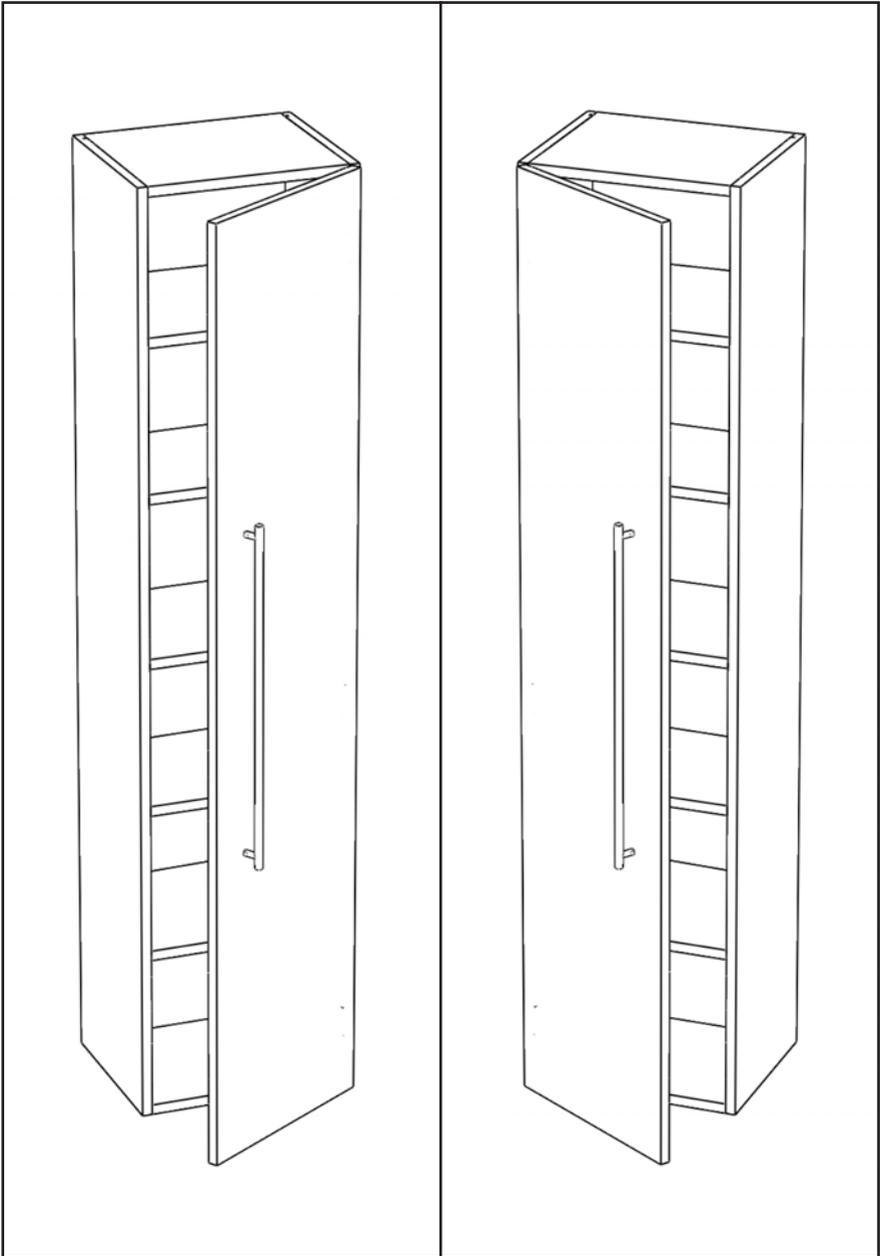

Gestaltet von:
www.die-station.de
Benkel & Oldenburg