

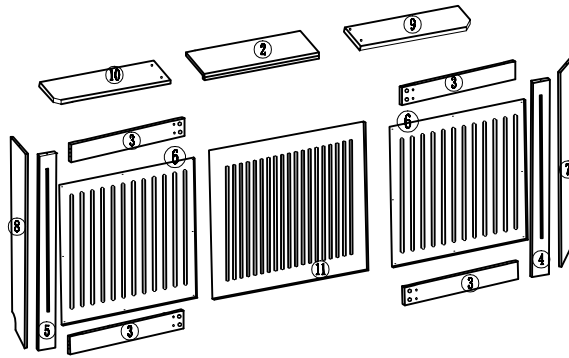



Instruction Manual

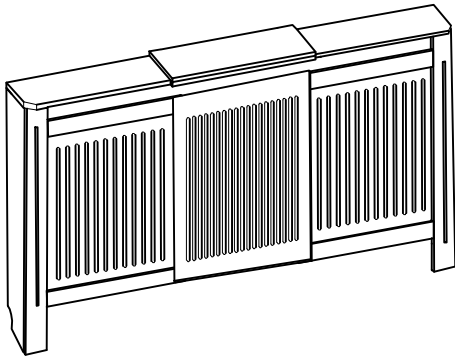

Tools needed

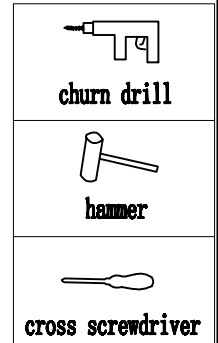


Please note that there is no No.1 panel !

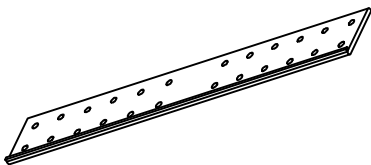


② x1 850*205*24mm




③ x4 550.5*105*12mm




④ x1 803*110*12mm




⑤ x1 803*110*12mm

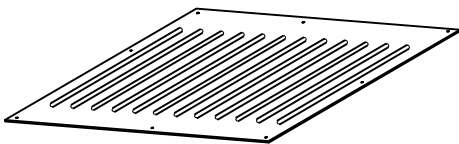


⑥ x2 540*479*5mm

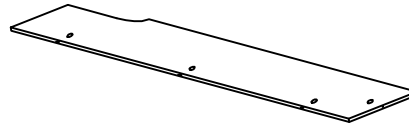


⑦ x1 803*168*12mm

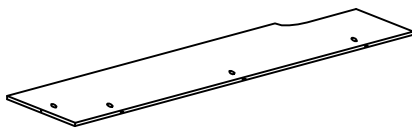


⑧ x1 803*168*12mm

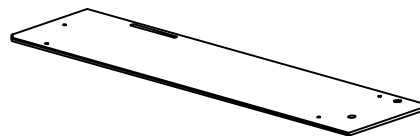

⑨ x1 691*190*12mm

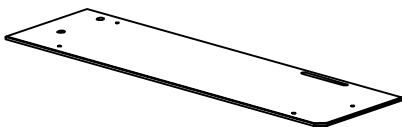

⑩ x1 691*190*12mm

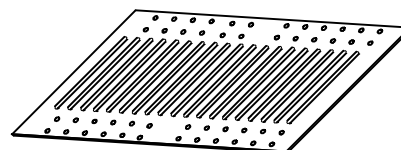

⑪ x1 850*649*12mm



Ax2



Bx14




Cx14



Dx8



Ex14



Fx4



Gx4



Hx2

Ix8

Jx12



Kx1



Using a screwdriver, screw in the #B screws securely. Please do not over tighten as it may cause wood to splinter. The small arrow on the #C Cam Locking Screw should be facing the #B screws extending from the panel. Use screwdriver to tighten securely, but avoid over tightening, screws may protrude through the panel.

1 2

Tools: Bx6, Cx6, Bx4, Cx4, Dx8

3 4

Tools: Ex14, Kx1, Jx8

5 6

Tools: Jx4, Kx1, Bx4, Cx4

7 8

Tools: Hx2, Lx8, Kx1, Ax2, Fx4, Gx4

9

Tools: Ax2, Fx4, Gx4