




# Instruction Manual

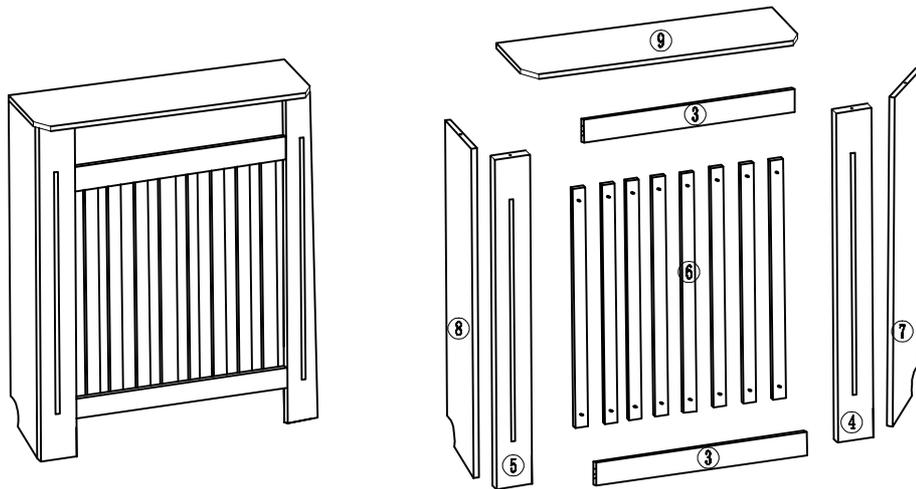

## Tools needed

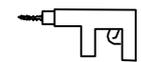

churn drill

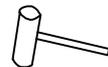


hammer




cross screwdriver


Please note that there is no No.1 and No.2 panel !

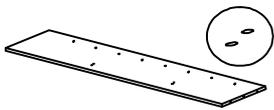

③ x2 527\*105\*12mm

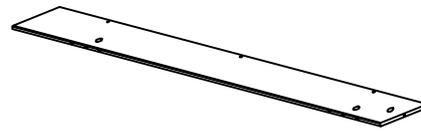


④ x1 803\*110\*12mm

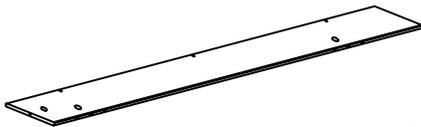


⑤ x1 803\*110\*12mm




⑥ x8 499\*37\*5mm

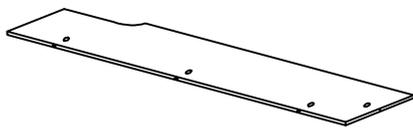

⑦ x1 803\*168\*12mm

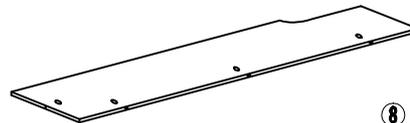

⑧ x1 803\*168\*12mm

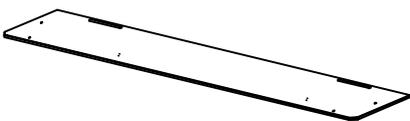

⑨ x1 780\*190\*12mm



Ax2



Bx14



Cx14



Dx8



Ex16



Fx4



Gx4



Hx2





Ix8





Using a screwdriver, screw in the #B screws securely. Please do not over tighten as it may cause wood to splinter. The small arrow on the #C Cam Locking Screw should be facing the #B screws extending from the panel. Use screwdriver to tighten securely, but avoid over tightening, screws may protrude through the panel.



1 2

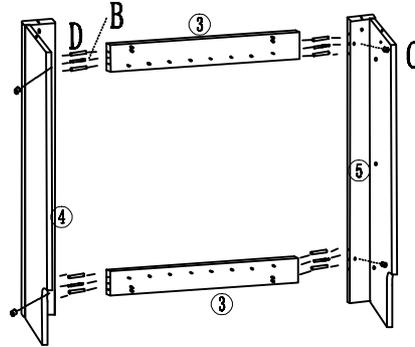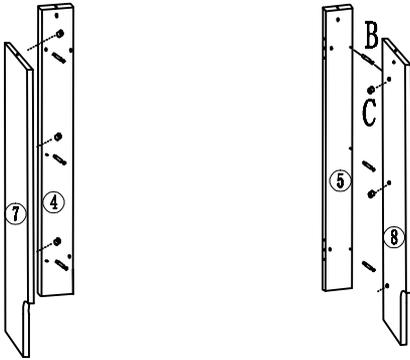

3 4

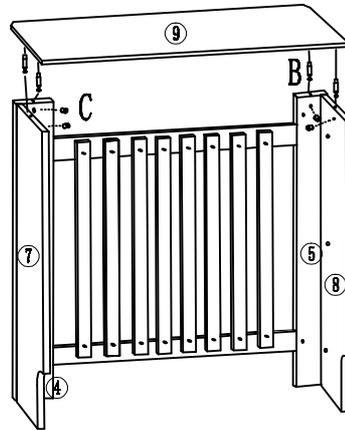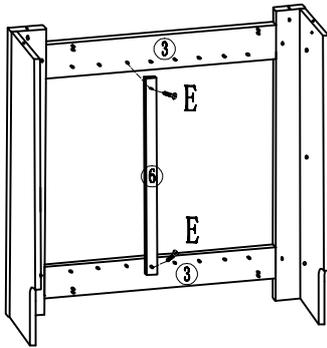

5 6

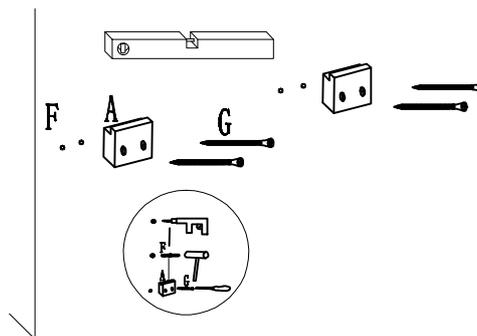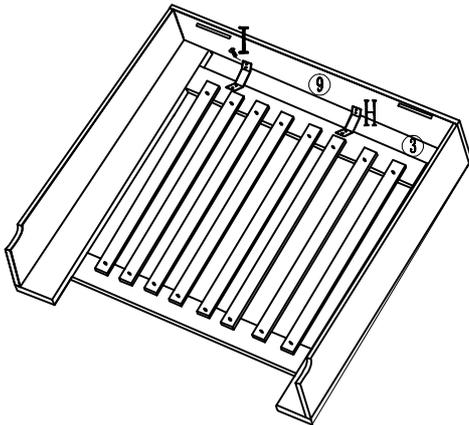

7

