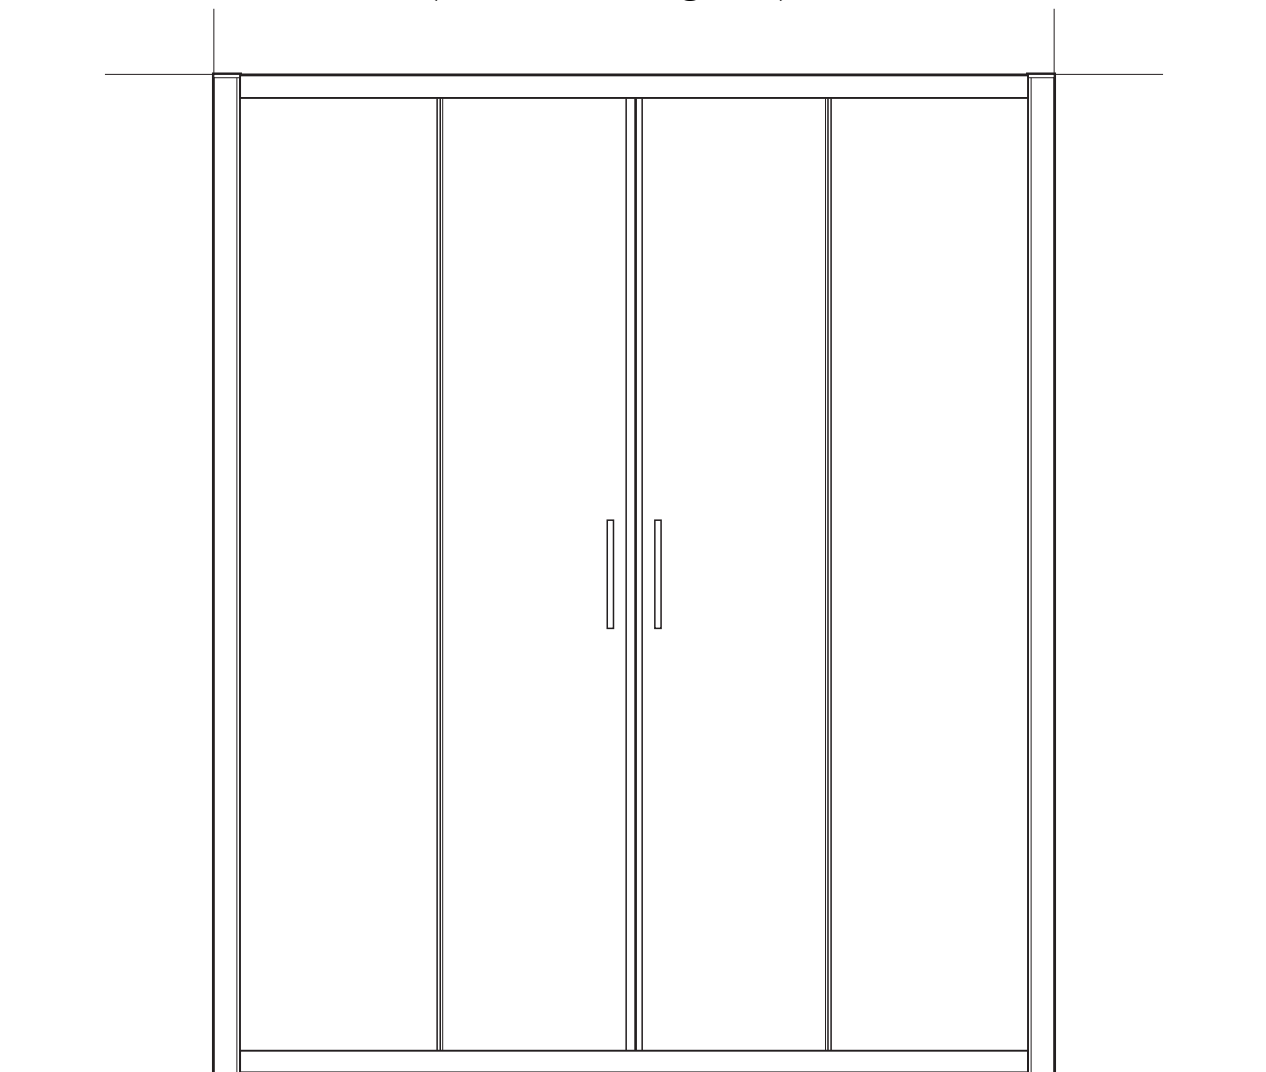
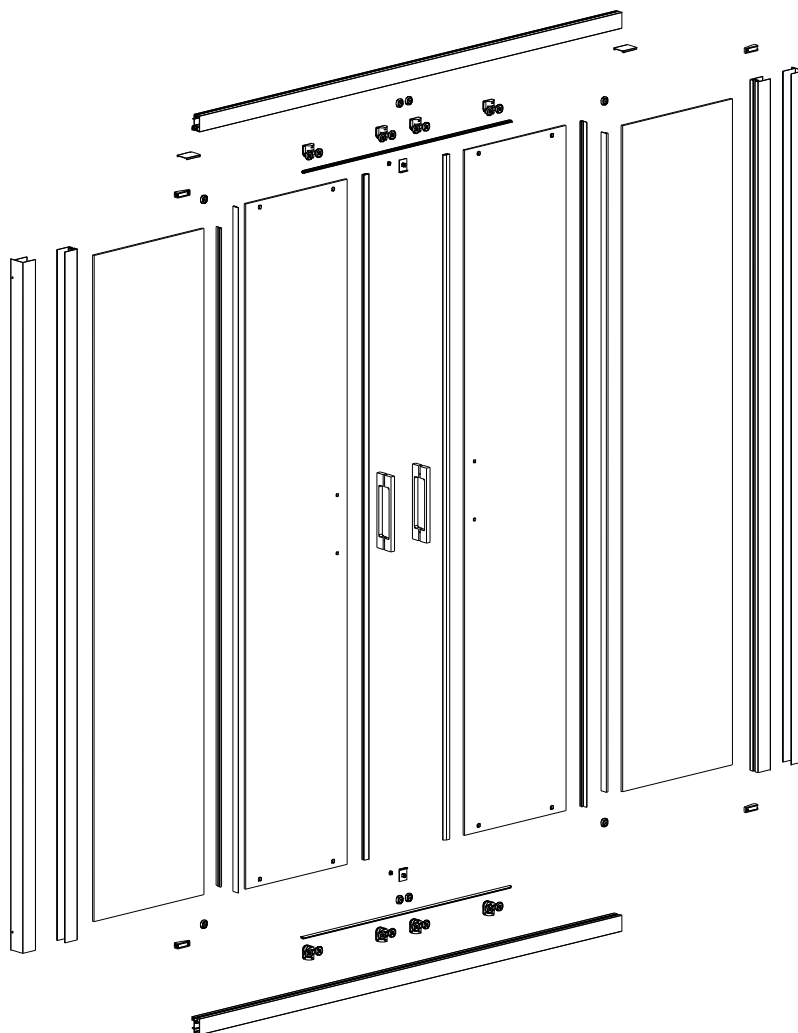


SURAT

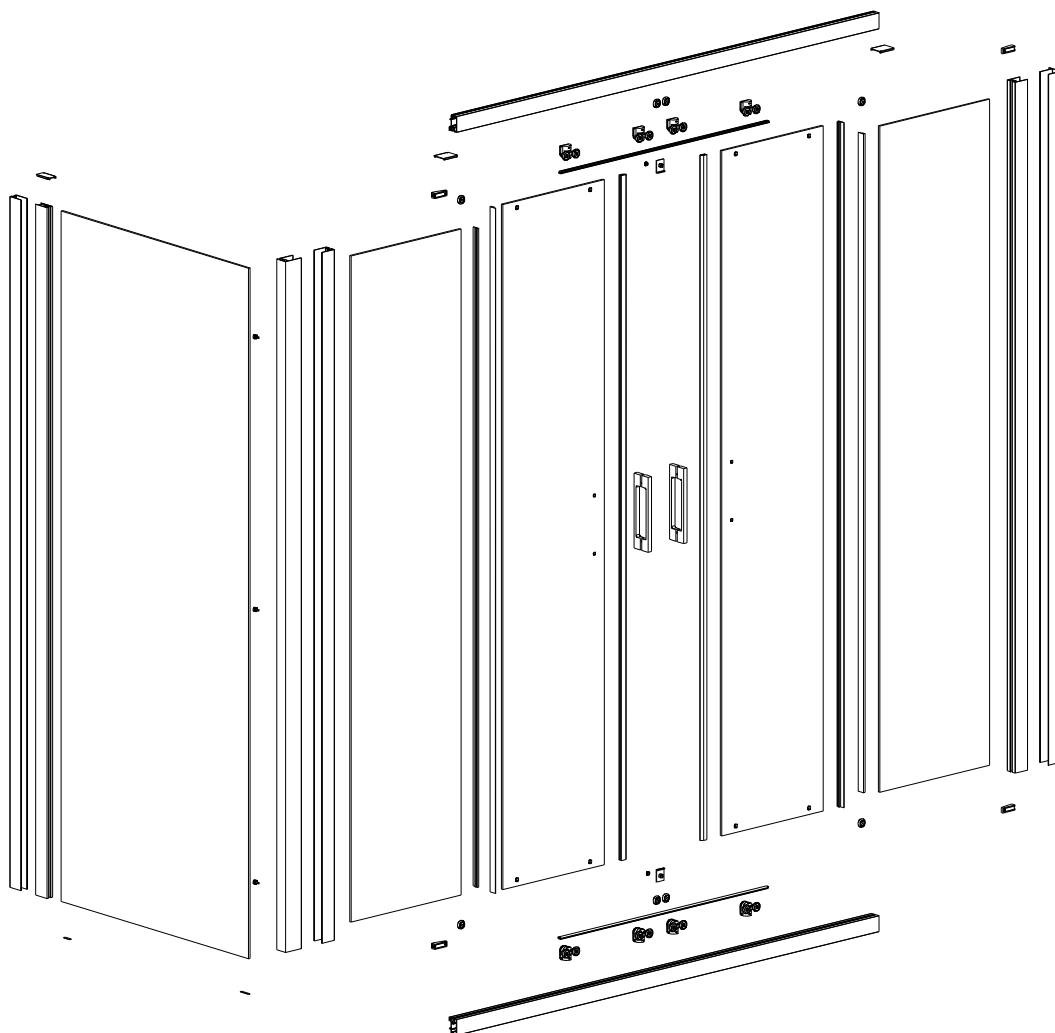
(Frontal y Angular)




A



B




M-01

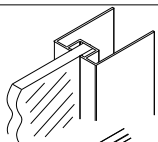

2


A

M-02



2

M-03



2

M-04




4

M-05




4

M-06




8

M-07



4

M-08



2

M-09




8

M-10



2

M-11




2

M-12



2

M-13



2

M-14



10

M-15



4

M-16



12

M-17



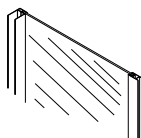
2

M-18



12


M-21



1


B

M-22



1

M-23



1

M-24



2

M-25



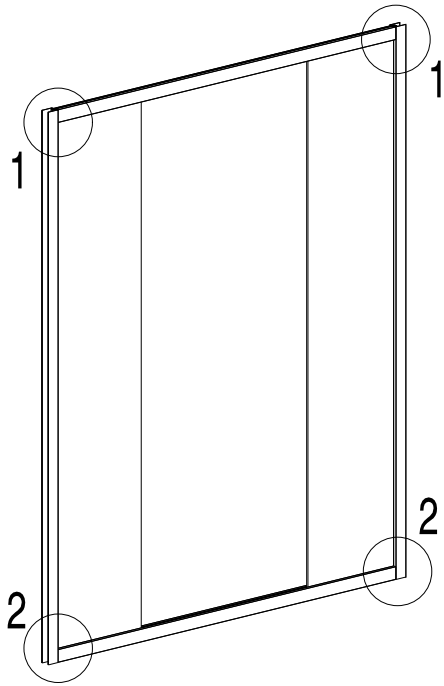
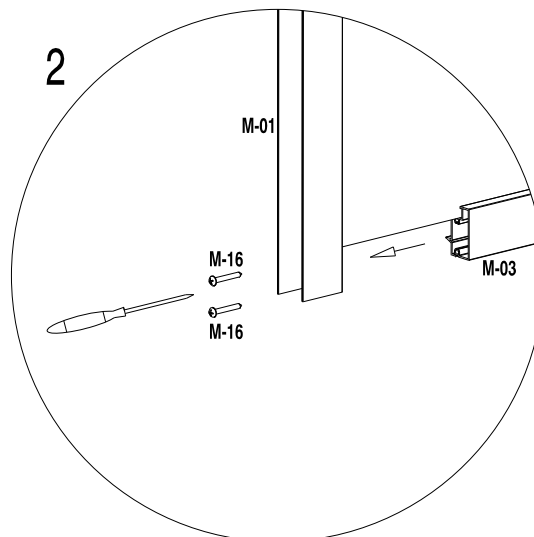
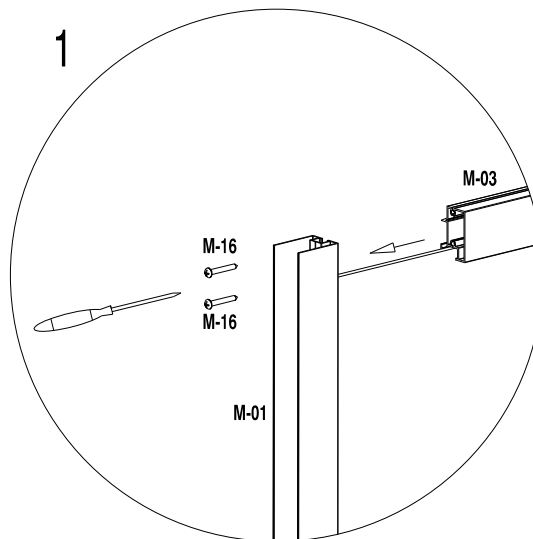
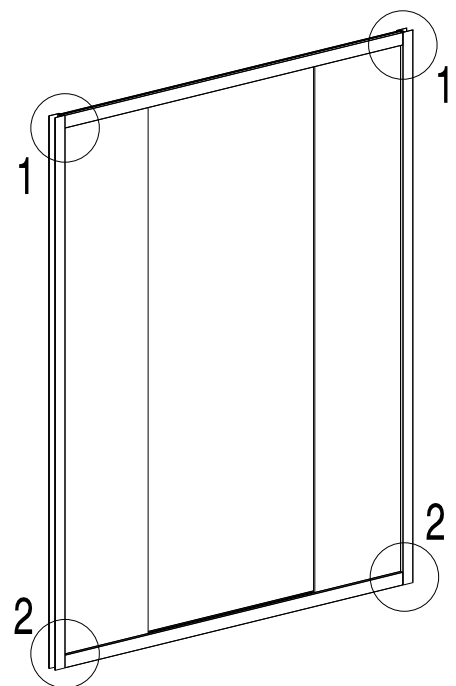
6






M-26










6




A**B**

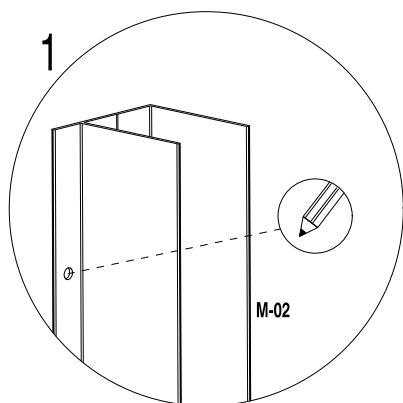
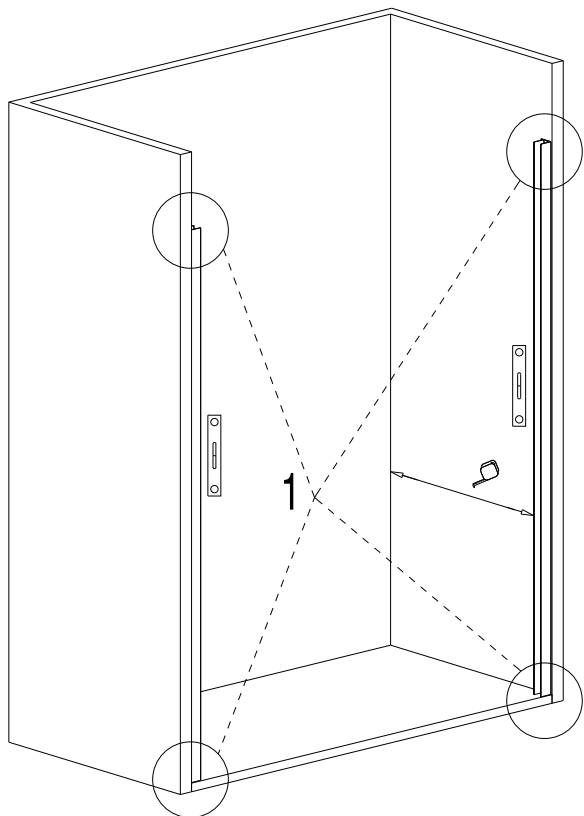
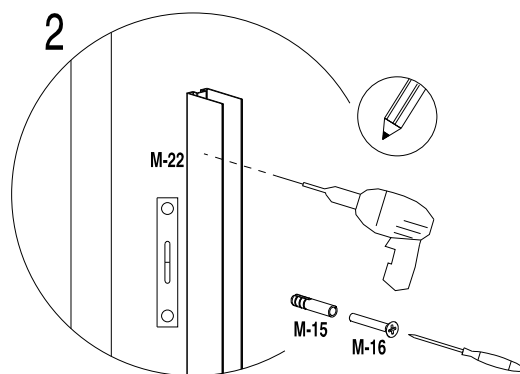
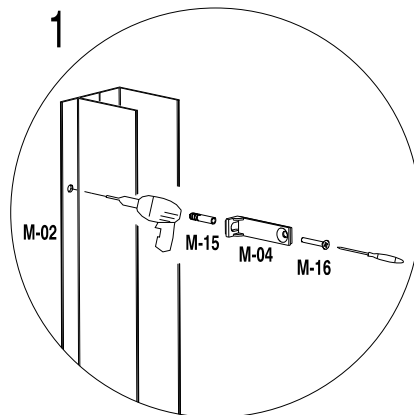
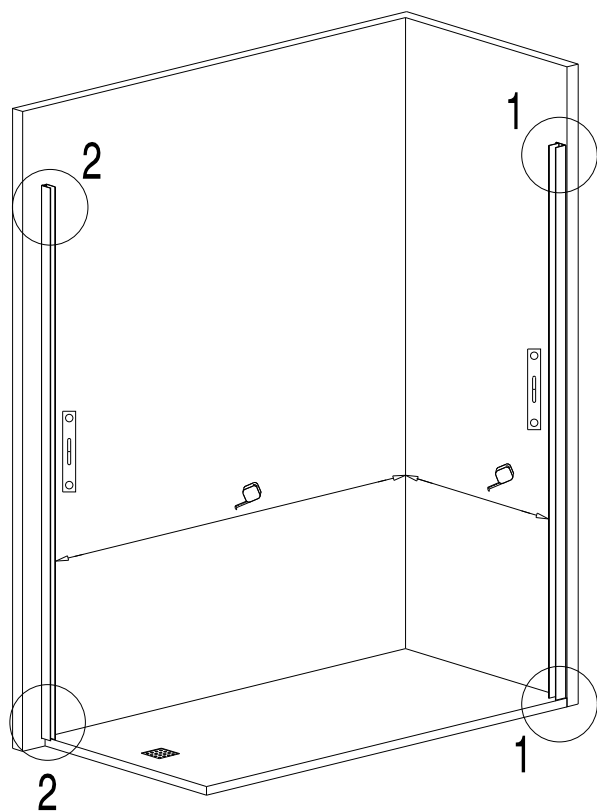
A**B**

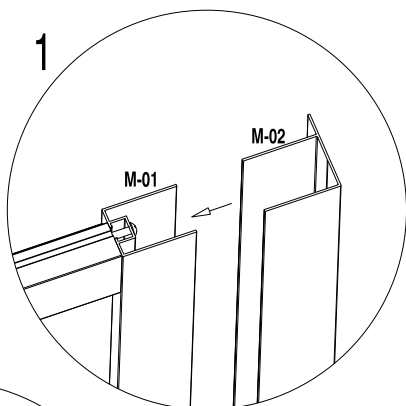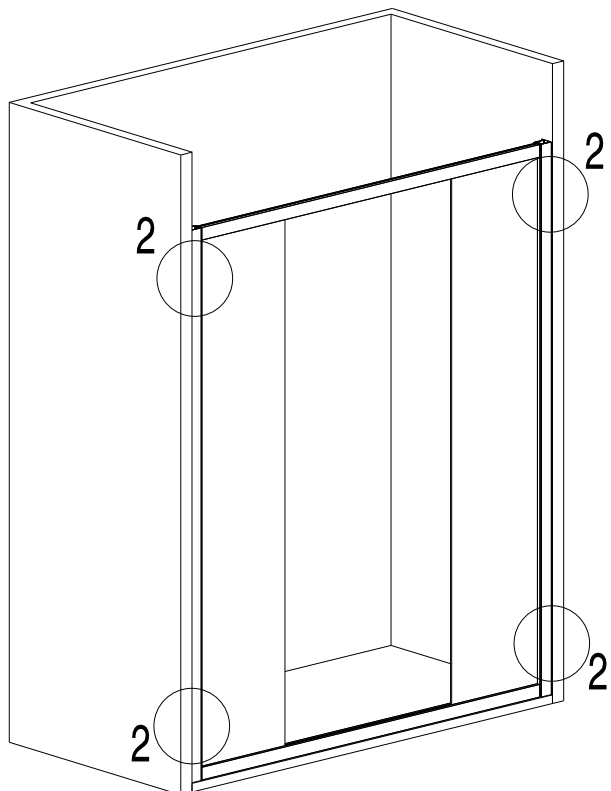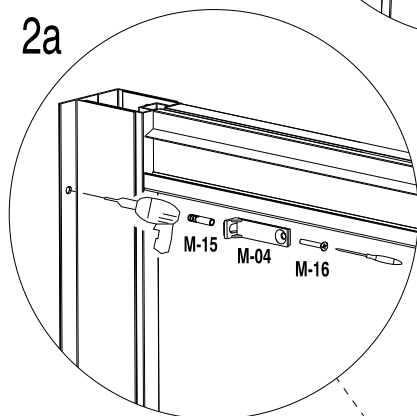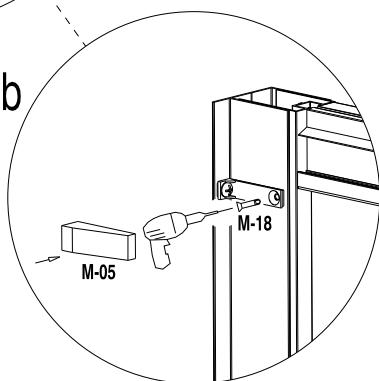
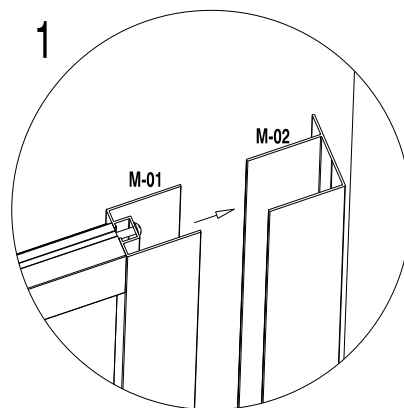
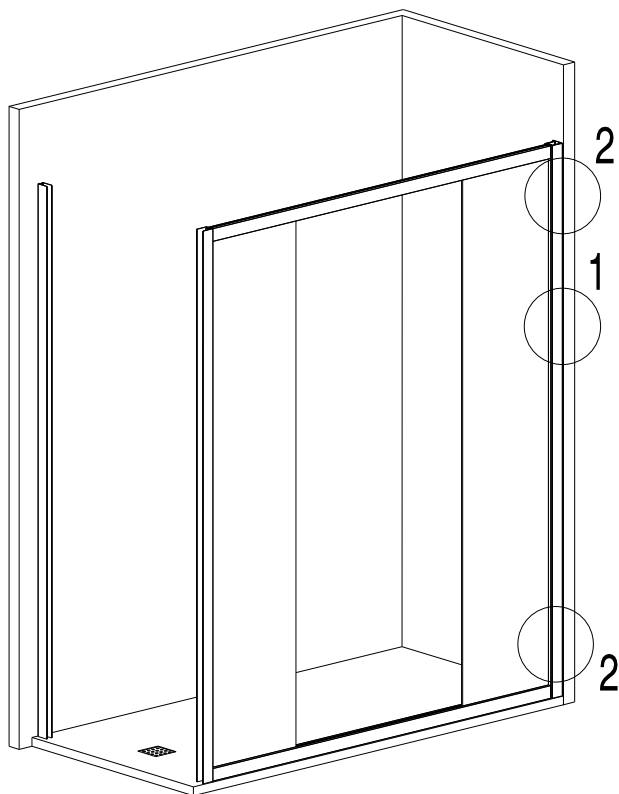
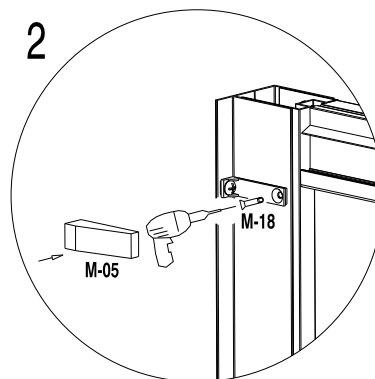
A**2a****2b****B****2**






This diagram shows an exploded perspective view of a window frame assembly. It includes a main frame, a sliding sash, and a bottom rail. Numbered callouts identify the following components:

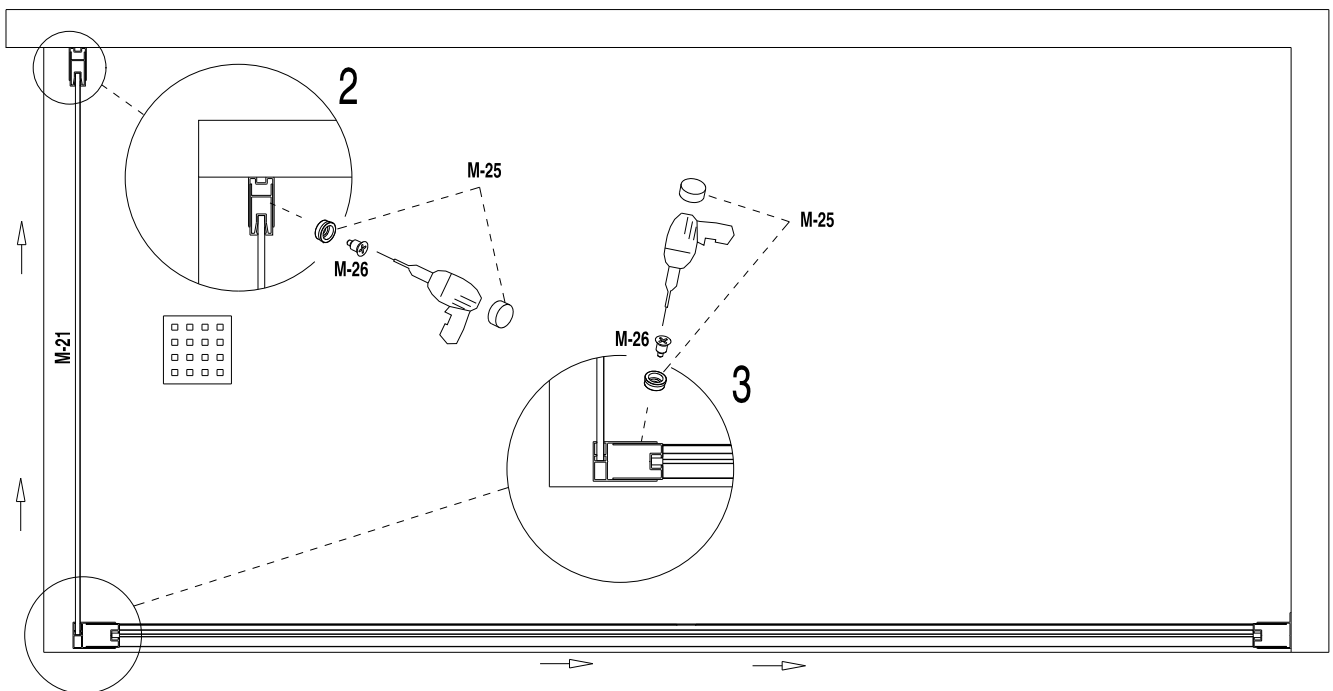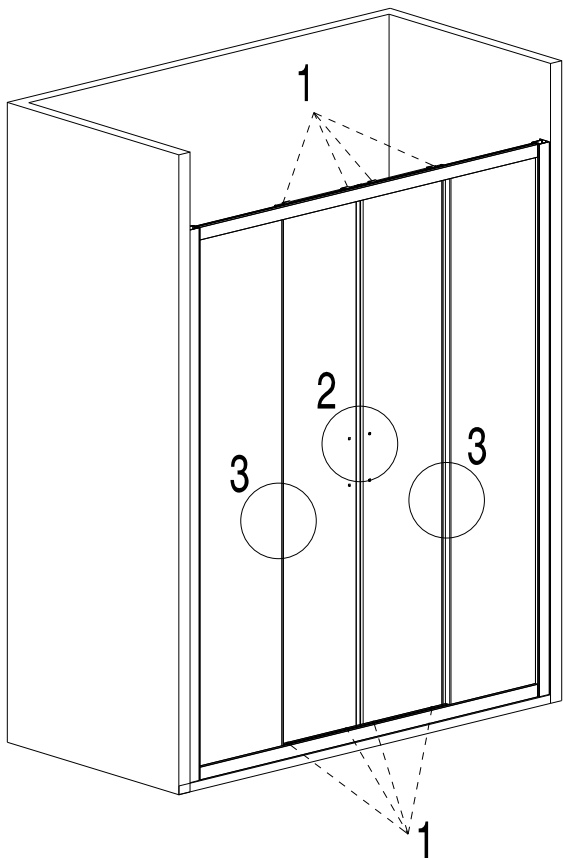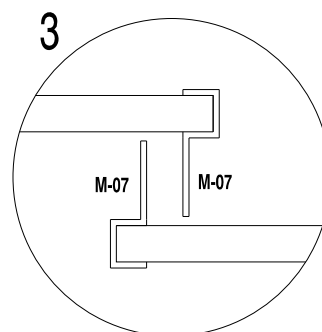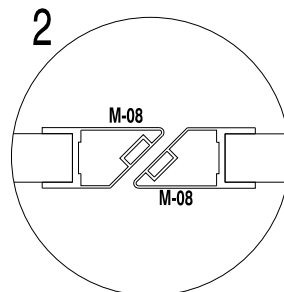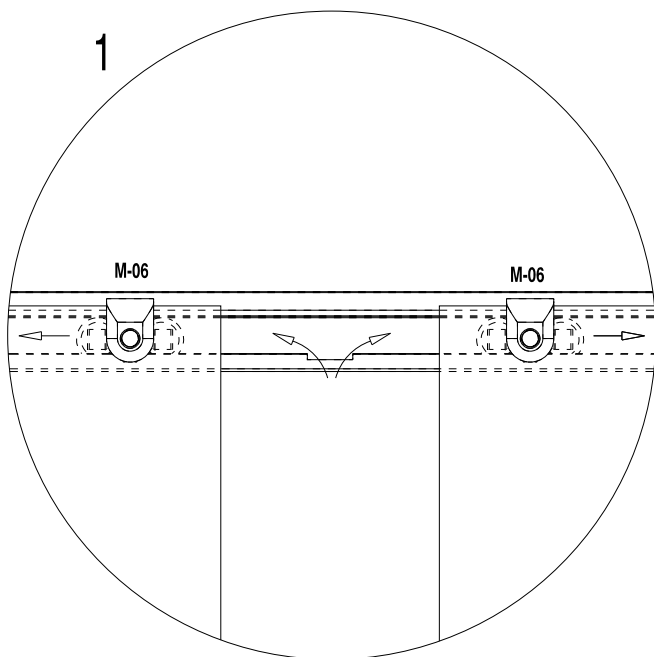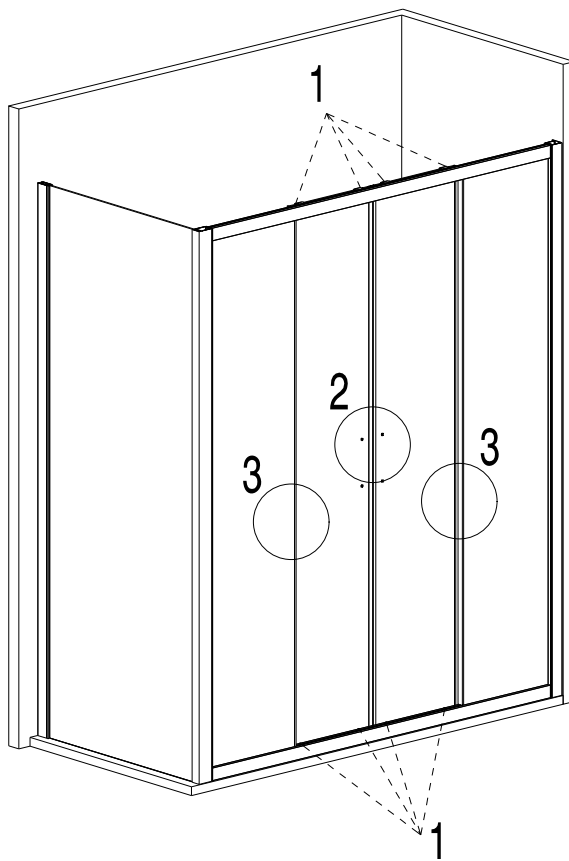- 1:** Points to the bottom rail of the sash.
- 2:** Points to the vertical guides or rollers on the left side of the frame.
- 3:** Points to the vertical guides or rollers on the right side of the frame.




A**B**

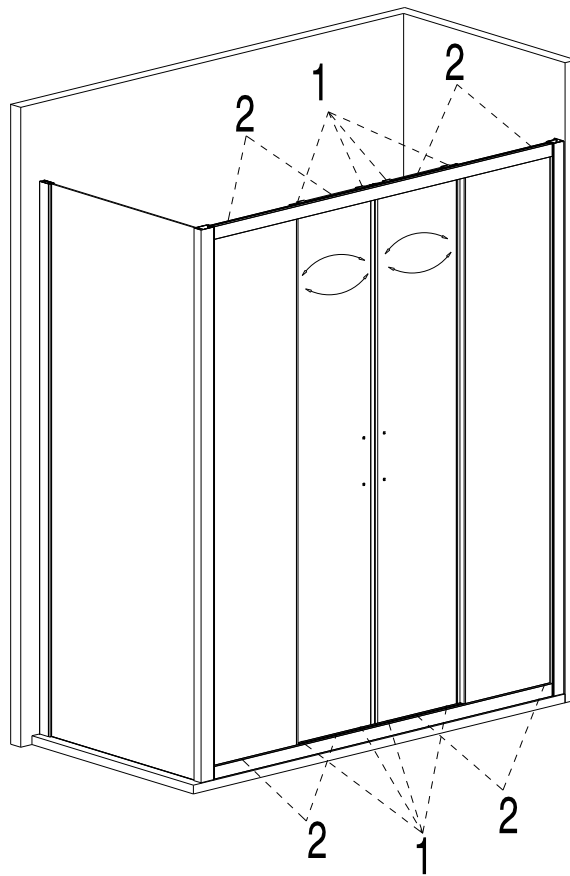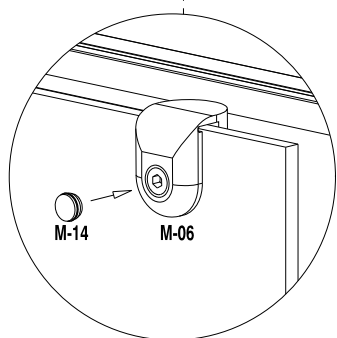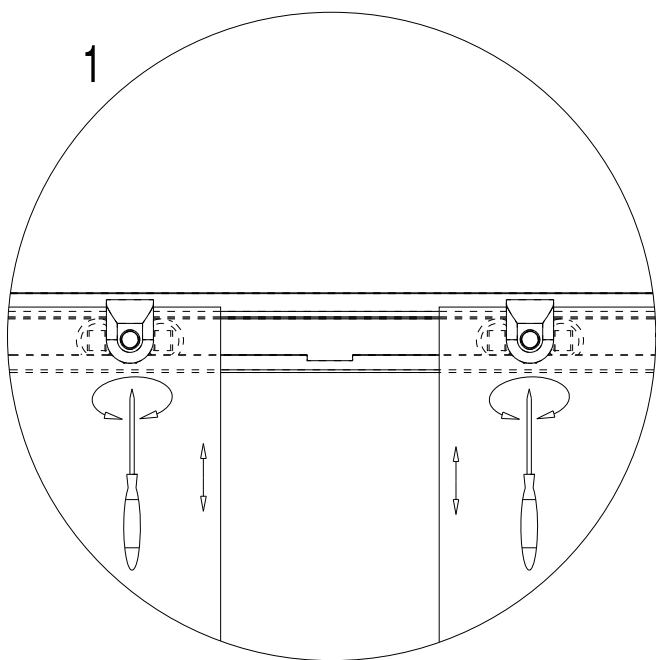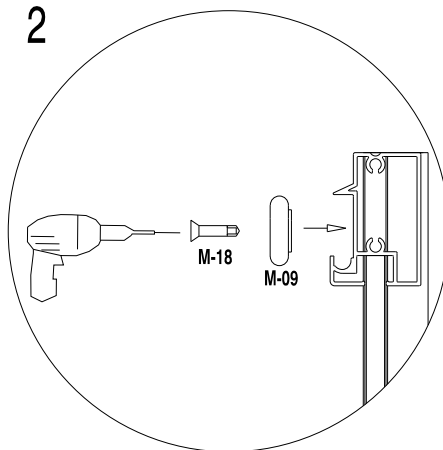A**B****1****2**

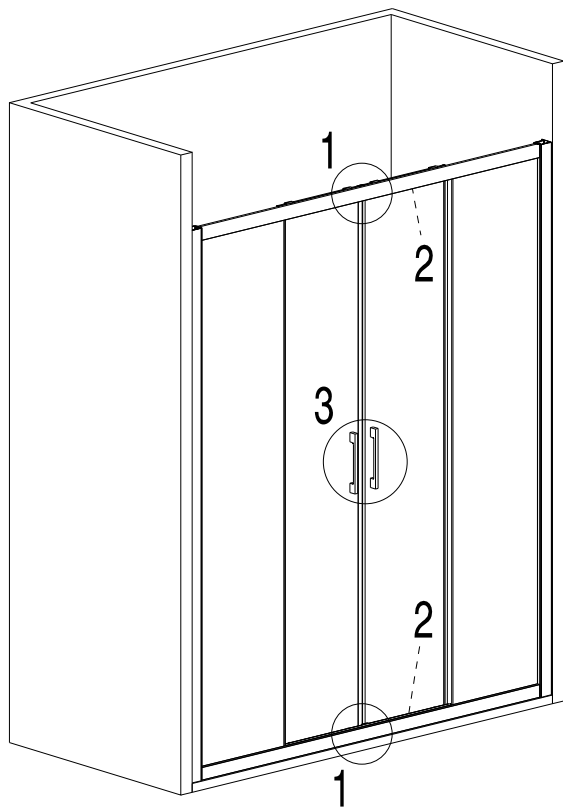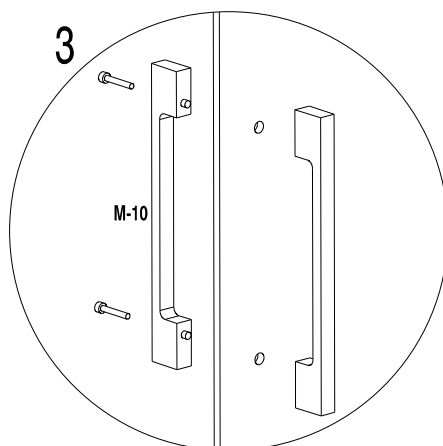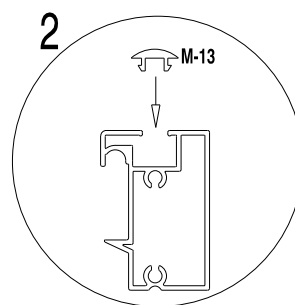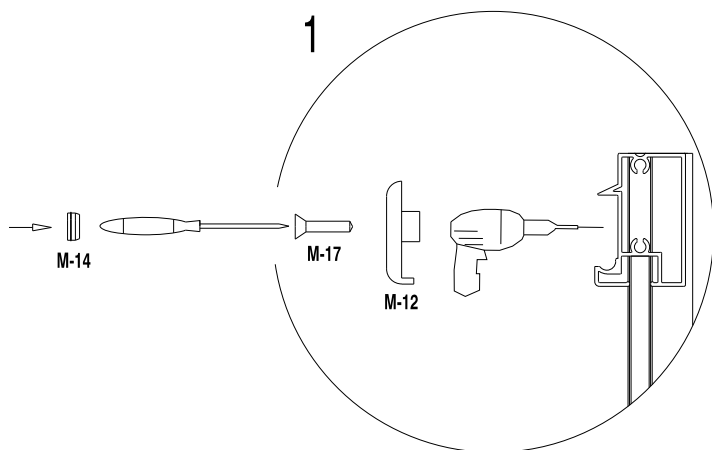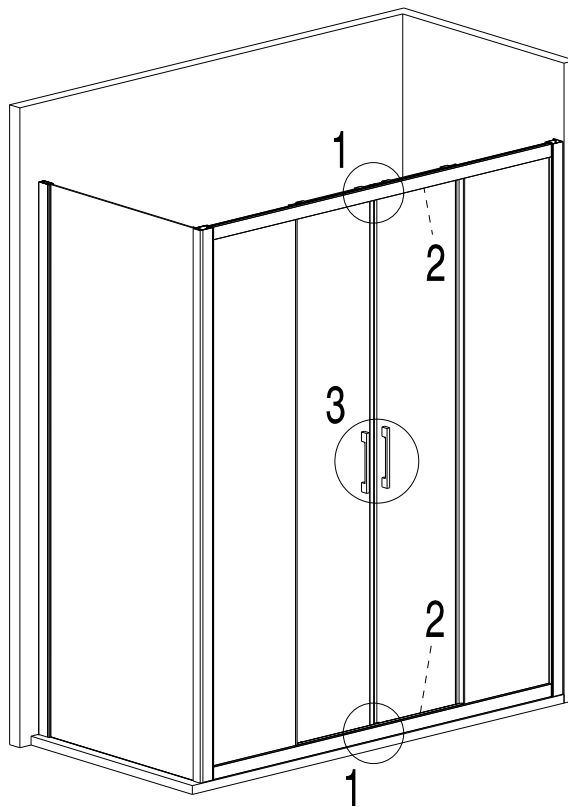A**B**

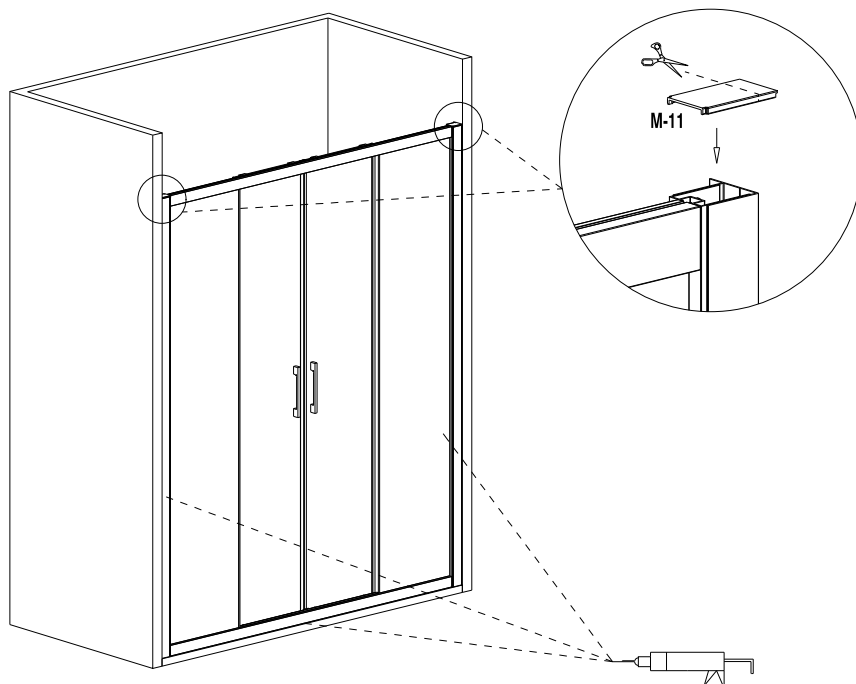A



B

