



# Quick Guide

2K Smart Video Monitor



Sales Email: [service@iegeek.com](mailto:service@iegeek.com)



Validate your warranty within **7** days and get  
**2**-year extended warranty on your  
ieGeek security products.



Email:[service@iegeek.com](mailto:service@iegeek.com)

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Responsible for compliance could void the user's authority to operate this equipment. (Example-use only shielded interface cables when connecting to computer or peripheral devices). Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: This device may not cause harmful interference. This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

The equipment complies with FCC Radiation exposure limits set forth for uncontrolled

environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

FCC ID: 2AG7C-BABYIT (Camera)

FCC ID: 2AG7C-BABYIM (Monitor)

## Technical Support

If you need help, please contact ieGeek before returning your product.

Most questions can be answered through our online support center at <http://www.iegeek.com> or our after-sale mailbox at [service@iegeek.com](mailto:service@iegeek.com).

## Technische Unterstützung

Wenn Sie Hilfe benötigen, kontaktieren Sie bitte ieGeek, bevor Sie Ihr Produkt zurückschicken. Die meisten Fragen können über unser Online-Support-Center unter <http://www.iegeek.com> oder über unsere After-Sale-Mailbox unter [service@iegeek.com](mailto:service@iegeek.com) beantwortet werden.

## Support Technique

Si vous avez besoin d'aide, veuillez contacter ieGeek avant de retourner votre produit. La plupart des questions peuvent être répondues via notre centre de support en ligne à l'adresse <http://www.iegeek.com>, ou la boîte aux lettres après-vente à l'adresse [service@iegeek.com](mailto:service@iegeek.com).

## Assistenza Tecnica

Se avete bisogno di aiuto, le chiediamo gentilmente di contattare ieGeek prima di restituire il prodotto. La maggior parte delle domande può essere risolta tramite il nostro centro di assistenza online all'indirizzo <http://www.iegeek.com> o la casella di posta post-vendita all'indirizzo [service@iegeek.com](mailto:service@iegeek.com).

## Soporte Técnico

Si necesita ayuda, comuníquese con ieGeek antes de devolver su producto. La mayoría de las preguntas se pueden responder a través de nuestro centro de soporte en línea en <http://www.iegeek.com> o el buzón de postventa en [service@iegeek.com](mailto:service@iegeek.com).



ieGeek.com



User Manual

# ENGLISH

<b>01</b>	What's in the Box .....	1
<b>02</b>	Overview .....	2
<b>03</b>	Download 'ieGeek Cam' APP .....	3
<b>04</b>	Connect the Camera to the APP .....	4
<b>05</b>	Connect the Camera to the Monitor .....	5
<b>06</b>	General Settings .....	7
<b>07</b>	FAQ .....	9







# 01/ What's in the Box



1 x Camera



1 x Display




2 x Power  
Adapters



2 x Power Cables



1 x Bracket



3 x Screws、  
Screw Hats






1 x Needle



1 x Quick Guide

EN

## 02/overview

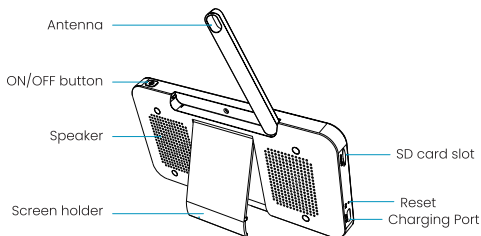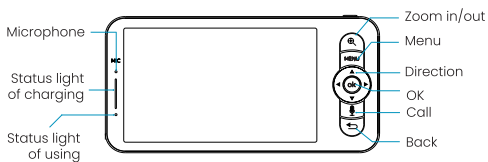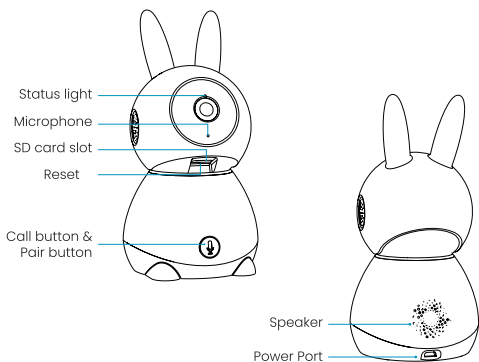

## 03/ Download 'ieGeek Cam' APP

### Method 1:

Download 'ieGeek Cam' APP from APP Store (iOS) or Google Play (Android).

### Method 2:

Scan the QR-Code to download the App.



EN

## 04/ Connect the Camera to the APP

The camera can be connected both to the monitor and the App. Generally, it is connected to the monitor by default.

Follow the steps below to connect the camera to the App:

1. Make sure the Wi-Fi network is a 2.4 GHz network, as the camera doesn't support 5 GHz Wi-Fi.
2. Download the **ieGeek Cam** App on your phone. Register a new account to log in or log in directly.
3. Use the needle to reset the camera for 5 seconds until you hear the 'BOOGU' beep, which means the camera has been reset, after 10-20 seconds, you will hear another beep and the red light of the camera blinks slowly.
4. Follow the step instructions on your smart phone to add the camera, and scan the QR code with your camera.


EN

## 05/Connect the Camera to the Monitor


Turn on the power of the camera and the monitor, and then the camera will automatically connect to the monitor.

**Note:** If the connection to each other is not successful the first time, please use the needle to reset the camera and reconnect the monitor after the second beep of the camera. The connection is distance-limited, so make sure the distance between the camera and the monitor no more than 300m.


### Disconnect the camera from the monitor

1. Press **Menu** button on the display screen, and select  > **Camera**.
2. Long press the **OK** button on the display screen to release the binding.


EN

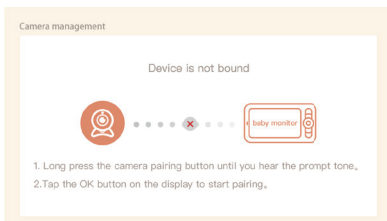

### Reconnect the camera to the monitor

1. Press the **Menu** button on the display screen, and select  > **Camera**.
2. Long press the camera **Pairing button** until you hear the prompt tone.
3. Press the **OK** button on the display screen to start pairing.

**Note:** If you have problems with connection, please feel free to contact [service@iegeek.com](mailto:service@iegeek.com) for one-on-one customer service guidance.

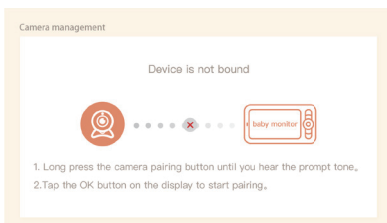

## Connect two cameras to the monitor

Follow the step above to connect the two cameras in turn. Two screens will appear on the monitor.

Press **back** key for camera selection (a small camera icon flashes on the screen).


Press **←** or **→** for camera selection, then press the **OK** key to remotely control the selected camera (split view).

Press the **OK** key again to enter the selected camera in full screen mode.


Press **back** key to reselect the camera.

## 06/General Settings


### Set up volume

1. Press **Menu** button on the display screen, and select  and press **OK** to enter the interface.
2. Press **UP** and **DOWN** direction buttons to adjust volume.

### Set up brightness


1. Press the **Menu** button on the display screen, select  and press **OK** to enter the interface.
2. Press **UP** and **DOWN** direction buttons to adjust brightness.

### Set up time

1. Press the **Menu** button on the display screen, and select  > **Date and Time**.
2. Press Direction buttons to change date, time and time displaying mode.


EN

### Set up language


1. Press the **Menu** button on the display screen, and select  > **Language**.
2. Select the language you need.

### Set up sleep mode


You can set up sleep mode to increase standby time.

1. Press the **Menu** button on the display screen, and select  > **Sleep mode**.
2. Select Sleep mode as 1 minute, 5 minutes, 10 minutes, 30 minutes, 60 minutes or off.

### Setting camera status indicator

1. Press the **Menu** button on the display screen, select  and press the **OK** button to enter the interface.
2. Press the left and right arrow keys to select on or off.

### SD card


1. Press the **Menu** button on the display screen, and select  > **SD card management**. Then you can view the total capacity and remaining capacity of your SD card.
2. (Optional) You can format the SD card as you

needed, but make sure that the important data is backed up.

### Note:

This product does not support hot-swapping. Please insert the SD card before power on or unplug it after power off.

## Upgrade

Make sure your camera is connected to a 2.4 GHz Wi-Fi. You can upgrade your camera when the upgraded alarm appears. Or press **Menu** button on the display screen, and select  > **Device information** to check whether it need to be upgraded.

## Low battery alarm

When the camera is low on battery, the low battery alarm will appear on the display screen. Please charge the display as soon as possible.

EN

## Motion Tracking & Alarm Area

1. Motion Tracking: Open **ieGeek Cam** app, click your device, click the pinion icon in the upper right corner, select Motion Tracking and open it.
2. Alarm Area: Open **ieGeek Cam** app, click your device, click the pinion icon in the upper right corner, select Alarm Management>Motion Detection>Alarm Area.

## Onvif Settings

Open **ieGeek Cam** app, click your device, click the pinion icon in the upper right corner, select Onvif Setting, you need to set password to enable this function.



## 07/FAQ


**Q:** The monitor cannot be previewed properly ?

**A:**

Check whether the monitor has connected to the camera. If not, pair the camera and the monitor firstly.

**Q:** Cannot find the pairing button ?

**A:**

The pairing button is the call button of the camera. Long press the button for 3 seconds, and follow the step instructions of the display. (To enter the pairing interface of the display, press the Menu button on the display screen, and select  > Camera Management.)

**Q:** What if the monitor screen is stuck and it doesn't work while pressing any buttons ?

**A:**

Reset your monitor with the needle, and then long press the power button of your monitor to restart it.

**Q:** Why I can't get the notifications with my cell phone App when I connect the camera to the monitor ?

**A:**

Please confirm that the App has been running on the phone, and the relevant reminder function has been opened; Message notification and authority confirmation in the mobile phone system has been opened.

**Q:** How can I add devices or configure my network ?

**A:**

The camera can be connected to both the monitor and the application. Generally, it connects to the monitor by default.

**Q:** The sound and cry detection function doesn't work.

**A:**

The sound detection interval is 1 minute, after the sound triggers the alarm, the interval is 1 minute again to avoid frequent alarms. The cry detection function can detect most babies crying. This

EN

function uses a sound filtering algorithm, so some crying may not trigger the 'cry detection' function.

### **Please follow the steps below to connect the camera to the application.**

1. Make sure the Wi-Fi network is a 2.4GHz network, as the camera does not support 5GHz Wi-Fi.
2. Download the appropriate application on your phone. Register a new account to sign in or sign in indirectly.
3. Use the needle to reset the camera until the red status light flashes slowly (you must connect the camera to the app within 2 minutes or you must reboot the camera again).
4. Follow the step-by-step instructions on your smartphone to add the screen and scan the QR code with the camera.

**EN**

**Q:** Can I set up motion tracking and alarm zones on the monitor?

**A:**

No, you need to set the motion tracking and alarm area through the **ieGeek Cam** APP.

**Q:** Why does the display make a bee sound ?

**A:**

Because the monitor is too close to the camera, take it away from the camera more than 1 meter.

If you encounter any other problems, please send your order number and problem to [service@iegeek.com](mailto:service@iegeek.com), we will deal with your issue within 24 hours.



