

MXR4500i

INVERTER GENERATOR

3200 Running Watts / 3500 Peak Watts





MXR4500i INVERTER GENERATOR

3200 Running Watts / 3500 Peak Watts

DISCLAIMERS

Thank you for buying our inverter generator.

- The copyright of this specification belongs to our company.
- Any contents of the manual shall not be copied without the written permission of the company.
- The company reserves the right of modification of product and revision of the manual without any notice.
- This book is an integral part of generators and should be incidental to the sale of generators.
- This manual includes instructions for the operation and maintenance of generators. Please read the instruction carefully before using, otherwise the wrong operation may lead to safety trouble or equipment damage. Proper and safe operation will extend the service life of generator.
- The company will continue to innovate and improve the design and quality of products.
- All the contents of this book are in line with the latest products at the time of printing this book.
- If there is any trouble, or do not know about the generator, please consult the after-sales service department of the company.

A DANGER



This manual contains important instructions for operating this inverter generator. For your safety and the safety of others, be sure to read this manual thoroughly before operating the generator. Failure to properly follow all instructions and precautions can cause you and others to be seriously hurt or killed.

SPECIFICATIONS

Model	MXR4500i
Running Watts:	3200W
Peak Watts:	3500W
Rated Voltage:	230V
Rated Frequency:	50Hz
Phase:	Single Phase
Engine Displacement:	223cc
Rated Speed:	3600RPM
Starting Type:	Recoil
Fuel Tank Capacity:	7.5L
Oil Capacity:	0.6L
Total Harmonic Distortion(THD):	≤5%
Fuel Type:	87–93 Octane
Oil Type:	SAE 10W30
Spark Plug:	F7RTC/F7TC
Alternator Type:	Permanent Magnet
Maximum Ambient Temperature:	104°F (40°C)
Net Weight:	26kg
Length:	435(mm)
Width:	375(mm)
Height:	455(mm)
Certifications:	UKCA, EURO V

LIMITED WARRANTY

1. DURATION:

Maxpeedingrods warrants all the inverter generators against defects in workmanship under normal use for a period of 2 years from the date of retail purchase by the original end-user purchaser ("Warranty Period"), and free lifetime technical support and customer service. If a product is used for business, commercial, or industrial applications, the warranty period will be limited to ninety (90) days from the date of purchase.

2. WHO GIVES THIS WARRANTY (WARRANTOR):

Chongqing Guoyu Technology Co., Ltd

3. WHO RECEIVES THIS WARRANTY (PURCHASER):

The original purchaser (other than for purposes of resale) of the MAXPEEDINGRODS inverter.

4. WHAT PRODUCTS ARE COVERED BY THIS WARRANTY:

Any portable generator supplied or manufactured by Warrantor.

5. WHAT IS COVERED UNDER THIS WARRANTY:

Substantial defects on material and workmanship which occur within the duration of the warranty period.

6. WHAT IS NOT COVERED UNDER THIS WARRANTY:

- A. Transportation changes for sending the product to Warrantor or its authorized service representative for warranty service, or for shipping repaired or replacement products back to the customer; these charges must be borne by the customer.
- B. Damages caused by abuse, accident, shipping, misuse, overloading, modification, and the effects of corrosion, erosion and normal wear and tear.
- C. Warranty is voided if the customer fails to install, maintain and operate the product in accordance with the instructions and recommendations set forth in the owner's manual(s), or if the product is used as rental equipment
- D. Pre-delivery service, i.e. assembly, oil or lubricants, and adjustment.
- E. Items or service that are normally required to maintain the product, i.e. lubricants and filters.
- F. Warrantor will not pay for repairs or adjustments to the product, or for any costs or labour, performed without Warrantor's prior authorization.

EXCLUSIONS AND LIMITATIONS:

Warrantor makes no other warranty of any kind, express or implied. Implied warranties, including warranties of merchantability and of fitness for a particular purpose, are hereby disclaimed. This warranty service described above is the exclusive remedy under this warranty; liability for incidental and consequential damages is excluded to the extent permitted by law.

7. RESPONSIBILITIES OF PURCHASER UNDER THIS WARRANTY:

- A. The purchaser must provide dated proof of purchase and must notify Warrantor within the warranty period.
- B. Deliver or ship the serviced generator or component to the nearest Warrantor's authorized service representative. Freight costs, if any, must be borne by the purchaser.

TABLE OF CONTENTS

DISCLAIMERS2
SPECIFICATIONS2
LIMITED WARRANTY3
SAFETY 5
Safety Definitions5
Safety Symbol Definitions 5
General Safety Rules6
Usage Notes7
Special Requirements7
Security Warning Stickers8
UNPACKING 8
COMPONENTS
Control Panel Components10
OPERATION
Before Starting the Inverter11
Grounding the Inverters
Service Environment of the Generator11
Use Generator at High Altitude12
Connect to Household Power Supply12
Generator Capacity12
Add Fuel
Add Engine Oil14
Start the Generator14
Recoil Start14
Stop the Congretor 14

MAIN I AIN	15
Change the Oil	15
Cleaning the Air Filter	16
Replace the Spark Plug	16
Cleaning the Spark Arrestor	17
TRANSPORTING	17
Storage	17
TROUBLE SHOOTING	18
CIRCUIT DIAGRAM	19

SAFETY DEFINITIONS

The words DANGER, WARNING, CAUTION and NOTICE are used throughout this manual to highlight important information. Be certain that the meanings of these alerts are known to all who work on or near the equipment.



This safety alert symbol appears with most safety statements. It means attention, become alert, your safety is involved! Please read and abide by the message that follows the safety alerts symbol.

▲ DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

⚠ WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

A CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

Indicates a situation which can cause damage to the generator, personal property and/or the environment, or cause the equipment to operate improperly.

AWARNING

Connection of the product to a building's electrical system is not applicable.

NOTE: Indicates a procedure, practice or condition that should be followed in order for the generator to function in the manner intended.

SAFETY SYMBOL DEFINITIONS

Symbol	Description		
\triangle	Safety Alert Symbol		
	Asphyxiation Hazard		
	Burn Hazard		
	Burst/Pressure Hazard		
	Don't leave tools in the area		
A	Electrical Shock Hazard		
A	Explosion Hazard		
	Fire Hazard		
	Read Manufacturer's Instructions		

GENERAL SAFETY RULES

▲ DANGER



Never use the inverter in a location that is wet or damp. Never expose the inverter to rain, snow, water spray or standing water while in use. Protect the inverter from all hazardous weather conditions. Moisture or ice can cause a short circuit or other malfunction in the electrical circuit.



Never operate the inverter in an enclosed area. Engine exhaust contains carbon monoxide. Only operate the inverter outside and away from windows, doors and vents.

MWARNING

Voltage produced by the inverter could result in death or serious injury.

- Never operate the inverter in rain or a flood plain unless proper precautions are taken to avoid being subject to rain or a flood.
- · Never use worn or damaged extension cords.
- Always have a licensed electrician connect the inverter to the utility circuit.
- Never touch an operating inverter if the inverter is wet or if you have wet hands.
- Never operate the inverter in highly conductive areas such as around metal decking or steel works.
- · Always use grounded extension cords. Always use three-wire or double-insulated power tools.
- Never touch live terminals or bare wires while the inverter is operating.
- · Be sure the inverter is properly grounded before operating.

MWARNING

Gasoline and gasoline vapors are extremely flammable and explosive under certain conditions.

- · Always refuel the generator outdoors, in a well-ventilated area.
- Never remove the fuel cap with the engine running.
- Never refuel the inverter while the engine is running. Always turn engine off and allow the generator to cool before refueling.
- Only fill fuel tank with gasoline.
- Keep sparks, open flames or other form of ignition (such as match, cigarette, static electric source) away when refueling.



- Never overfill the fuel tank. Leave room for fuel to expand. Overfilling the fuel tank can result in a
 sudden overflow of gasoline and result in spilled gasoline coming in contact with HOT surfaces.
 Spilled fuel can ignite. If fuel is spilled on the inverter, wipe up any spills immediately. Dispose of
 rag properly. Allow area of spilled fuel to dry before operating the inverter.
- · Wear eye protection while refueling.
- · Never use gasoline as a cleaning agent.
- Store any containers containing gasoline in a well-ventilated area, away from any combustibles or source of ignition.
- · Check for fuel leaks after refueling. Never operate the engine if a fuel leak is discovered.

AWARNING



Never operate the inverter if powered items overheat, electrical output drops, there is sparking, flames or smoke coming from the inverter, or if the receptacles are damaged.



Never use the inverter to power medical support equipment.



Always remove any tools or other service equipment used during maintenance from the inverter before operating.

NOTICE

Never modify the inverter.

Never operate the inverter if it vibrates at high levels, if engine speed changes greatly or if the engine misfires often.


Always disconnect tools or appliances from the inverter before starting.



SAFETY

USAGE NOTES

Please read and understand this manual well before operating. Familiarize with the safe operating procedures of generators can help you avoid accidents.

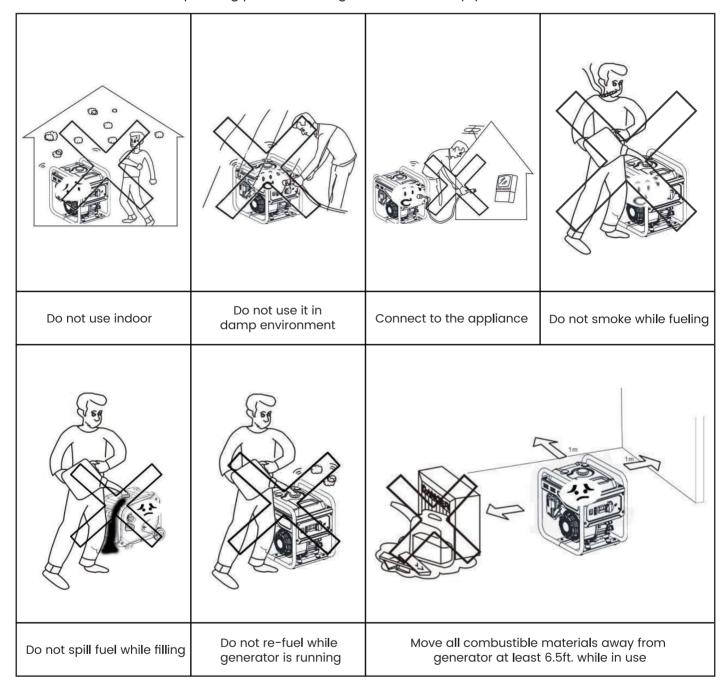

SPECIAL REQUIREMENTS

- Electrical equipment includes unexposed wires and plugs.
- The protecting breaker should be matched with generator. The application parameters and performance should be totally matched if changing.
- Well grounded before using.
- If need extension wire, it must meet the requests as below: 4mm², length no more than 100m.


SAFETY

SECURITY WARNING STICKERS

Pay attention to the security warning stickers before you use.




UNPACKING

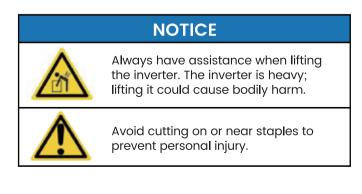


WHAT COMES IN THE BOX

Inverter Generator (1)
Owner Manual (1)
Spark Plug Socket Wrench (1)
Oil Funnel (1)
Screwdriver (1)
UK Plug (2)
Generator Dust Cover (1)
USB Adapter (1)

COMPONENTS

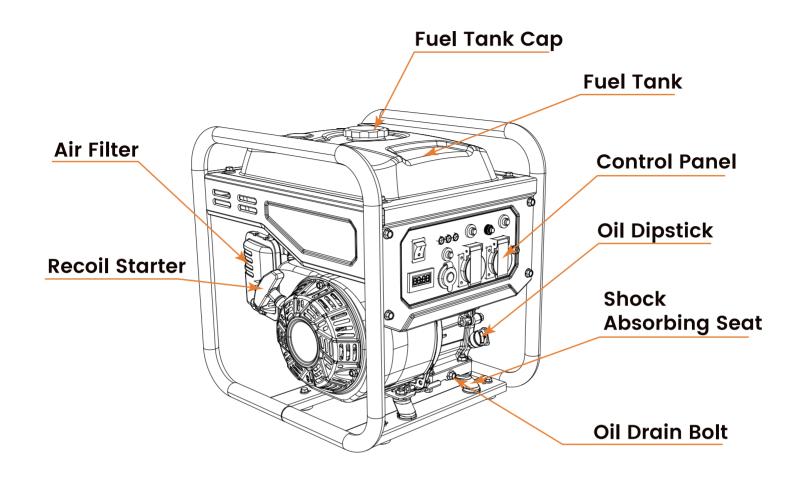

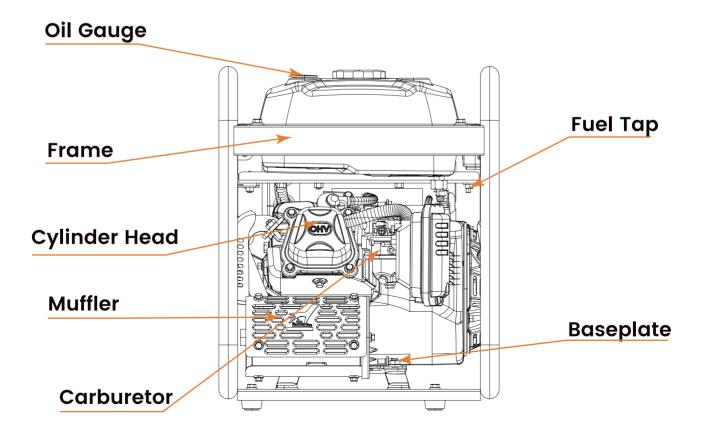

COMPONENTS



CONTROL PANEL COMPONENTS

- (1) Engine Control Switch:
 - Switch to "OFF" to stop the engine. Switch to "ON" before starting engine.
- (2) VFT Data Center:

Displays cumulative run time, single run time, output voltage and frequency.

(3) Output Ready Light:

illuminates when the generator is operating normally. Indicates the generator is producing electrical power at the receptacles.

(4) Overload Light:

Indicates that the generator is overloaded.

(5) Low Oil Light:

Indicates low oil level. When the oil level in the crankcase falls below the safe operating limit, the low oil level indicator will illuminate and the generator will automatically shut off the engine.

(6) DC Breaker:

If the inverter is overloaded. The DC breaker will trip to block current.

(7) DC 12V, 8.3A Outlet:

The outlet is capable of carrying a rated of 8.3 amps.

(8) AC Breaker:

If the inverter is overloaded. The AC breaker will trip to block current.

(9) AC Reset:

The generator inverter will automatically switch OFF, when all AC output to protect the generator if overloaded or if there is a short circuit in a connected appliance. Unplug the devices and reduce the load. Push in the AC reset to reset it.

(10) 230-Volt, 13-Amp Outlet:

The outlet is capable of carrying a maximum of 13 amps.

(11) Ground Terminal:

The ground terminal is used to externally ground the generator.

OPERATION

BEFORE STARTING THE INVERTER



BEFORE STARTING THE INVERTER, REVIEW SAFETY SECTION STARTING.

Location Selection – Before starting the inverter, avoid exhaust and location hazards by verifying:

- · You have selected a location to operate the inverter that is outdoors and well ventilated.
- You have selected a location with a level and solid surface on which to place the inverter
- You have selected a location that is at least 20 feet (6 m) away from any building, other equipment or combustible material.
- If the inverter is located close to a building, make sure it is not located near any windows, doors or vents.

A DANGER

Using a generator indoors

CAN KILL YOU IN MINUTES.

Generator exhaust contains carbon monoxide. This is a poison you cannot see or smell







NEVER use inside a home or garage, **EVEN IF** doors and windows are open





Only use **OUTSIDE** and far away from windows, doors, and vents.

Avoid other generator hazards. READ MANUAL BEFORE USE.

Weather - Never operate your inverter outdoors during rain, snow or any combination of weather conditions that could lead to moisture collecting on. in or around the generator.

Dry Surface - Always operate the inverter on a dry surface free of any moisture.


No Connected Loads - Make sure the inverter has no connected loads before starting it. To ensure there are no connected loads, unplug any electrical extension cords that are plugged into the control panel receptacles.

NOTICE

Starting the inverter with loads already applied to it could result in damage to any appliance being powered off the inverter during the brief start-up period.

GROUNDING THE INVERTERS

It is recommended to ground the generator with a good lead with in insulated leather in order to prevent the generator from being damaged by electric shock or the wrong use of electricity.

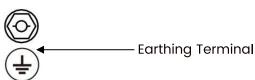





Be sure the inverter is properly connected to earth ground before operating.

▲ WARNING



Always operate the inverter on a level surface. Placing the inverter on non level surfaces can cause the inverter to tip over, causing fuel and oil to spill. Spilled fuel can ignite if it comes in contact with an ignition source such as a very hot surface.

NOTICE

Only operate the inverter on a solid, level surface. Operating the inverter on a surface with loose material such as sand or grass clippings can cause debris to be ingested by the inverter that could:

- Block cooling vents
- Block air intake system

SERVICE ENVIRONMENT OF THE **GENERATOR**

- Applicable temperature: -5°C ~ 40°C.
- Applicable humidity: below 95%.
- Applicable altitude: regions below 1500m. (it shall be used by reducing power in regions above 1000m)

When actual environmental condition is inconsistent with the condition of output power of the generator set:

- 1. Every 5 of increase in ambient temperature will reduce the power of generator by about 2%.
- 2. Every 30% of increase in relative humidity of air will reduce the power of generator by about 1.5%.
- 3. Every 1000 feet rising of ASL will reduce the power the generator by about 4.5%.

OPERATION

USE GENERATOR AT HIGH ALTITUDE


- The density of air at high altitudes is lower than at sea level. Engine power is reduced as the air mass and air-fuel ratio decrease. Output will be reduced approximately 4.5% for every 1000 feet of increased altitude from sea level.
- At high altitudes increased exhaust emissions can also result due to the increased enrichment of the air fuel ratio. Other high altitude issues can include hard starting, increased fuel consumption and spark plug fouling.
- 3. The performance of gasoline engines can be improved by replacing the carburetor with a slightly smaller main injector or by adjusting the adjusting screw. If you often use the generator at an altitude of more than 1000 feet, you can buy special high-altitude parts to replace for use. Otherwise, the load power should be reduced to use the generator.
- 4. Even with the suitable carburetor, a 1000 feet rise in altitude reduces petrol engine power by about 4.5%. Without the replacement of a suitable carburetor, this decline would be even greater.

NOTICE

If a carburetor suitable for high altitude use is fitted to a gasoline engine for low altitude use, too thin mixture will reduce the power output of the gasoline engine, cause overheat or even serious damage.

CONNECT TO HOUSEHOLD POWER SUPPLY

- When the generator is connected to household power source as a backup power supply, the connection shall be carried out by a professional electrician or a person familiar with electricity.
- 2. After connecting the load to the generator, check carefully whether electrical connection is safe and reliable
- 3. Improper electrical connection may cause generator damage, burning or fire.
- 4. Avoid connecting this generator to commercial power outlet.
- 5. When extending the cable, be sure not to exceed its length.
- 6. The appearance of extension cable shall be protected by a layer of tough and elastic rubber cover (IEC25) or other substitutes.

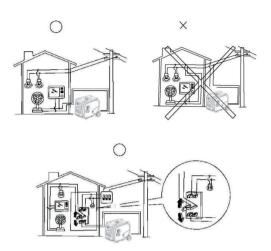

GENERATOR CAPACITY

Make sure before starting the generator.
The total power of the load apparatus (the sum of resistive, capacitive and inductive load) shall not exceed the rated power of the generator.

Make sure the generator can supply enough continuous (running) and surge (starting) watts for the items you will power at the same time. Appliance and power tool manufacturers usually list rating information near the model or serial number.

NOTICE

- Do not overload the generator's capacity. Exceeding the generator's wattage/amperage capacity can damage the generator and/or electrical devices connected to it.
- If more than one load or electrical equipment is connected to the generator set, remember that the one with the highest starting load is connected first, and the one with the lowest starting current is connected last.

TO DETERMINE POWER REQUIREMENTS:

- 1. Select the items you will power at the same time.
- 2. Total the continuous (running) watts of these items. This is the amount of power the generator must produce to keep the items running.
- 3. Estimate how many surge (starting) watts you will need. Surge wattage is the short burst of power needed to start electric motor-driven tools or appliances such as a circular saw or refrigerator. Because not all motors start at the same time, total surge watts can be estimated by adding only the item(s) with the highest additional surge watts to the total rated watts from step.

OPERATION

Example:

Tool or Appliance	Running Watts*	Starting Watt*
TV	500	0
RV Refrigerator	300	750
Radio	200	0
Light (75 Watts)	300	0
Coffee Maker	700	0
	2000Total Running Watts*	750 Highest Starting Watts*

Total Running Watts 2000 Highest Starting Watts + 750

Total Starting Watts Needed 2750

Verify electrical appliances actual wattage.

In general, capacitive and inductive load, especially motor drive device, produce a large starting current when starting up. The following table is for your reference when you connect these electrical appliances to the generator set.

	Wat	tage	Example			
Туре	Start	Rated	Typical Equipment	Device	Start	Rated
Incandescent Lamp Heating Apparatus	xl	xl	Incandescent Lamp TV set	Incandescent Lamp 100w	100VA (W)	100VA (W)
Fluorescent Lamp	x2	x1.5	Fluorescent Lamp	Fluorescent Lamp 40W	80VA (W)	60VA (W)
Electromotor Drive Device	x3-5	x2	Refrigerator Electric Fan	Refrigerator 150W	450- 750VA (W)	300VA (W)

ADD FUEL

DANGER



Filling the fuel tank with gasoline while the inverter is running can cause agsoline to leak and come in contact with hot surfaces that can ignite the gasoline.

⚠ WARNING



Never refuel the inverter while the engine is running.



Always turn the engine off and allow the inverter to cool before refueling.

ACAUTION



Avoid prolonged skin contact with gasoline. Avoid prolonged breathing of gasoline vapors.

Required Gasoline - Only use gasoline that meets the following requirements:

- Unleaded gasoline only
- Gasoline with maximum 10% ethanol added
- Gasoline with an 87 octane rating or higher

Filling the Fuel Tank - Follow the steps below to fill the fuel tank:

Fuel Tank Capacity: 7.5L


- 1. Shut off the inverter.
- 2. Allow the inverter to cool down so all surface areas of the muffler and engine are cool to the touch.
- 3. Move the inverter to a flat surface.
- 4. Clean area around the fuel cap.
- 5. Remove the fuel cap by rotating counterclockwise.

NOTICE

Do not overfill the fuel tank. Spilled fuel will damage some plastic parts.

6. Slowly add gasoline into the fuel tank. Be very careful not to overfill the tank.

Note: The gasoline level should NOT be higher than the red ring.

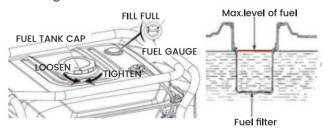

7. Install the fuel cap by rotating clockwise.


^{*}Wattages listed are approximate.

ADD ENGINE OIL

NOTICE

- Engine oil must be added when the inverter is on a flat, level surface, or an inaccurate reading may result. Do not overfill. If the engine is overfilled with oil, it can cause serious engine damage.
- The engine does not contain engine oil as shipped.
 Attempting to start the engine without adding engine oil will permanently damage internal engine components.
- The engine is equipped with a low oil shutdown switch. If the oil level becomes low, the engine may shut down and not start until the oil is filled to the proper level.

The included, recommended oil type for typical use is 10W-30 engine oil. If running the generator in extreme temperatures, refer to the following chart.

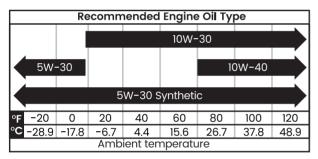

- 1. Please place the generator on a horizontal place.
- 2. Open the oil cap.
- 3. Inject the specified amount of recommended oil and tighten the oil cap. (Oil capacity: 0.6L)

START THE GENERATOR

Before attempting to start the inverter, verify the following:

The engine is filled with engine oil:

The inverter is situated in a proper location;

The inverter is on a dry surface;

All loads are disconnected from the inverter; The inverter is properly grounded;

A DANGER



Never use the inverter in a location that is wet or damp. Never expose the inverter to rain, snow, water spray or standing water while in use. Protect the inverter from all hazardous weather conditions. Moisture or ice can cause a short circuit or other malfunction in the electrical circuit.



Never operate the inverter in an enclosed area. Engine exhaust contains carbon monoxide. Only operate the inverter outside and away from windows, doors and vents.

RECOIL-START

1. Put the fuel tap in the "ON" position.



2. Put the choke valve handle in the "OFF" position.



3. Put the ignition switch in the "ON" position.



- 4. Pull the starter handle up gently until you feel resistance and pull it out quickly.
- 5. When the generator is started, slowly place the choke valve handle in the "ON" position.

NOTICE

Do not close the choke valve when the gasoline engine is started in hot state.

STOP THE GENERATOR

During normal operation, use the following steps to stop your inverter:

- 1. Shut down and disconnect all electrical equipment.
- 2. Turn off the ignition switch of generator.
- 3. Turn off the fuel tap.

A WARNING

If you need to stop the generator in an emergency, put the ignition switch in the "off" position.

MAINTAIN

Good maintenance is the best guarantee to achieve safe, economic and zero-fault operation. It also contributes to the environment protection. To keep the engine in good condition, you must check and maintain it regularly. Please follow the schedule below.

Maintenance Period Item		Every time	First time in 1 month or 20 hours after use	3 month or	Every year or use
	Observation Andrea				
Engine Oil	Check-Add Replace	<u> </u>			
Reduction	Check Oil Level	./	<u> </u>	<u> </u>	
Gearboxl	Replace				
Oil(if any)	Check	./	<u> </u>		
Air Filter	Clean	<u> </u>		./	
Element	Replace				-
Sediment Cup (if any)	Clean				✓
Spark Plug	Clean-Adjust				-
Spark Arrester	Clean		~	>	
Idling (if any)	Check-Adjust				~
Valve Clearance	Check-Adjust				~
FuelTank and Fuel Filter	Clean				~
Fuel Pipe	Check	Every two years (Replace if necessary))
Cylinder Head, Piston	Eliminatecarbon deposition	Displacement <225cc, every 125 hours; Displacement ≥225cc, every 250 hours			

NOTICE

- If you often work under high temperature or high load, you should change the oil every 10 hours.
- If you often work in dusty or harsh environments, the air filter element should be cleaned every 10 hours, and if necessary, the air filter element should be replaced every 25 hours.
- Check the period and date, and maintenance should be carried out on the first arriving machine.
- If the maintenance period expired, the maintenance should be carried out according to the form above as soon as possible.


DANGER


- Please stop the machine before carrying out any maintenance. The engine should be placed in a horizontal position. To prevent the engine from starting, separate the spark plug cap from the spark plug.
- Do not use it indoors or in poorly ventilated places such as tunnels and caves, and make sure that the working area is well ventilated. Exhaust gas from engine contains toxic gas carbon monoxide, which can cause shock, loss of consciousness and even death when inhaled.

CHANGE THE OIL

The oil can be discharged quickly and cleanly after starting the gasoline engine.

- 1. Always operate or maintain the generator on a flat surface.
- 2. Stop the engine.
- 3. Let engine sit and cool for several minutes.
- 4. Remove the oil gauge. Then remove the oil drain bolt.
- 5. Allow oil to completely drain.
- 6. Install the oil drain bolt and tighten it.
- 7. Fill the oil and check the oil level.
- 8. Install the oil gauge.

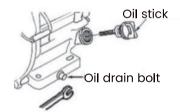

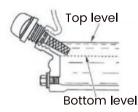

NOTICE

- Long-term and frequent skin contact with engine oil may lead to skin cancer. Although this is not inevitable, it is recommended to wash the skin exposed to engine oil immediately and thoroughly with soap and water.
- From the perspective of environmental protection, please properly dispose of the used engine oil after use. We strongly recommend that you put the waste engine oil in a sealed container and send it to the local service station or waste oil recovery center.
- Remember: do not throw it into a garbage or dump it on the ground or in a ditch.

CLEANING THE AIR FILTER

MARNING


- Never use gasoline or other flammable solvents to clean the air filter. Use only household detergent soap to clean the air filter.
- Dirty air filter will affect air flowing into carburetor.
 To prevent carburetor failure, please regularly maintain the air filter. If used in dusty environment, it should be maintained more frequently.

NOTICE

It is forbidden to start the generator without installing an air filter, otherwise the gasoline engine will be worn-out quickly.

The air filter must be cleaned after every 50 hours of use or 3 months (frequency should be increased if inverter is operated in a dusty environment).

- 1. Turn off the inverter and let it cool for several minutes if running.
- 2. Unscrew the bolts on air filter cover.
- 3. Remove the foam element from the air cleaner housing.

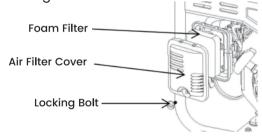

4. Wash the foam air filter element by submerging the element in a solution of household detergent soap and warm water. Slowly squeeze the foam to thoroughly clean.

NOTICE

NEVER twist or tear the foam air filter element during cleaning or drying. Only apply slow but firm squeezing action.

5. Rinse in clean water by submerging the air filter element in fresh water and applying a slow squeezing action.



NOTICE

Never dispose of soap cleaning solution used to clean the air filter by dumping the solution into a sewer, on the ground, or into ground water or waterways. Always be environmentally responsible. Follow the guidelines or other governmental agencies for proper disposal of hazardous materials. Consult local authorities or reclamation facility.

- 6. Dispose of used soap cleaning solution properly.
- 7. Dry the air filter element by again applying a slow firm squeezing action.
- 8. Return the air filter element to its position in the air cleaner housing.
- 9. Install the air cleaner cover, making sure the tabs lock into place.

REPLACE THE SPARK PLUG


Please replace the spark plug in accordance with the original specification: F7TC/F7RTC

- 1. Stop the inverter and let it cool for several minutes if running.
- 2. Move the inverter to a flat, level surface.
- 3. Detach the cover of spark plug.
- 4. Remove the spark plug boot by firmly pulling the plastic spark plug boot handle directly away from the engine.
- 5. Using the spark plug socket wrench provided, remove the spark plug from the cylinder head.

NOTICE

Never apply any side load or move the spark plug laterally when removing the spark plug. Applying a side load or moving the spark plug laterally may crack and damage the spark plug boot.

- 6. Place a clean rag over the opening created by the removal of the spark plug to make sure no dirt can get into the combustion chamber.
- 7. Measure spark plug with thickness gauge, and bend the side electrodes to adjust the gap. The gap should be guaranteed to be 0.70-0.80mm.

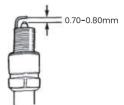

Please use the spark plug with proper calorific value.

- 8. Inspect whether the spark plug gasket is in good condition.
- 9. Install the spark plug, and tighten it with the socket wrench, press the spark plug ring and cover the spark plug cap tightly.

MAINTAIN

CLEANING THE SPARK ARRESTOR

Check and clean the spark arrestor after every 50 hours of use or 3 months.

- 1. Stop the inverter and let it cool for several minutes if running.
- 2. Move the inverter to a flat, level surface.
- 3. Loosen the clamp holding the spark arrester onto the muffler with a screw driver.
- 4. Slide the spark arrester band clamp off the spark arrester screen.
- 5. Pull the spark arrester screen off the muffler exhaust pipe.
- 6. Using a wire brush, remove any dirt and debris that may have collected on the spark arrester screen.
- 7. If the spark arrester screen shows signs of wear (rips, tears or large openings in the screen), replace the spark arrester screen.
- 8. Install the spark arrester components in the following order:
 - a. Place spark arrester screen over the muffler exhaust pipe. Push on the screen until it fully bottoms out.
 - b. Place the spark arrester band clamp over the screen and tighten with a screwdriver.

TRANSPORTING

- Allow the generator to cool a minimum of 30 minutes before transporting.
- Replace all protective covers on the generator control panel.
- Only use the generator's fixed handle(s) to lift the unit or attach any load restraints such as ropes or tie-down straps. Do not attempt to lift or secure the generator by holding onto any of its other components.
- Keep the unit level during transport to minimize the possibility of fuel leakage or, if possible, drain the fuel or run the engine until the fuel tank is empty before transport.

STORAGE

⚠WARNING

In order to avoid burning or fire caused by contact with high-temperature parts of the generator, the generator must be cooled before being packaged and stored.

Please ensure the storage area is clean and dry if long-term storage is needed.

1. Clean the fuel in the fuel tank. Clean the fuel filter screen, O-ring seal and settling cup before installing them. Unscrew the carburetor oil drain bolt, clean the fuel in the carburetor, and then install and tighten the carburetor oil drain bolt.

⚠WARNING

Usually, the engine oil is combustible and explosive. Please drain the oil under well ventilated conditions after shutdown. Fireworks are strictly prohibited during oil discharge.

NOTICE

Gasoline stored for as little as 60 days can go bad, causing gum, varnish and corrosive buildup in fuel lines, fuel passages and the engine. This corrosive buildup restricts the flow of fuel, preventing an engine from starting after a prolonged storage period.

- 2. Unscrew the oil level gauge and the oil drain bolt on the crankcase, and drain the oil in the crankcase. Then tighten the oil drain bolt, fill new oil to the upper limit of oil, and then install the oil level gauge.
- 3. Remove the spark plug and pour a tablespoon of clean engine oil into the combustion chamber. Rotate the crankshaft several times to distribute the oil everywhere. Then install the spark plug.
- 4. Gently pull the starting handle until resistance is felt, so that the intake and exhaust valves are closed.
- 5. Place the generator set in a clean and dry area.

TROUBLE SHOOTING


MARNING



Before attempting to service or troubleshoot the generator, the owner or service technician must first read the owner's manual and understand and follow all safety instructions. Failure to follow all instructions may result in conditions that can lead to voiding certification or product warranty, serious personal injury, property damage or even death.

PROBLEM	POTENTIAL CAUSE	SOLUTION		
	1. Reset breaker is tripped.	1. Reset the reset breaker.		
Engine is running, but no electrical output.	2. The power cord's plug connector is not fully engaged in the inverter's outlet.	2. Verily plug connector is firmly engaged in the inverter's outlet.		
od.pat.	3. Faulty or defective power cord.	3. Replace power cord.		
	4. Faulty or defective electrical appliance.	4. Try connecting a known good appliance to verify the inverter is producing electrical power.		
	1. Inverter is out of gasoline.	1. Add gasoline to the inverter.		
	2. Fuel flow is obstructed.	2. Inspect and clean fuel delivery passages.		
	3. Dirty air filter.	3. Check and clean the air filter.		
Engine will not start or remain running while trying to start.	4. Low oil level shutdown switch is preventing the unit from starting.	4. Check oil level and add oil if necessary.		
	5. Spark plug boot is not fully engaged with the spark plug tip.	5. Firmly push down on the spark plug boot to ensure the boot is fully engaged.		
	6. Spark plug is faulty.	6. Remove and check the spark plug. Replace if faulty.		
	7. Dirty/plugged spark arrester.	7. Check and clean the spark arrester.		
	8. Stale fuel.	8. Drain fuel and replace with fresh fuel.		
	1. Inverter is out of fuel.	1. Check fuel level. Add fuel if necessary.		
Inverter suddenly stops running.	2. The low oil shut down switch has stopped the engine.	2. Check oil level and add oil if necessary.		
	3. Too much load	3. Restart the inverter and reduce the load.		
	1. Choke was left in the OFF position.	1. Move choke to the ON position.		
Engine runs erratic; does not hold a	2. Dirty air filter.	2. Clean the air filter.		
steady RPM.	3. Applied loads maybe cycling on and off.	3. As applied loads cycle, changes in engine speed may occur; this is a normal condition.		

CIRCUIT DIAGRAM

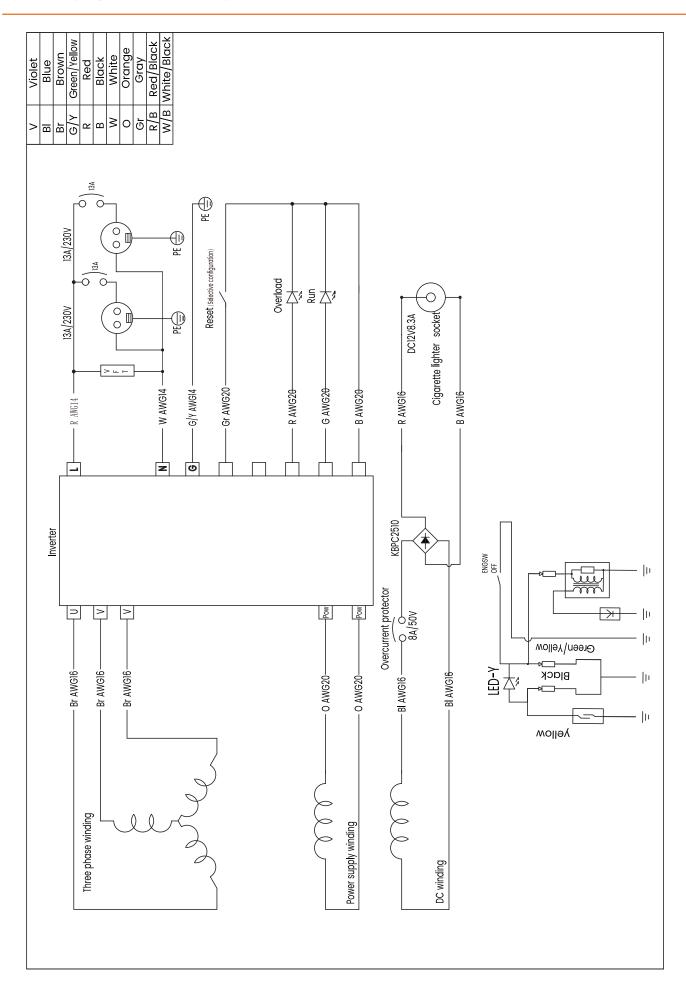

UK DECLARATION OF CONFORMITY

The following products have been tested by us with the listed standards and found in compliance with The Supply of Machinery (Safety) Regulations 2008 (SI 2008/1597), The Electromagnetic Compatibility Regulations 2016 (SI 2016 No. 1091 and amendments.)

Manufacture's Name: Chongqing Guoyu Technology Co., Ltd

Manufacturer's Address: Tuchang Town, Hechuan District, Chongqing, China

Product: Inverter generator

Type/Model: MXR4500i

The statement is based on a single evaluation of above-mentioned products. All products in series production are in conformity with the product sample detailed in this report. We Chongqing Guoyu Technology Co., Ltd hereby declare that this product(s) described complies with the relevant basic safety requirements of the following UK regulations:

Applied UK Regulations: SI 2008/1597 - The Supply of Machinery (Safety) Regulations 2008

SI 2016 No. 1091 and amendments -The Electromagnetic

Compatibility Regulations 2016

Applied Standards: BS EN ISO 8528-13:2016

BS EN 8528-8:2016

BS EN 55012:2007+A1 2009

Place of issue: Chongqing
Date of issue: 20/10/2022
Product Technical Director: Tang Guolan

Tang Guolan







UK REP

APEX CE SPECIALISTS LIMITED

89 Princess Street, Manchester, M1 4HT, UK